


EWM-S-AA

ANALOGUE POSITIONING CARD FOR STROKE CONTROL IN CLOSED LOOP SYSTEMS WITH DIGITAL SET-UP SERIES 10

**RAIL MOUNTING TYPE:
DIN EN 50022**


OPERATING PRINCIPLE

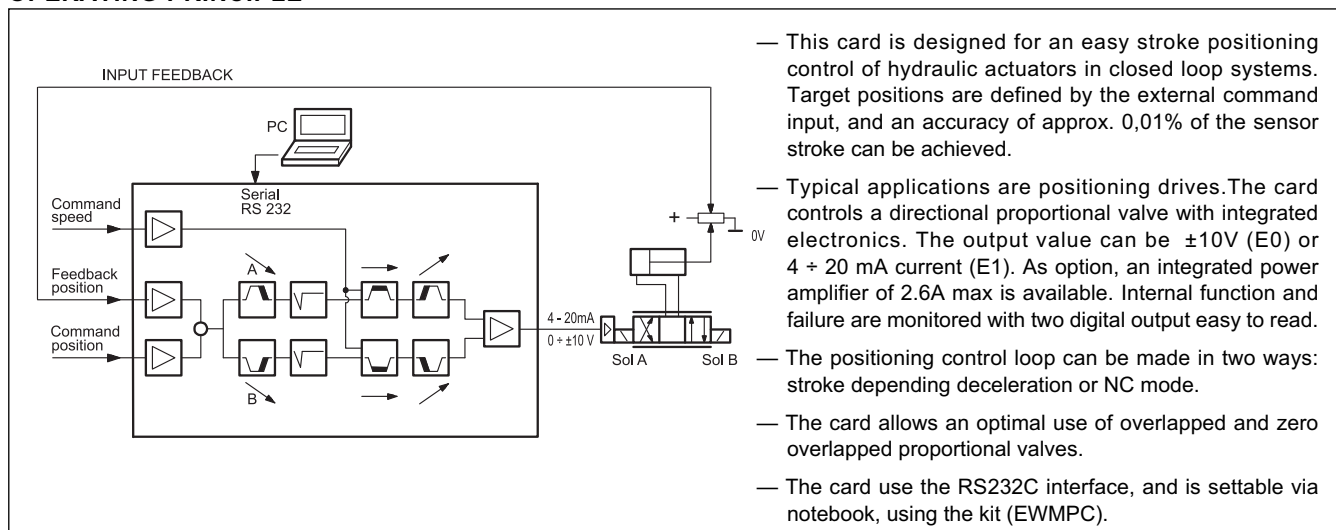

TECHNICAL CHARACTERISTICS

Power supply	V DC	12 \pm 30 ripple included - external fuse 1,0 A (5 A for M2 version)
Current consumption: - E0 and E1 version - M2 version	mA	400 + sensor power consumption depending from solenoid current
Command value	V mA	0 \div 10 ($R_I = 33$ k Ω) 4 \div 20 ($R_I = 250$ Ω)
Command speed	V	0 \div 10 ($R_I = 90$ k Ω)
Feedback value:	V mA	0 \div 10 ($R_I = 33$ k Ω) 4 \div 20 ($R_I = 250$ k Ω)
Output value: - E0 version - E1 version - M2 version	V mA A	± 10 (max load 5 mA) 4 \div 20 (max load 390 Ω) 1,0 \div 2,6
Position accuracy	%	0,01
Interface		RS 232 C
Electromagnetic compatibility (EMC):		Emissions EN 61000-6-2:8/2002 Immunity EN 61000-6-3:8/2005
Housing material		thermoplastic polyamide PA6.6 -combustibility class V0 (UL94)
Housing dimensions	mm	120(d) x 99(h) x 23(w)
Connector		4x4 poles screw terminals - PE direct via DIN rail
Operating temperature range	°C	-20 / +60
Protection degree		IP 20


1 - IDENTIFICATION CODE

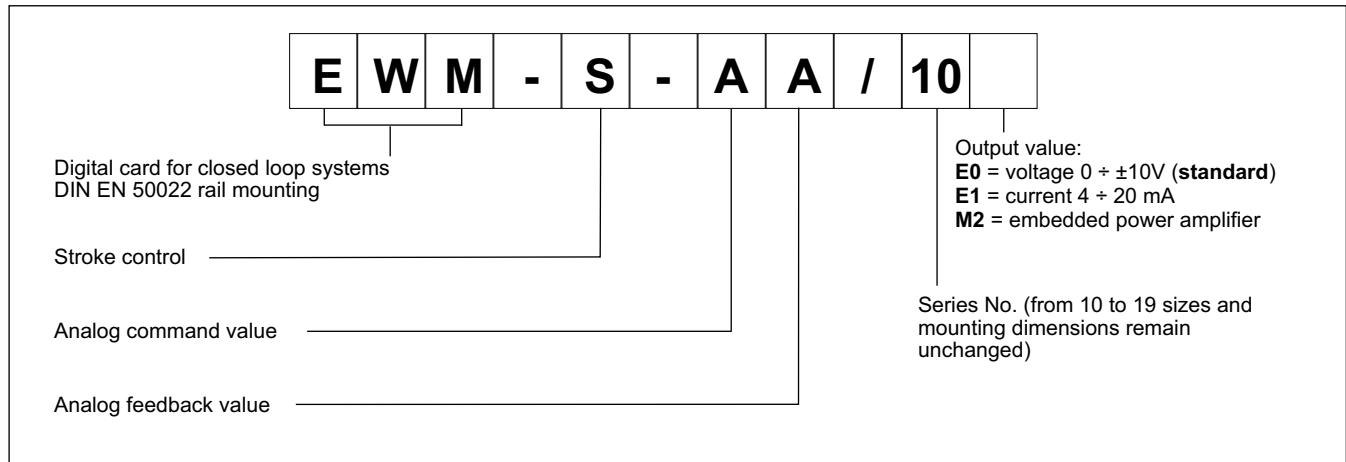

This module supports the simple point-to-point positioning with hydraulic drives. Two operating mode can be selected: stroke depending deceleration, that means the control gain will be adjusted with the parameters D:A and D:B , and NC mode, where the position value is generated from the following error.

The deceleration characteristics can be defined with the parameter CTRL linear (LIN) or nearly square root (SQRT1). By use of standard proportional valves, SQRT1 has to be chosen normally.

The positioning accuracy will almost be limited by the resolution of the transducer, and by the right size of the hydraulic valve. Therefore, the correct valve selection is the most important point. Additionally, two contradictory requirements (short positioning time and high accuracy) have to be considered in the system design.

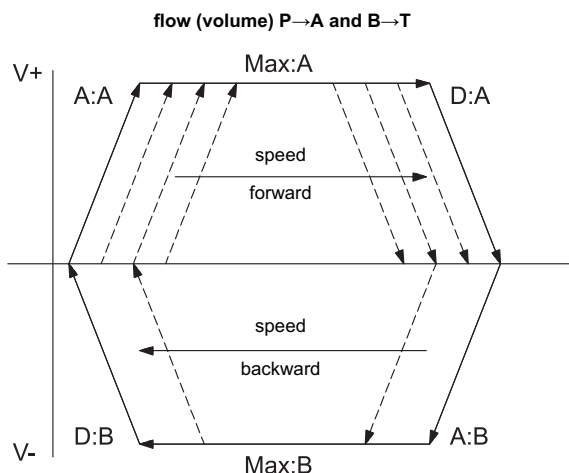

The actuator position is measured by an analog transducer and compared with a specified target position. The target position is adjusted with an external potentiometer or preset by an analog input from an external controller (PLC). It's possible to define the axis speed by the input speed.

2 - FUNCTIONAL SPECIFICATIONS

2.1 - Power supply

This card is designed for 12 to 30 VDC (typical 24 V) of a power supply. This power supply must correspond to the actual EMC standards.

All inductivities at the same power supply (relays, valves) must be provided with an over voltage protection (varistors, free-wheel diodes).

It is recommended to use a regulated power supply (linear or

switching mode) for the card supply and the sensors.

NOTE: in the type M2 the value of the power supply voltage on the card must not be lower than the rated working voltage of the solenoid to be controlled.

2.2 - Electrical protections

All inputs and outputs are protected against overvoltage and have filters.

2.3 - Digital Input

The card accepts digital input. The digital input must have a voltage from 12 to 24 V with current $< 0,1A$. See the block diagram at paragraph 8 for the electric connections.

2.4 - Command value

The card accepts analogue input. The command value must be 0 ± 10 V or 4 ± 20 mA.

2.5 - Command speed

The card accepts analog input. The command speed must be 0 ± 10 V ($R_i = 90$ k Ω)

2.6 - Input feedback values

The card accepts analogue feedback input. The feedback value can be 0 ± 10 V or 4 ± 20 mA.

2.7 - Output values

The card is designed for two type of output values, voltage $\pm 10V$ (E0 version) or current 4 ± 20 mA (E1 version); standard output value is E0 type. The embedded power stage is available on version M2 and the power stage is adjustable via software, from 1 to 2,6 A.

2.8 - Digital Output

Two digital output are available, INPOS and READY, and their signals are displayed from the LEDS.

3 - LED FUNCTIONS

There are two LED on the card: GREEN and YELLOW.

GREEN: Shows if the card is ready.

ON - The card is supplied

OFF - No power supply

FLASHING - Failure detected (internal or 4... 20 mA).

Only if SENS = ON

YELLOW: Is the signal of the control error monitoring.

ON - No control error

OFF - Error detected, depending of a parameter error.



4 - ADJUSTMENTS

On the EWM card family, the adjustment setting is possible only via software. Connecting the card to the PC, the software automatically recognises the card model, and shows a table (see example on this page) with all the available parameters, with their commands, the default setting, the measuring unit and an explanation of the command and its uses.

The parameters changes depending on the card model, and they are fully described in the *Overhaul manual*.

5 - INSTALLATION

The card is designed for rail mounting type DIN EN 50022.

The wiring connections are on the terminal strip located on the bottom of the electronic control unit. It is recommended to use cable

sections of 0.75 mm², up to 20 m length and of 1.00 mm² up to 40m length, for power supply and, for M2 version, for solenoid connections. For other connections it is recommended to use cables with a screened sheath connected to earth only on the card side.

NOTE 1

To observe EMC requirements it is important that the control unit electrical connection is in strict compliance with the wiring diagram.

As a general rule, the valve and the electronic unit connection wires must be kept as far as possible from interference sources (e.g. power wires, electric motors, inverters and electrical switches).

In environments that are critical from the electromagnetic interference point of view, a complete protection of the connection wires can be requested.

EXAMPLE OF PARAMETERS TABLE

Commands	Parameter	Defaults	Units	Description
ain:i a b c x	i= W X a= -10000... 10000 b= -10000... 10000 c= -10000... 10000 x= V C	: 10000 : 10000 : 0 : V	- - 0,01% -	Analogue output selection. W and X for the inputs and V = voltage, C = current. With the parameters a , b and c the inputs can be scaled (output = a / b * (input - c)). Because of the programming of the x -value (x = C) the corresponding input will be switched over to current automatically.
a:i x	i= A B x= 1... 2000	:A 100 :B 100	ms ms	Acceleration time depending on direction. A indicates analogue output 15 and B indicates analogue output 16. Normally A = flow p-A, B-T and B = flow P-B, A-T.
d:i x	i= A B x= 10... 10000	:A 2500 :B 2500	0,01% 0,01%	Deceleration stroke depending on direction. The loop gain is calculated by the deceleration stroke. The shorter the higher. In case of instabilities longer deceleration stroke will be sufficient.
ctrl x	x= lin sqrt1 sqrt2	sqrt1	-	Selection of the control function: lin = standard linear P-control, sqrt1 = progressive time optimized deceleration curve sqrt2 = sqrt1 with a higher gain in position
velo x	x= 1000... 10000	10000	0,01%	Internal limitation of the velocity. This limitation is active when command vs = off.
vs x	x= ext int	int	-	Activates the external velocity limitation with the parameter EXT.
vramp x	x= 1... 2000	50	ms	Ramp time for velocity input.
vmode x	x= on off	off	-	Activation of the NC-generator. The command position is generated by a velocity profile (internal or external preset of v). The axis drives more or less speed controlled.
th x	x= 100... 60000	5000	ms	Stroke time for 100% velocity and 100% nominal sensor stroke.
hand:i x	i= A B x= -10000... 10000	:A 3300 :B -3300	0,01% 0,01%	Degree of output signal in manual mode
min:i x	i= A B x= 0... 5000	:A 0 :B 0	0,01% 0,01%	Deadband compensation of positive overlapped proportional valves. Good adjustment will increase positioning accuracy.
max:i x	i= A B x= 5000... 10000	:A 10000 :B 10000	0,01% 0,01%	Maximum output range for adapting control range to maximum flow range.
trigger x	x= 0... 2000	200	0,01%	Point to activate the deadband compensation (min). Also useful for reduced sensitivity in position with control valves.
inpos x	x= 2... 2000	200	0,01%	Range for the InPos signal (status output).
offset x	x= -2000... 2000	0	0,01%	The offset will be added to the command value.
pol x	x= + -	+	-	For changing the output polarity. All A and B adjustments depend on the output polarity. The right polarity should be defined first.
sens x	x= on off	on	-	Activation of the sensor and internal failure monitoring.
save	-	-	-	Storing the programmed parameter in E ² PROM.
loadback	-	-	-	Reloading the parameter from E ² PROM in working RAM
help	-	-	-	Help to the commands, for terminal programs only
para	-	-	-	Parameter list with programmed data, for terminal programs only
din	-	-	-	Status of the digital inputs.
w, x, xw, u, v	-	-	-	Actual signals: command value, actual value, process data, control divergence and reference value.
default	-	-	-	Preset values will be set.

6 - SOFTWARE KIT EWMPC/10 (code 3898401001)


The software kit comprising a USB cable (2.70 mt lenght) to connect the card to a PC or notebook and the software.

During the identification all information are read out of the module and the table input will be automatically generated.

Some functions like baud rate setting, remote control mode, saving of process data for later evaluation are used to speed up the installation procedure.

The software is compliant with Microsoft XP® operating systems.

7 - WIRING DIAGRAM

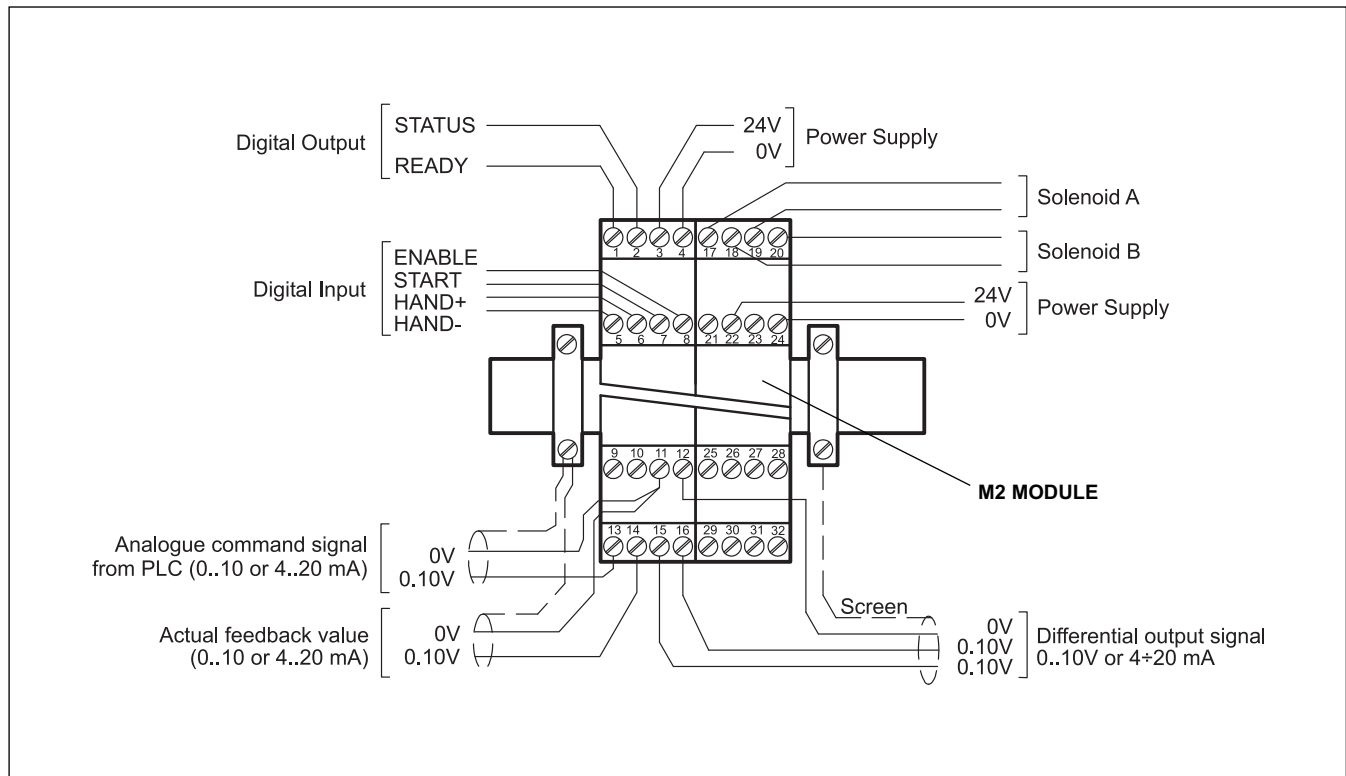

DIGITAL INPUT AND OUTPUT

- PIN 1** READY output.
General operationality, ENABLE is active and there is no sensor error (by use of 4÷20 mA sensors). This output corresponds with the green LED.
- PIN 2** STATUS output.
Monitoring of the control error (INPOS). Depending on the INPOS command, the status output will be deactivated, if the position difference is greater then the adjusted window.
The output is only active if START = ON.
- PIN 5** HAND- input
Hand mode (START = OFF), driving with the programmed velocity. After deactivation the actual value is taken over as command position.
- PIN 6** HAND+ input:
Hand mode (START = OFF), driving with the programmed velocity. After deactivation the actual value is taken over as command position.
- PIN 7** START input:
The positioning controller is active; the external analogue command position is taken over as command value. If the input is switched off during movement, the command position is set to the actual position plus a defined emergency deceleration stroke

- PIN 8** ENABLE input:
This digital input signal initializes the application. The analogue output is active and the READY signal indicates that all components are working correctly. Target position is set to actual position and the drive is closed loop controlled.


ANALOGUE INPUT

- PIN 9/10** External command speed (V),
range 0 ÷ 100 % corresponds to 0 ÷ 10 V
- PIN 13** Command position (W),
range 0 ÷ 100% corresponds to 0 ÷ 10V or 4 ÷ 20 mA
- PIN 14** Actual (feedback) value (X),
range 0 ÷ 100% corresponds to 0 ÷ 10V or 4 ÷ 20 mA


ANALOGUE OUTPUT

- PIN 15/16** Differential output (U)
± 100% corresponds to ± 10V differential voltage, optionally (E1 version) current output ±100% corresponds to 4 ÷ 20 mA (PIN 15 to PIN 12)


8 - CARD BLOCK DIAGRAM

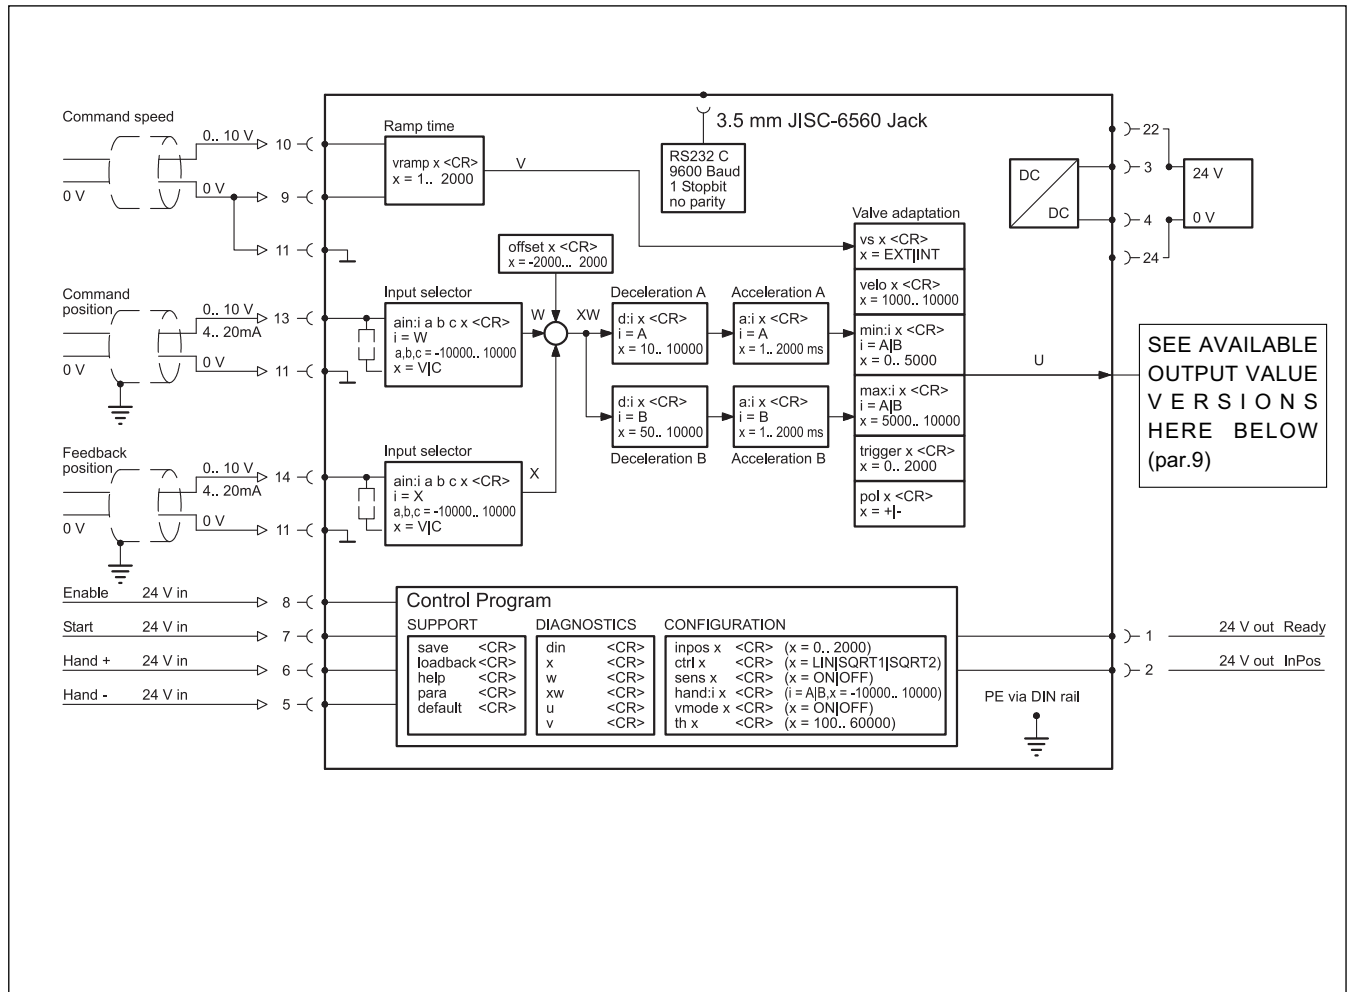

9 - AVAILABLE OUTPUT VALUE VERSIONS

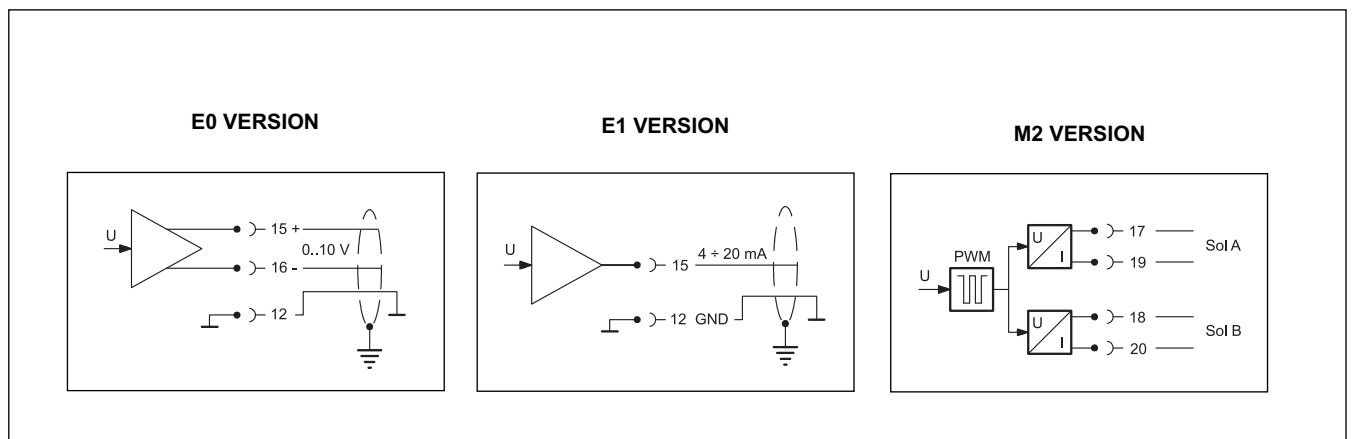

10 - OVERALL AND MOUNTING DIMENSIONS

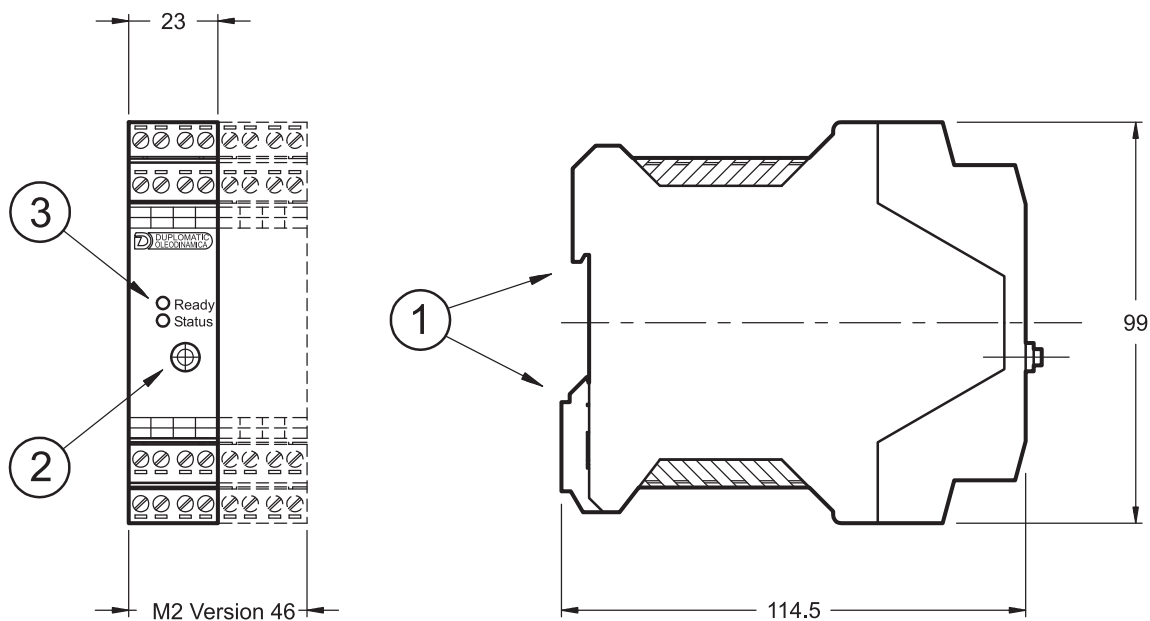

power stage module -
present on M2 version only .

1	DIN EN 50022 rail type fastening
2	Plug for PC cable connection
3	LED for output signals