

REFERENCE MANUAL



POWER FACTOR REGULATOR

BLR-CX-R / BLR-CX-T

1	INSTALLATION AND CONNECTION	4
1.1	Wiring diagram	5
1.2	Connection data	6
2	COMMISSIONING	7
3	DISPLAY.....	8
4	OPERATION.....	10
4.1	Keys	10
4.2	Input of numerical values.....	10
5	MENU BLR-CX.....	11
5.1	Measurement menu.....	11
5.2	Info (Step database)	12
5.3	Manual (step switching manual).....	13
5.4	Setup (Quick start menu)	14
6	EXPERT MENU BLR-CX.....	15
6.1	100 Quick start menu	16
6.2	200 Measurement settings	18
6.3	300 Setup Control System	20
6.4	400 Setup Step Database	24
6.5	500 Setup Alarm	26
6.6	600 Resetmenu	28
7	TECHNIAL DATA.....	30
8	TROUBLESHOOTING	31
9	APPLICATIONS	33
9.1	Fan Control	33
9.2	Switching on COS φ 2 via digital input.....	34
9.3	Problems with the Step recognition.	35
9.4	Transformer compensation.....	36
9.5	Reset defective steps respectively add additional steps	37
10	CUSTOMER SETTINGS.....	38
11	APPENDIX	39
11.1	Settings Phase-angle	39
11.2	Connections for mixed measurement.....	39

Document history

Date	Name	Revision	Comment
22.07.09	Le	01	initial document release
25.01.10	Le	02	Examples added, changes to software version 1.04
16.06.10	Le	03	Add features of software version 1.06
09.02.11	Le	04	Add features of software version 1.08
14.06.16	RH	05	Content correction
13.03.17	RH	06	Content correction
17.07.18	SO	07	Content correction

ATTENTION!

The installation of the BLR-CX must be performed by technically qualified persons only, since improper use can cause an electric shock.

The appropriate safety regulations in the country of installation must be strictly adhered to.

Equipment with damaged casing or terminals must not be used and must be disconnected from the mains supply immediately.

1 INSTALLATION AND CONNECTION


- 1) Check that the mains voltage and CT current input are suitable for the relay!
- 2) Disconnect panel from mains voltage, and check that the voltage is off
- 3) Ensure CT short-circuited or not in operation.

An open circuit CT produces a high voltage, which endangers people and equipment. It will also damage the CT and affect its accuracy.


- 4) Disconnect and remove any previous pfc-relay.
- 5) Mount BLR-CX in the control panel with the two mounting clips. (cutout 138x138mm)
- 6) Connect the earth protection cable to 'PE' on BLR-CX metal case.
- 7) Connect BLR-CX according to wiring diagram.(CT/P1 towards incoming feeder, CT/P2 towards load!)
- 8) Remove short-circuit from CT
- 9) Connect mains voltage to panel.
- 10) If relay has been correctly connected and the mains voltage and CT output comply with the ratings and settings of BLR-CX, the LCD will show AUTO and the control function will start automatically!

1.1 Wiring diagram

BLR-CX-R

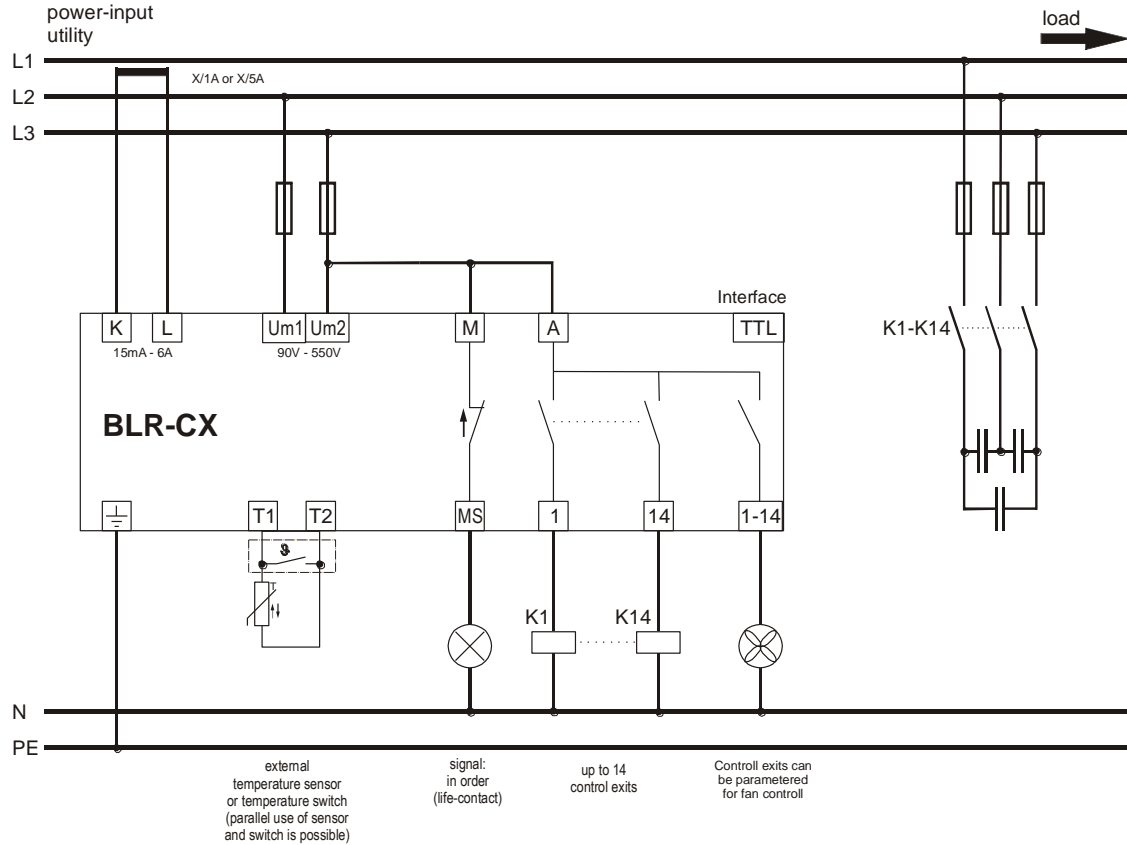

BLR-CX-T

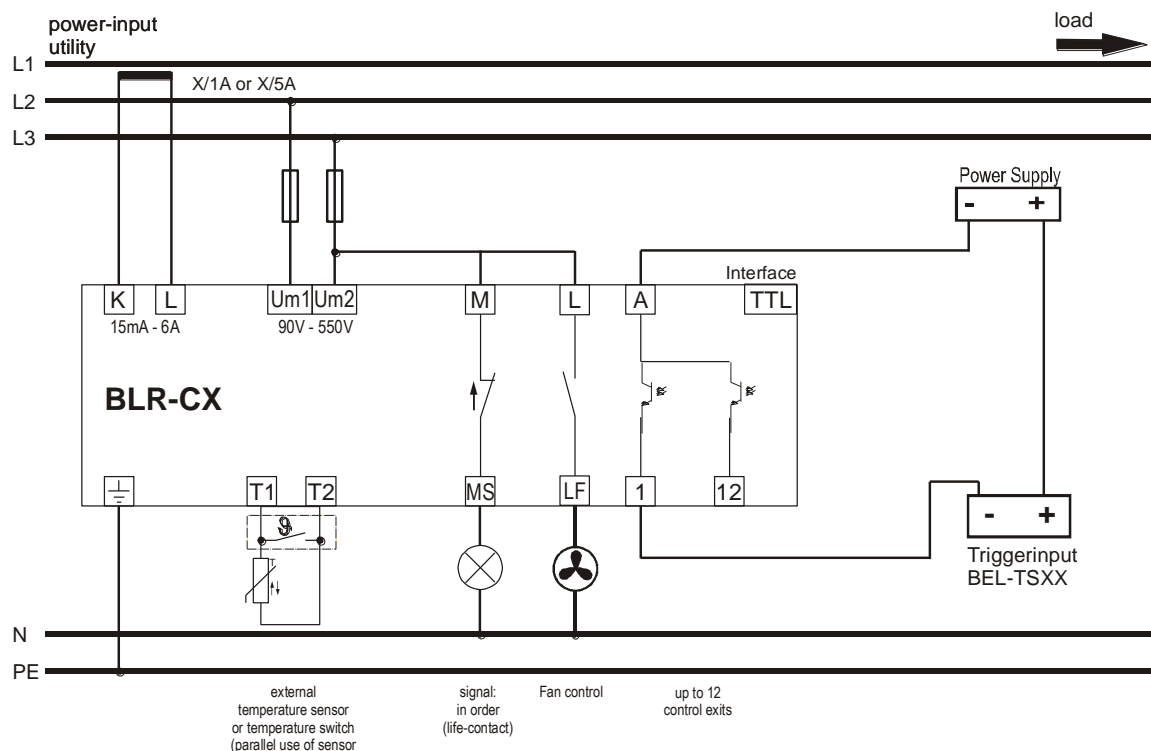

1.2 Connection data

Meas.- Supply voltage

Combined measurement and Power supply
Range 90-550V.
Terminals UM1 / UM2
With using of VT a ratio can be adjusted.
Range 1-350

Current measurement

Current measurement
Range 15mA – 6A,
Measurement transformer types x/1A or also x/5A can be used.
Terminals K (S1) / L (S2)
CT ratio is 1-9600
(Devices with Firmware before 1.04 had the adjustable range from 1-4000)

Regulation exits

Assembly with 4, 6, 8, 10, 12, 14 Regulation exits possible.
Regulation exits volt free with common root.
Terminals A 1-14.
max. breaking capacity 5A/250VAC

Static outputs

Assembly with 6 or 12 static outputs possible.
open-collector, breaking capacity: 8 – 48V DC / 100mA

Alarm contact

Opens in case of alarm and grid failure (can be changed by software). Terminals M / MS
max. breaking capacity 5A/250VAC

Separate fan control (only BLR-CX-T)

Closes terminals L / LF when exceeding temperature limit 1
max. breaking capacity 5A/250VAC

Temperature sensor / Digital Input

Temperature measurement or Digital Input to switch over to second COS ☑.
Terminals T1 / T2
Setting is explained in the Alarm menu.

2 COMMISSIONING

The BLR-CX comes with factory settings, which allows operation in 400V grid without any settings, if the connection is correct.

After applying voltage, the display shows the measured $\cos\phi$ and displays „Auto“. The measured $\cos\phi$ should be inductive (displayed by a small „i“ behind first line). With applying the voltage to the BLR-CX the discharge blocking time for the capacitors starts (Factory setting 75 sec.). After the discharge blocking time the regulation starts. Stepsizes will be detected automatically. Control exits which are not used, become adjusted to step status “Fix-Off” after three switching cycles without success. These outputs are blocked for the control.

To display values, which are depending on the current, it's necessary to adjust the ct ratio. This setting is not necessary for the control.

FAQ during Commissioning:

1) No indication AUTO -> the relay does not switch

Cause: Relay is set to manual operation

In SETUP/100 menu the selection for PFC is on OFF or HOLD, temperature is too high, current < 15mA, voltage or THD U is out of tolerance.

2) Indication U ALARM -> voltage out of tolerance

Check settings for nominal voltage (SETUP/Un) and voltage transformer (SETUP/Pt)

3) Indication I Lo ALARM -> CT current < 15mA

Cause: connection error of CT; short-link of CT is not removed; CT-ratation is too high compared to real current; no current

4) Indication EXPORT -> kW export

if there is no real kW export, voltage and current connection to BLR-CX has to be checked! See Wrong Connections / AI

5) Wrong Cos j indication -> wrong connection

voltage and current connection to BLR-CX has to be checked! See Wrong Connection / AI

6) Steps switch in and then quickly switch out again

See Stepsize Detection / Defective Capacitors

7) Frequent switching of steps


size of capacitors has not been completely detected

3 DISPLAY




On the right side of the display, the actual chosen main menu is shown.

INFO: Capacitor database
AUTO: automatic control is running
MANUAL: manual mode
SETUP: setup menu

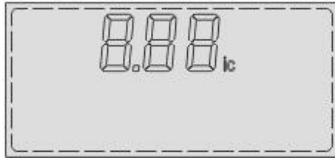

In the top menu level in the first line, the actual $\cos\phi$ is shown. The i respectively the c indicates leading or lagging $\cos\phi$. In submenu level the codes for the submenus or the abbreviations for the measured values are displayed.

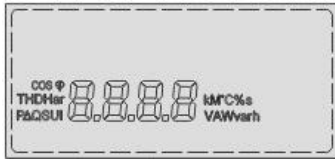

The second line shows measurement and set values with the corresponding units. Also the alarm codes which are shown during and alarm event are indicated there. All alarm codes are shown and explained in the table on the next page.



Active regulation outputs are shown in the bottom line. Steps, which are detected as defective (three switching cycles without success), are blinking.



NT: COS ϕ 2 active
EXPORT: export of active energy
ALARM: blinking in case of alarm


In case of an alarm will flash alternately at BLR-CX with "ALARM" an error code in the display. The table below gives an overview of all possible error codes.

To reset pending alarms hold the ◀ (esc) button pressed for 5 seconds.

00 ALARM	measured voltage is outside the set tolerance
0 000 ALARM	measured current is less than 15mA (check the short circuit bridge K and L and the entire current path)
0 000 ALARM	measured current is too high
0000 ALARM	The controller cannot achieve the target COS ϕ
00000 ALARM	The set limit for the THD of the voltage is exceeded
00000 ALARM / 00000 ALARM	One or more steps are broken. The defective step is blinking with the alarm message.
00000 ALARM / 00 ALARM	One or more step's have fallen below 70% of initial power. step number and error code will flash alternately. For devices with software version before 1.04 the alarm is triggered at 50% of initial power.
00000 ALARM	The second temperature limit is exceeded. Stage were switched off successively.
000000 ALARM	Set limit of operation hours has been exceeded
000000 ALARM / 00 ALARM	Set limit of the max. allowable operation cycles, for one or more steps, has been exceeded.
00 / 00000	Abort of auto-initialization.

4 OPERATION

4.1 Keys

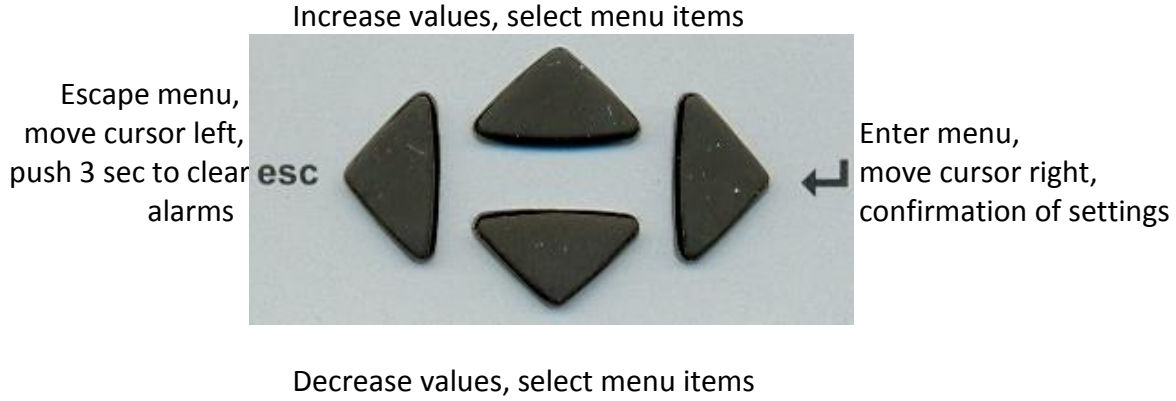

4.2 Input of numerical values

Whenever the BLR CX prompts for the input of a value, the routine will be the same:

A preset-value will be displayed with the first (highest) digit blinking. This digit can now be changed by use of the ▲ and ▼ keys. Use the ► button to change to the next smaller digit. After changing, the next digit will be also blinking and can now be altered just like the first one. When arriving the last digit, press the ► key once more. This position allows to set multipliers M (Mega) or k (kilo). To store the value, press the ► key once more, and the new value will be saved and used.


In case, that an adjusted value cannot be stored respectively another value is shown after confirmation with ► button, it's possible that the adjusted value is outside of the allowed range. For further information's about possible ranges, please check the table on the last page.

At any time, one can go back to the menu he came from without changing the value by pressing the ◀ key. In this case, the modified value will **not** be used!

5 MENU BLR-CX

5.1 Measurement menu


All grey fields are hidden in the factory settings and will only appear if the CT ratio is set in the "SETUP" menu. For devices with software version before 1.04 the complete measurement menu is hidden and must be activated by adjusting the CT ratio.

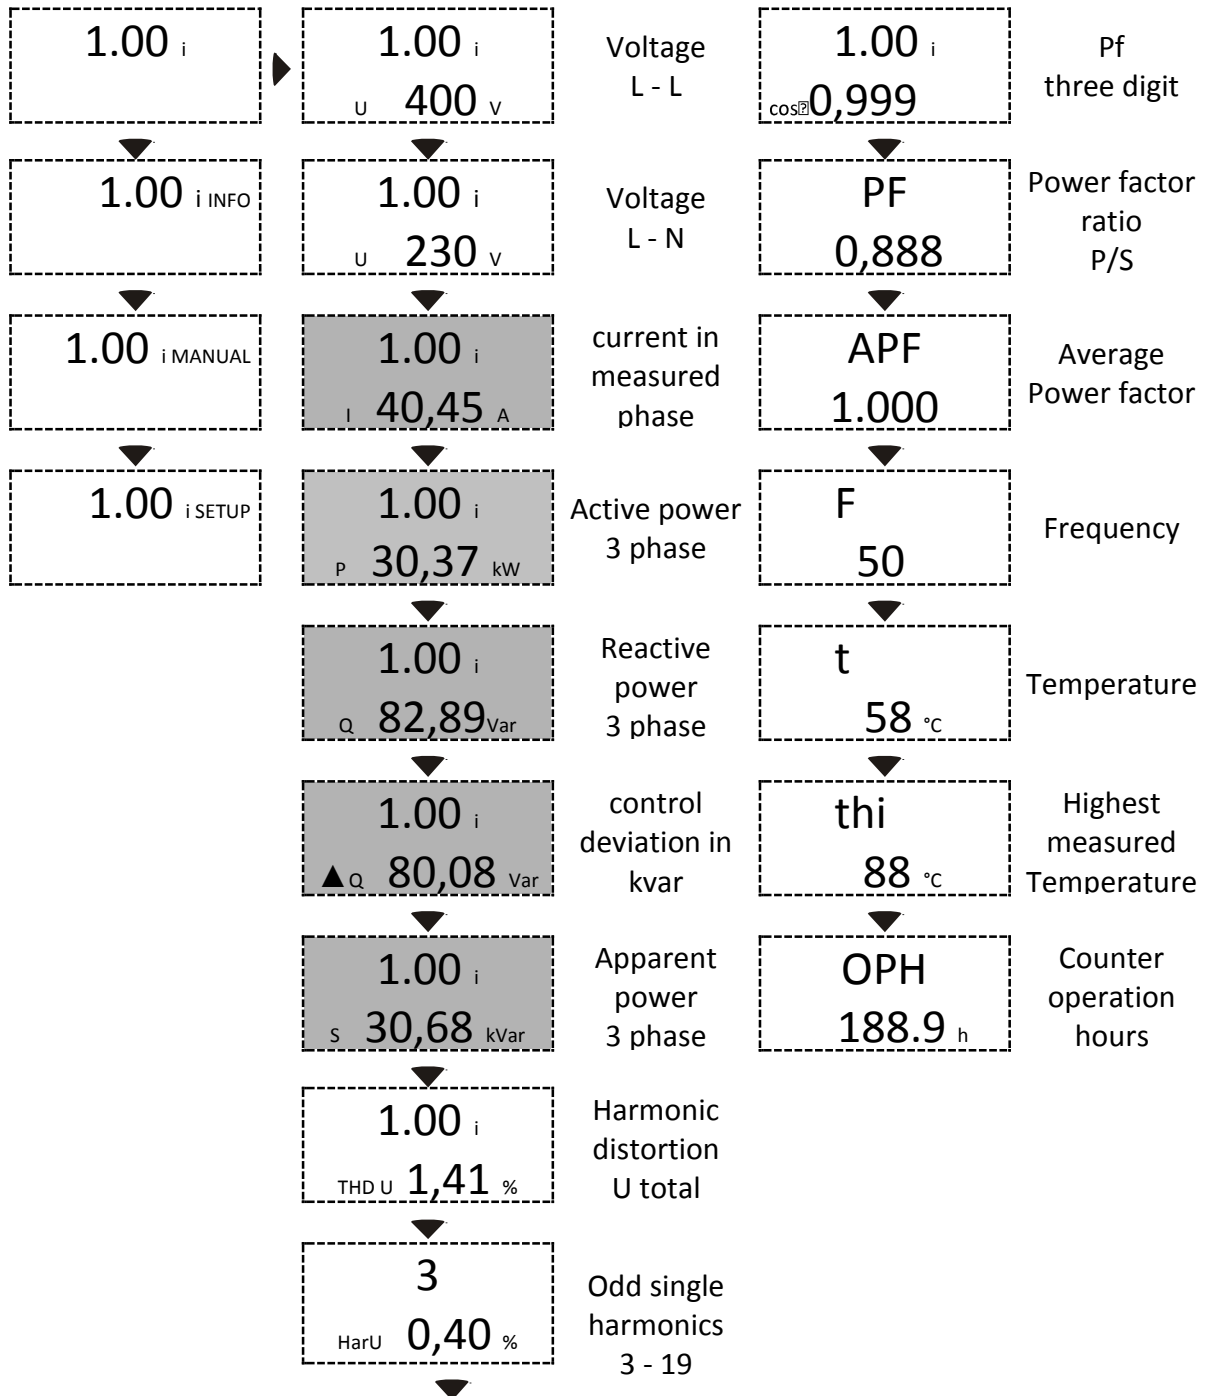

5.2 Info (Step database)

In the "INFO" menu for each connected step the number of switching cycles, the current step size and the step size in relation to the initial step size is stored.

Using these data, conclusions can be drawn on the condition of the site and the condition of single steps. **Step sizes are displayed in kVar only when in the CT ratio is set in "Setup" menu.**

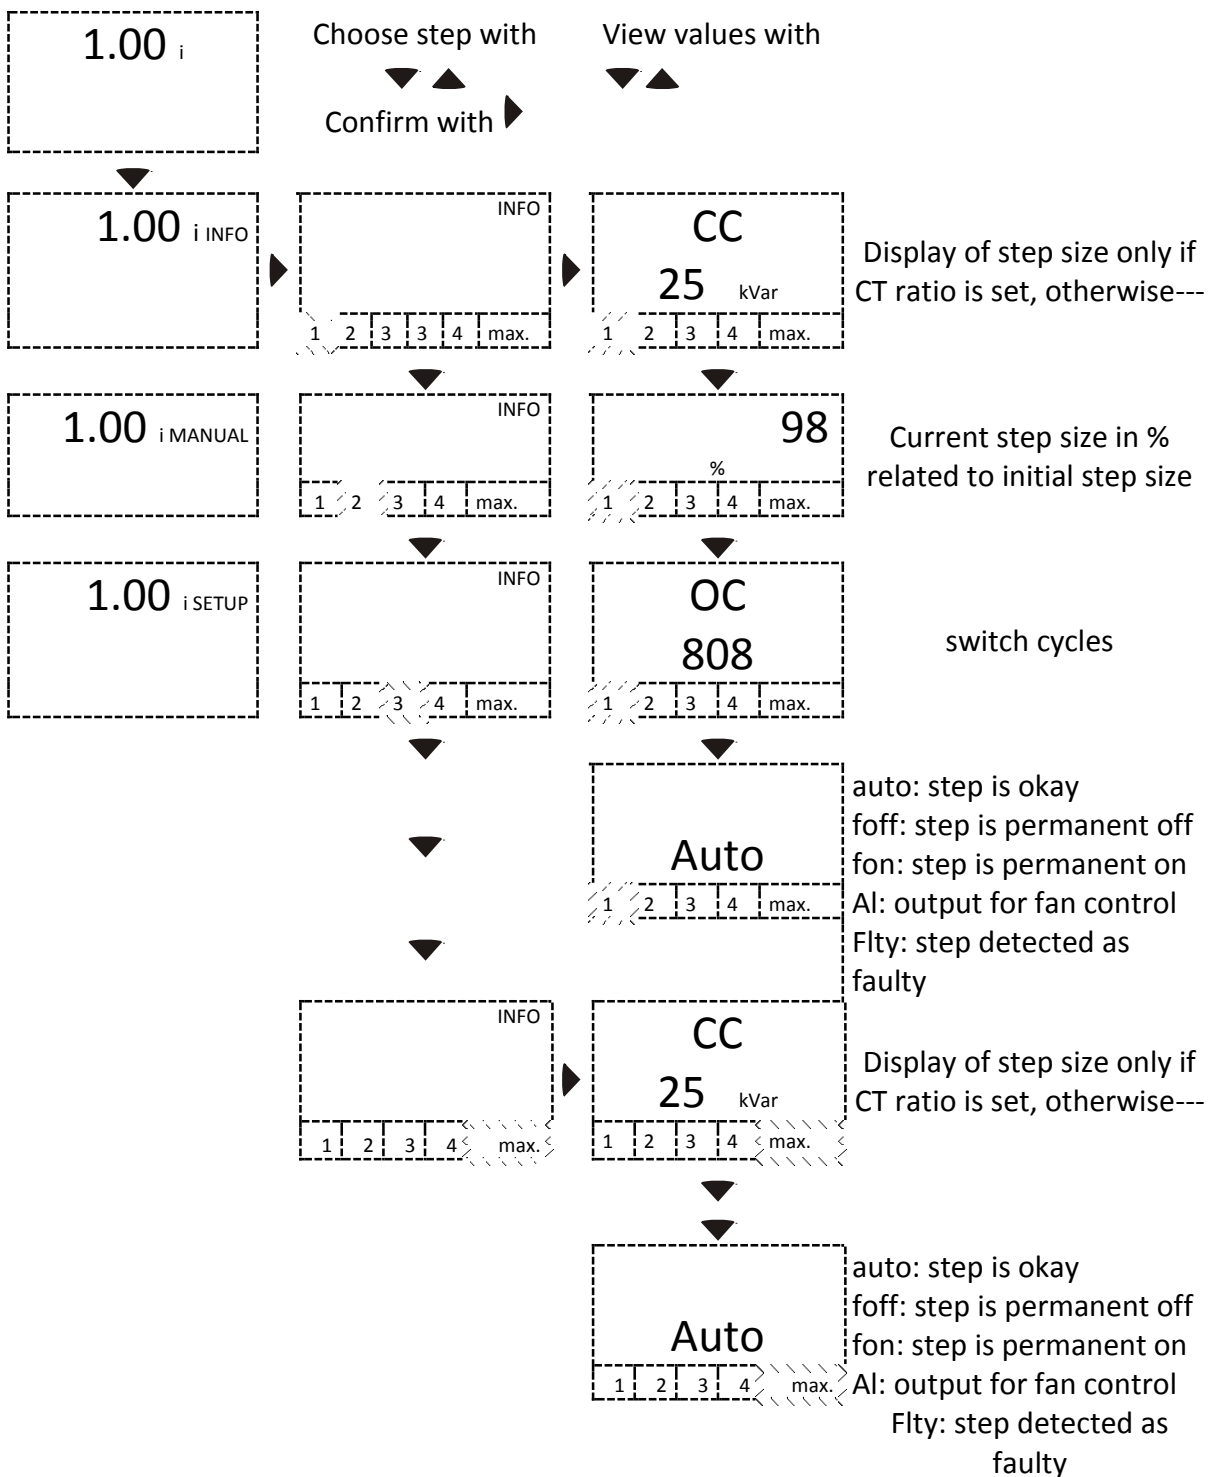


5.3 Manual (step switching manual)

To enter in manual mode, please select “manual” in main menu and push ► for 3 seconds. By entering this submenu, the manual mode for the regulator is active. The automatic control is stopped and the exits can be switched manually. By the means of the ▼▲-keys the referring step can be selected. Changing the switching state is possible by pushing the ►-key.




Manual switching is only possible when measurement voltage is in allowed range. Otherwise over- and undervoltage protection will block this function.

After switching off an active step, the discharge time is active. Only after this time is over the step can be switched on manually again.

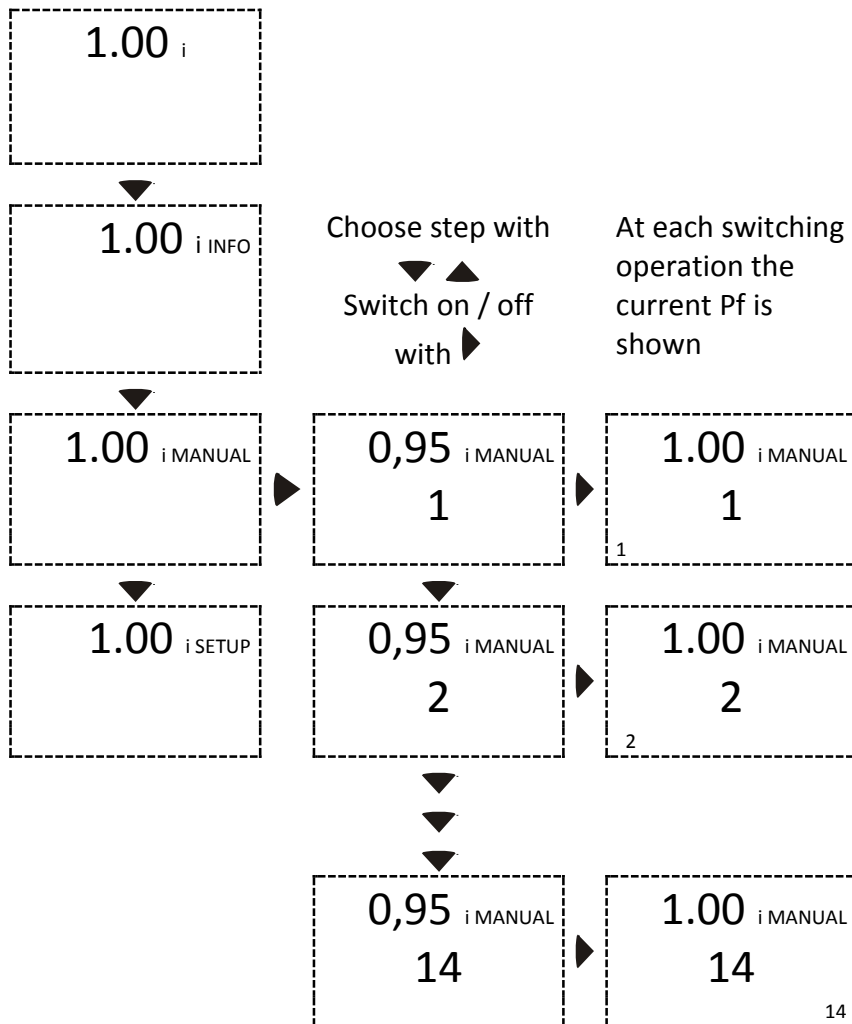

5.4 Setup (Quick start menu)

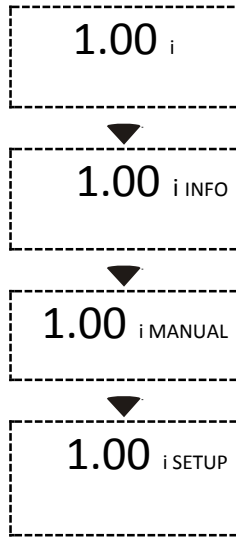


To start the control, it's only necessary that the nominal voltage is correct.


All other settings are only for optimal adaptation to the conditions in the system and display system data. To change a setting, enter the setting by pushing the **▶** button. Change the value with **▼ ▲** and confirm with **▶**. When you start the auto-initialization the BLR-CX checks the connection of the measurement and the exits. With these data, the regulation starts automatically.




Un = nominal voltage
Setting of nominal voltage. From this value the upper and lower limits for voltage monitoring is

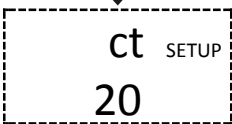

Input current transformer ratio
e.g. 250/5 = 50

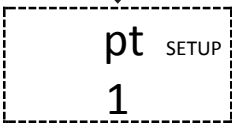


Input voltage transformer ratio
when no VT is used the value is 1

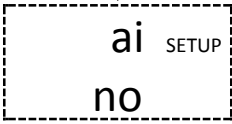


"Yes" the controller performs the auto-initialization again




"ON" automatic control
"OFF" control off
"HOLD" control freeze

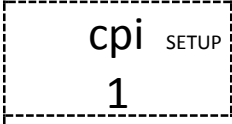

Target COS ϕ of control

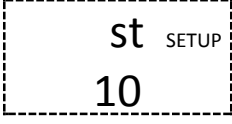

Interval between switching the steps

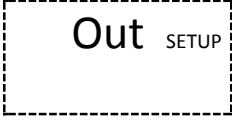

Possible types of output:
auto: step is used for regulation
foff: step is permanent off
fon: step is permanent on
Al: output for fan control (V1.06)

6 EXPERT MENU BLR-CX

To enter the BLR-CX expert menu, select menu item "SETUP" and confirm with ► (←). Push ▼ or ▲ and enter the requested PIN (242) and confirm with ► (←). The submenus can be selected by pushing ▼ ▲ buttons. The expert menu of BLR-CX is divided into six groups, where the menu items are logically grouped together.

The following groups exist:

100 Quick start menu

Contains all important points for commission.

200 Measurement settings

Contains settings to adapt the measurement of the BLR-CX to the surrounding network conditions.

300 Setup Control System

The items in the menu "control system" allow an optimization of the control or an adaptation to specific site requirements.

400 Setup Step Database

In the step database, all settings and data are combined which are required to adjust and adapt the steps.

500 Setup Alarm

The alarm menu of BLR-CX. Here, all the alarms and monitoring functions can be activated and the limits configured.

600 Resetmenu

Allows you to reset all settings made by the controller and stored data. Additionally, it contains the software version of the device (displayed from 1.04) and the possibility to change the password for the setup menu.

6.1 100 Quick start menu

Contains important information for commission:

100 Quick start menu

<u>MENU</u>	<u>FUNCTION</u>	<u>RANGE</u>
Un	NOMINAL VOLTAGE = PHASE - PHASE	100...241500 V
	Function of the setting of nominal voltage is to make a definition about the nominal voltage of the system. The threshold levels for under- and overvoltage are based on this as well as the ratings of the capacitor sizes in step database, which are used for control and monitoring. The capacitor sizes, which are stored in step database, are also rated to the nominal voltage.	
Ct	CT-FACTOR	1...9600
	The CT FACTOR is the ratio of current transformer. (e. g. 1000/5 = ratio 200). At devices with software version 1.04 is the adjustment range from 1-4000.	
Pt	VT-FACTOR	1...350
	VT FACTOR is the ratio of the voltage transformer. If the regulator is connected directly to the measurement voltage without VT the value 1 has to be used.	
Ai	AUTO-INITIALIZING START	Yes/No
	"YES" starts auto-initializing	
	Automatic initialization is switching all exits. During this test it can get information, which exits are working and it can correct the connection of the measuring channels for voltage and current by internal settings. Automatic initialization can be started only when the voltage and current are ok. Steps with step type "FON" or "AL" will be not considered in case of new auto-initialization.	
	AUTOMATIC INITIALIZATION is only able to work, when capacitors are used for compensation. If BLR-CX has to switch reactors for compensation of capacitive load, this feature will cause failures. Ai is working at best, when there are stable load conditions!	
	At devices with software revision before 1.04, stages which are set to "FOFF" were not retested.	

PFC	START / STOP / HOLD PF-CONTROL	On/Off/Hold
	<p>Stopping the automatic control. The following options are available: On: Control in automatic mode Off: Control stops and active steps were disconnected successive Hold: Control Stops and active step's remain switched on.</p> <p>If "OFF" or "HOLD" is selected, will appear in the display "PFC" alternating with "OFF" or "HOLD". To start the control, select "ON".</p>	
CP1	COS ϕ 1	0.70 c ...0.70 i
	<p>This is the setting for target COSϕ 1. It will be valid during normal operation.</p>	
St	SWITCH INTERVAL	1...6500 s
	<p>The switch interval is the time delay between switching steps in regulation.</p> <p>The switch interval has two different functions:</p> <ol style="list-style-type: none"> 1. Protecting the contactors by reducing the number of switching cycles. 2. Building of the average of the reactive power in the time of the switch interval. 	
Out	TYPE OF OUTPUT	
	<p>With the exception of step type "flty" the following step types can be selected:</p> <ul style="list-style-type: none"> • Auto = Step is used for normal regulation algorithm. • Alarm = If the set temperature limit 1 is exceeded this step is switched as fan output. • Fon = Step is permanently switched on (Step is still monitored and shut down in critical situations). • Foff = Step is permanently switched off. Not used steps should be adjusted to this type to avoid unnecessary alarm. • Flty = Step was switched three time without success and is not longer used for automatic control. <p>As "flty" stored steps can be set to desired step type in this menu.</p>	

6.2 200 Measurement settings

Contains settings to adapt the measurement of the BLR-CX to the surrounding network conditions.

200 Measurement settings

<u>MENU</u>	<u>FUNCTION</u>	<u>RANGE</u>
201	NOMINAL VOLTAGE = PHASE - PHASE Function of the setting of nominal voltage is to make a definition about the nominal voltage of the system. The threshold levels for under- and overvoltage are based on this as well as the ratings of the capacitor sizes in step database, which are used for control and monitoring. The capacitor sizes, which are stored in step database, are also rated to the nominal voltage.	100...241500 V
202	CT-FACTOR The CT FACTOR is the ratio of current transformer. (e. g. 1000/5 = ratio 200). At devices with software version 1.04 is the adjustment range from 1-4000.	1...9600
203	VT-FACTOR VT FACTOR is the ratio of the voltage transformer. If the regulator is connected directly to the measurement voltage without VT the value 1 has to be used.	1...350
204	V-TOLERANCE The setting of this value is in percent related to the nominal voltage. By means of the set value, the upper and lower limits of the permissible voltage range are calculated. e.g. 10% at 400V nominal voltage is a permissible range from 360V to 440V.	0...100 %
205	CONNNECTION MEASUREMENT "YES" voltage measurement L-L "NO" voltage measurement L-N CONNNECTION MEASUREMENT the setting if measuring of voltage is connected between two phases or between phase and neutral phase. It is normally detected automatically at every start of BLR-CM. This is done by comparing the setting NOMINAL VOLTAGE and the real measured voltage. This cannot be changed by hand. If the measured voltage is outside this tolerance, the measurement can be adjusted by hand.	Yes/No

206 PHASE COMPENSATION 0...345

The phase compensation enables the user to connect the current- and voltage measurement channels in any way. This compensation angle complies with the phase angle between connected active current and voltage. **This setting has to be made correct, because otherwise correct regulation is not possible! If the current transformer is connected inverted, additionally a phase compensation of 180° has to be respected.**

Is auto-initialization failed due to adverse network conditions, by hand a correction angle can be set or the incorrectly recognized can be corrected. Table 11.1 gives an overview of the connection options with corresponding phase angles.

207 START AUTO-INITIALIZING Yes/No

"YES" starts auto-initializing

Automatic initialization is switching all exits. During this test it can get information, which exits are working and it can correct the connection of the measuring channels for voltage and current by internal settings. Automatic initialization can be started only when the voltage and current are ok.

AUTOMATIC INITIALIZATION is only able to work, when capacitors are used for compensation. If BLR-CX has to switch reactors for compensation of capacitive load, this feature will cause failures. AI is working at best, when there are stable load conditions!

Steps with step type "FON" or "AL" will be not considered in case of new auto-initialization.

At devices with software revision before 1.04, stages which are set to "FOFF" were not retested.

208 AUTO-INITIALIZING BY REGULATOR RESTART Yes/No

YES = after starting the BLR-CX, a countdown is running. During this countdown it is possible to start auto-initializing by pushing ► (◀).

"NO" the countdown is not shown. To start AI, you have to choose Quickstart SETUP.

For a high precision of the measurement, the sampling rate has to be synchronized to the frequency of the grid. Caused by commutation notches of mains voltage it is possible that the automatic synchronizing will not work reliable. This creates failures in measurement. To avoid these problems, the following settings can be done:

Automatic synchronizing:

For best measurement results, when mains voltage is without commutation notches.

FIX-50HZ: For a safe operation at 50Hz grid with bad mains quality.

FIX-60HZ: For a safe operation at 60Hz grid with bad mains quality.

The temperature offset allows correction of temperature reading in a range -10°C to +10°C.

6.3 300 Setup Control System

The items in the menu "control system" allow an optimization of the control or an adaptation to specific site requirements.

300 Setup Control System

<u>MENU</u>	<u>FUNCTION</u>	<u>RANGE</u>
301	CONTROL SENSITIVITY	55...100 %
	Sensitivity is the switching threshold for switching-on or switching-off the capacitors in percent (%). The range of the sensitivity can be between 55% and 100% (factory setting is 60%. Due to this, the in following explanation 60% is used.).	
	Sensitivity is used for two checks:	
	<ol style="list-style-type: none"> 1. The controller is using sensitivity to check, if a switching operation is necessary or if it's possible. If the demand for compensation is bigger as 60% of the smallest for regulation available step, BLR-CM is selecting from step database, if there are suitable steps to switch. 2. To avoid hunting, the controller is only using steps, which will not overshoot more than 40% (100%-60%) of its size. 	
302	COS ϕ 1	0.70 c ...0.70 i
	This is the setting for target $\cos\phi$ 1. It will be valid during normal operation.	

303	COS ϕ 2	0.70 c ...0.70 i
This is the setting for target $\cos\phi$ 2. It will be valid when a switch over is caused by the digital input or another programmable action.		
304	COS ϕ 2 FOR P EXPORT	Yes/No
"YES" the controller operates in P-export with the COS ϕ 2 as control target. "NO" the controller operates in P-export with the COS ϕ 1.		
305	SWITCH INTERVAL	1...6500 s
The switch interval is the time delay between switching steps in regulation. The switch interval has two different functions:		
<ol style="list-style-type: none"> 1. Protecting the contactors by reducing the number of switching cycles. 2. Building of the average of the reactive power in the time of the switch interval. 		
306	SWITCH INTERVAL STEP EXCHANGE	1...6500 s
For step exchange, a separate switch interval is used. This is the delay-time between switching-off an active step and switching-in the next step to get a better power-factor.		
307	ACTIVATE STEP EXCHANGE	Yes/No
<p>"YES" = Step exchange is active. "NO" = Step exchange is disabled.</p> <p>Step exchange is supporting automatic control and combined filter control algorithm to reach an optimum result. If the controller detects that target-pf is not reached it starts searching for a step which gives better results. If step exchange is active, the controller can replace a switched-in step against a step which matches better, to reach the target.</p> <p>This function helps to reach target COS ϕ more exactly, when capacitors have different sizes. If all capacitor banks have the same size, this function makes no sense.</p>		

308 STEP RECOGNITION "OFF" Yes/No

"YES": Step sizes have to be programmed by hand. The step sizes have to be programmed by hand if:

1. When fast-oscillating load influences automatic stepsize recognition.
2. When recognition of defective steps is not wished
3. When capacitor contactors are switching with a delay of more than 200msec.

"NO" Stepsizes are detected and corrected automatically during normal operation. "Step recognition ON" is the factory setting. It allows monitoring of capacitor sizes and gives alarms when they are faulty. Stepsizes which are programmed manually will be overwritten by step recognition.

309 BLOCKING OF DEFECTIVE CAPACITORS Yes/No

"YES" If a step is switched in three times without measurable network reaction, the controller is blocking the step and doesn't use it for the control.

Is a Step recognized to be defective, blinks in the display the corresponding output and in the step database and menu "403" it's displayed as step type "flty".

"NO" Steps are connected even if no network reaction is measurable. This results unnecessary switching cycles.

Steps that are stored as defective will be tested every 24 hours or after the controller is restarted.

310 START / STOP / HOLD PF-CONTROL On/Off/Hold

Stopping the automatic control. The following options are available:

On: Control in automatic mode

Off: Control stops and active steps were disconnected successive

Hold: Control Stops and active step's remain switched on.

If "OFF" or "HOLD" is selected, will appear in the display "PFC" alternating with "OFF" or "HOLD". To start the control, select "ON".

1. **Automatic:** The controller is working with the principle of „Best Fit“. Before a switching operation, all capacitor-sizes in step database are compared with control deviation. The available step which gives the best results will be switched.
2. **LIFO:** “Last In, First Out” The controller starts with regulation with step 1 and is switching further exits step-by-step. Switching-off is done vice versa.
3. **Combined Filter:** Special algorithm for combined filter banks with two different detuned ratings. The controller is working like in automatic mode with the principle “Best Fit”. From odd numbered steps, there is at least or more of the capacitance connected as from even numbered steps. Threshold level of each step is checked separately. If steps different sizes, this can cause inaccuracy. Step recognition is working in this mode. If steps are detected as defective, they are skipped in this mode. If this is not accepted, the step recognition has to be deactivated and capacitor sizes have to be programmed manually.
4. **Progressive:** The controller switches if required, several steps in sequence with a shorter switching time. From software 1.04, the controller uses independently of the set switching time always 1 sec. as switching time. Furthermore, the automatic step size detection is disabled and the step sizes need to enter by hand. The input of the step sizes should be as accurate as possible, because the regulator would otherwise tend to oscillate. Leaving the "Progressive" algorithm and use a different algorithm, the set switching time is used the step size detection is re-enabled.

OFFSET of reactive power in kvar. This feature allows compensating a permanent reactive load, which cannot be measured (e.g. a transformer).

The offset of reactive power affects the readings of the following measuring values:

current, reactive power, control deviation, apparent power, power factor PF and $\cos\phi$.

313 ASYMMETRY FACTOR -127...127

ASYMMETRY FACTOR of switch interval. The factor is the ratio between switch interval for switching on and switching off. Switch interval for step exchange is not affected by this setting.

X= 1 = equal

X = +2 to +127: delay switching off = switch interval multiplied by X

X = -2 to -127: delay switching on = switch interval multiplied by X

314 Q CAPACITIVE STEPS TURN OFF Yes/No

"YES" As soon as a capacitive condition is recognized, the controller switches off without keeping the switching time, the necessary step power in order to prevent leading network conditions.

"NO" The controller works only with the set target COS ϕ .

6.4 400 Setup Step Database

In the step database, all settings and data are combined which are required to adjust and adapt the steps.

400 Setup Step Database

<u>MENU</u>	<u>FUNCTION</u>	<u>RANGE</u>
401	DISCHARGE TIME	5...1200 s
	The discharge time is defined once and is valid for all steps. The discharging time is a blocking time, becoming active after switching off a step. As long as this time is running this step is not available for the regulation. Discharging time should be adapted to the capacitor discharging unit.	
402	STEP NOMINAL VALUE	Ct*Pt*7000
	If STEP RECOGNITION is not active, it is required to do this setting, to get proper function of the relay. The size of the capacitors can be programmed manually in kvar. Before this programming, CT FACTOR and NOMINAL VOLTAGE must be programmed correctly. A change of CT FACTOR or NOMINAL VOLTAGE is automatically changing the value of the capacitor size. The programming can be done for each step individually in kvar. So there is no special sequence necessary. A step can be programmed as a capacitor (c) or as an inductor (i).	

403 **STEP TYPE** **Auto/AI/FOn/FOff**

With the exception of step type "flty" the following step types can be selected:

- Auto = Step is used for normal regulation algorithm.
- Alarm = If the set temperature limit 1 is exceeded this step is switched as fan output.
- FOn = Step is permanently switched on (Step is still monitored and shut down in critical situations).
- FOff = Step is permanently switched off. Not used steps should be adjusted to this type to avoid unnecessary alarm.
- Flty = Step was switched three time without success and is not longer used for automatic control.

As "flty" stored steps can be set to desired step type in this menu. If defective steps should not be locked, you must disable this function under the menu item "309".

Steps which are identified as defective will be tested again by the controller every 24 hours or after a restart.

404 **SWITCH CYCLES** **0...262000**




The BLR-CX is counting and showing the switching cycles of each step in the "Info" menu. After a contactor has been exchanged, the switching cycles can be set to "0" in this menu.

6.5 500 Setup Alarm

The alarm menu of BLR-CX. Here, all the alarms and monitoring functions can be activated and the limits configured.

500 Setup Alarm

<u>MENU</u>	<u>FUNCTION</u>	<u>RANGE</u>
501	Reset Alarm manually	Yes/No
	<p>"YES" Alarms (display and alarm relays) must be reset manually. To reset upcoming alarms, hold the ◀(esc) button pressed for 5 seconds.</p> <p>"NO" As soon as the alarm condition is no longer valid, the alarms drop out.</p>	
502	THD U Alarm	Yes/No
	<p>"YES" The set THD threshold under menu "503" is monitored. Exceeding the set threshold will open the alarm contact and the display will show the message "THD U > THRESHOLD".</p> <p>"NO" THD is not monitored.</p>	
503	THD U Threshold	1...200 %
	Input of the threshold for THD monitoring.	
504	THD U > Threshold = disconnect steps	Yes/No
	<p>"YES" Exceeding the set threshold for THD will switch off all active steps successive.</p> <p>Warning: Steps are only switched off when it is set at point 502 to "YES".</p> <p>"NO" Exceeding the set threshold follows no action.</p>	
505	Interval time before triggers THD U and Temperature threshold 2	1...255 s
	Interval time after exceeding the threshold for THD U or temperature threshold 2.	
506	Freeze control if I == 0	Yes/No
	<p>"YES" The measuring current drops below 15mA freezes the control. All active steps remains switched on.</p> <p>"NO" Measuring current falls below 15mA, the controller shuts down all active steps successive.</p>	
507	Service Alarm	Yes/No
	"YES" the alarm contact opens when the max set switching cycles for one or more steps have been exceeded or if the set threshold for operation hours are reached.	

	"NO" no alarm when exceeding the max. switching cycles or operation hours.	
508	Max. switching cycles per step Threshold switching cycles for service alarm. Display indication  ALARM	1...262000
509	Max. operation hours Threshold switching cycles for service alarm. Display indication  ALARM	1...65535 h
510	Use temp. input as digital input "YES" Temperature sensor is activated via a switch and causes a switchover to COS 2 (HT / NT) Note: This menu item is locked against menu item "512". If the temperature alarm is set to "Yes", this point will automatically jump to "NO" and can not be altered. "NO" the temperature input works with plug-in temperature sensors and monitors the in menu 513 and 514 adjustable temperature thresholds. Parallel to the temperature sensor, a thermostat can be connected. In this case, the controller displays "HIGH" for closed state and "LOW" for open state.	Yes/No
511	DI active at HIGH signal "YES" digital input is activated with closed terminals T1 & T2. "NO" digital input is activated with open terminals T1 & T2.	Yes/No
512	Temperature alarm "YES" the controller monitors the temperature threshold 1 and 2 and responses accordingly. "NO" alarm disabled.	Yes/No
513	Temperature threshold 1 By exceeding the temperature threshold 1 switches the controller as "AL" declared step (fan on).	3-74 °C
514	Temperature threshold 2 When the temperature exceeds temperature threshold 2, the controller switches all active steps ("AUTO" & "FON") from compliance with the under menu item 505 adjusted time in succession off. In addition, in the display appears  ALARM and the alarm contact is opened.	4-75 °C

515	Control alarm (target cos ϕ can not be archived)	Yes/No
	<p>"YES" alarm is triggered after 75 time switching time with $\blacktriangle Q >$ smallest step (Over / under compensation). Controller opens the alarm contact and indicates $\text{COS } \phi \text{ ALARM}$ in the Display.</p> <p>"NO" no monitoring for over / under compensation.</p>	
516	Defective step alarm	Yes/No
	<p>"YES" After 3 unsuccessful switching actions alarm is triggered. The controller opens the alarm contact and indicates $\text{STEP } \text{ALARM} / \text{STEP } \text{ALARM}$ in the display.</p> <p>Steps recognized as defective flashing in the step indication.</p> <p>"NO" alarm disabled.</p>	
517	Step power loss alarm	Yes/No
	<p>"YES" If the current step size is less than 70% of the initial size, the controller opens the alarm contact and indicates the error with output number $\text{STEP } \text{ALARM} / \text{STEP } \text{ALARM}$ in the display.</p> <p>"NO" Power loss of the capacitors is not monitored.</p>	

6.6 600 Resetmenu

Allows you to reset all settings made by the controller and stored data. Additionally, it contains the software version of the device (displayed from 1.04).

600 Resetmenu

<u>MENU</u>	<u>FUNCTION</u>	<u>RANGE</u>
601	Reset Settings	Yes/No
	Sets all settings made back to factory settings.	
602	Reset Step database	Yes/No
	Sets all step data back to factory settings.	
603	Reset operation hours	Yes/No
	Sets the counter for operation hours to "0"	
604	Reset average PF	Yes/No
	Reset the average PF.	
605	Reset max. Temperature	Yes/No
	Reset the highest measured Temperature.	
606	Reset alarms	Yes/No
	Reset all upcoming alarm.	

- 607 Display software version
Contains the software version of the device (display from 1.04)
- 608 Adjustment of the Setup password (from software 1.08)
Here, a password can be entered.

7 TECHNIAL DATA

Measuring- and supply voltage:	90 – 550V AC, single phase, 45-65HZ, 5VA, max. fuse 6A VT ratio from 1.-350.0
Current measurement	15mA – 6A, single phase, burden 20mOhm, CT-ratio from 1-9600 Before software version 1.04 the adjustable range is 1-4000
Control exits	Relays: up to 14, n/o, with common point, max. fuse 6A breaking capacity: 250V AC / 5A Static outputs: 6 or 12 static outputs possible. open-collector, breaking capacity: 8 – 48V DC / 100mA
Temperature measuring:	By NTC
Alarm contact:	Relay, volt free, life contact, max. fuse 2A, breaking capacity: 250V AC / 5A
Fan control	By using one switching exit defined as "Alarm". Devices with transistor outputs us the contacts L / LF for fan control.
Interface:	TTL, rear
Ambient temperature:	Operation: -20°C – 70°C, storage: -40°C – 85°C
Humidity:	0% - 95%, without moisture condensation
Voltage class:	II, dirt class 3 (DIN VDE 0110, part 1 / IEC60664-1)
Standards:	DIN VDE 0110 part 1 (IEC 60664-1:1992) VDE 0411 part 1 (DIN EN 61010-1 / IEC 61010-1:2001) VDE 0843 part 20 (DIN EN 61326 / IEC 61326: 1997 + A1:1998 +A2: 2000)
Conformity and listing:	CE, UL, cUL, GOST-R
Connection:	Pluggable terminal block, screw type max. 4qmm
Case:	Front: instrument case PC/ABS (UL94-VO), Rear: metal
Protection class:	Front: IP50, (IP54 by using a gasket), Rear: IP20
Weight:	ca. 0,6kg
Dimension:	144x144x58mm h x w x d, cut out 138 (+0,5) x 138 (+0,5)mm

8 TROUBLESHOOTING

Fault	possible cause	Remedy
No indication in display	<ul style="list-style-type: none"> aux. voltage missing 	<ul style="list-style-type: none"> Check the correct connection of power supply and correct if necessary.
Display "0.0 ALARM"	<ul style="list-style-type: none"> Voltage outside tolerance 	<ul style="list-style-type: none"> Check measurement voltage Check nominal voltage and adjusted tolerance and correct if necessary.
Display "0.0 0.0 ALARM"	<ul style="list-style-type: none"> Measured current is to small 	<ul style="list-style-type: none"> check connection of CT, probably there is a break in the line remove short circuit link of the CT
wrong display of current or voltage	<ul style="list-style-type: none"> wrong transformer ratio 	<ul style="list-style-type: none"> Check settings of transformer ratios in the "SETUP" (100) menu and correct if necessary.
The power factor is displayed incorrectly.	<ul style="list-style-type: none"> The connection detection was not performed. The phase angle was adjusted manually false. Offset reactive power is adjusted. 	<ul style="list-style-type: none"> Start "Ai" in "SETUP" menu. Check point 206 in the "EXPERTMENU" and correct the phase angle if necessary. With the compensation system, a transformer is compensated. The displayed Pf is in front of the transformer. The displayed Pf is in front of the transformer.
The power factor does not change after the switching of a step.	<ul style="list-style-type: none"> CT incorrectly positioned. 	<ul style="list-style-type: none"> Check installation position of the current transformer according to wiring diagram (current of the load and the capacitors must be measured!).
Steps are switched off again.	<ul style="list-style-type: none"> Capacitor defect 	<ul style="list-style-type: none"> Check capacitor, possible fuse, capacitor, or contactor defective.

Display 0 000 "ALARM"	<ul style="list-style-type: none"> Current is higher than allowed. 	<ul style="list-style-type: none"> Check the current transformer secondary current and possibly replace it with matching current transformer.
Display 0000 "ALARM"	<ul style="list-style-type: none"> permanent over compensation permanent under compensation 	<ul style="list-style-type: none"> Check settings (possibly step with step type "FON") Check contactors, contactor contact may bonded. Check capacitors and fuses. Dimensioning of the system examined.
Opposite regulation behaviour	<ul style="list-style-type: none"> Current or voltage connections swapped. 	<ul style="list-style-type: none"> correct connection or adapt phase compensation.
Individual steps are not switched on or off.	<ul style="list-style-type: none"> wrong setting 	<ul style="list-style-type: none"> Verify whether the steps were defined as Step type "FON" or "FOFF" (permanently on or off).
Steps are detected as defective. Steps are switched off again.	<ul style="list-style-type: none"> Step defective 	<ul style="list-style-type: none"> Check capacitor, possibly fuse, capacitor or contactor defective.
Steps are not switched.	<ul style="list-style-type: none"> The steps are too large. 	<ul style="list-style-type: none"> The required reactive power is below the switching threshold. Switching threshold is 60% of the smallest available step.

9 APPLICATIONS

9.1 Fan Control

The fan control is to be regulated through the BLR-CX.

Solution:

If the BLR-CX is equipped with a temperature sensor (option -L), can be via one of the switching exits, a fan to be controlled.

Procedure:

- Enable temperature alarm

In the expert menu item 512 set to "YES" (temperature alarm on).

- Set temperature thresholds

Set the following items 513 (temperature threshold 1) and 514 (temperature threshold 2) the temperature thresholds. By exceeding the temperature threshold 1 is witched the fan output. When you exceed the temperature threshold 2, all steps are switched off to prevent overheating.

- Select fan output

Select item 403 in expert menu and adjust for the step which shall work as the fan output step type "AL".

Features:

In order to prevent hunting of the fan relay, the fan is turned off only at a temperature below the set limit by at least 3°C. If the BLR-CX is equipped with a temperature sensor, the current cabinet temperature is displayed and the highest measured temperature is stored in thi. Parallel to the temperature sensor can be connected a thermostat. By close of the thermostat, the temperature limit 2 is activated.

9.2 Switching on COS ϕ 2 via digital input

By using a switch, the BLR-CX will be switched to COS ϕ 2.

Solution:

Using the temperature input as digital input.

Procedure:

- Enable digital input
Set item 510 in expert menu to "YES".
- Using digital input as n/o or n/c

"YES" digital input is activated with closed terminals T1 & T2.

"NO" digital input is activated with open terminals T1 & T2.

Features:

The temperature input is used as a digital input, shows the controller at active input "high" and with not active input "low" instead of the temperature. The controller uses with active digital input the COS ϕ 2 and will show "NT" in the display.

9.3 Problems with the Step recognition.

The controller is used in a system with rapid changes in load conditions and has problems with the automatic step recognition

Solution:

To solve this problem, the step sizes must be entered by hand, and the step recognition must be turned off.

Procedure:

- Stop control.

Set item PFC to "OFF" in menu 100 (quick start menu).

- switch off Step detection.

Set item 308 to "Yes" (step recognition off) in the expert menu.

- enter step sizes.

Setting the nominal value of the capacitors connected at point 402 in the expert menu.

- Check step type

For problems with the step detection, it may happen that the connected steps will be stored by the controller incorrectly as "FIX-OFF". Therefore, the step type of each step should be controlled under the menu item "403". All steps of the automatic control used, must be use the step type "AUTO".

Features:

By switching off the automatic step recognition, a step failure or power loss is not reported.

To monitor the system anyway, it is appropriate to enable the control alarm to be alerted in case of failure timely. (See alarm menu)

9.4 Transformer compensation

The compensation of a transformer can be solved with the BLR-CX in two ways:

9.4.1 Setting a reactive power offset

Setting reactive power offset. This is added to the required compensation power within the system.

Procedure:


Determine the required capacitive reactive power to compensate the transformer. Enter the calculated value in the menu item "312". Control will start immediately with the additional required reactive power.

Features:

The reactive power offset set here is always added to the measured reactive power. Therefore, it's always the Pf appears before the transformer. This means that the system can capacitive, but the measurement of the utility the required Pf recoded.

9.4.2 Mixed measurement:

By the current measurement on the medium voltage side, the transformer caused reactive power is measured and regulated by the connected compensation system.

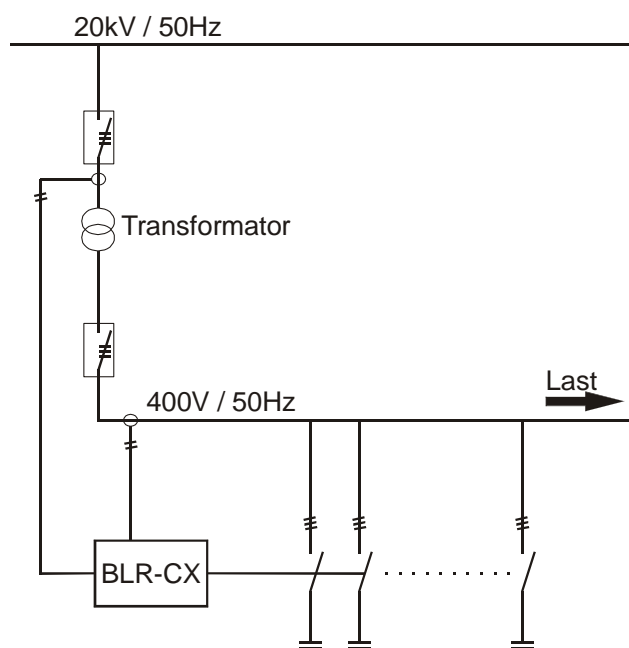

Procedure:

Connect the measurement of the controller as shown in the diagram adjacent. Then start the automatic initialization. The vector group of the transformer is automatically considered.

Connection:

When auto-initialization will be aborted, under item 11.2, the most common transformer vector groups are listed.

9.5 Reset defective steps respectively add additional steps

If the controller has recognized a step as defective (3 switching operations without result), it will be excluded for 24 hours from the regulation. After this period, the step is tested again from the controller. If the controller can detect the step, it will be included in the control. If not, the step is blocked for 24 hours again after 3 unsuccessful switching cycles. Defect steps are in the "INFO" menu with the step type "flty" marked and flashing in the step indication. When a compensation system need additional capacitors to be added, proceed as described below:

Procedure:

Select item "403" in expert menu and use the ▼ ▲ buttons to select the corresponding step. Confirm with ► (←) button and use the ▼ ▲ buttons to adjust step type "AUTO".

Feature:

If a step is exchanged, the nominal step size of the new step must be entered by hand. Select the affected step in menu "402" and program the nominal step size.

If a defective contactor triggers the alarm upon the exchange took place, the accumulated switching operation under item "404" set to "0".

10 CUSTOMER SETTINGS

Menu	Factory setting	Customer setting	Menu	Factory setting	Customer setting
100			400		
Un	400 V		401	75 s	
Ct	1		402	5 var (1-max.)	
Pt	1		403	AUTO (1-max.)	
Ai	NO		404	0 (1-max.)	
PFC	ON		500		
CP1	1		501	NO	
St	10 s		502	NO	
200			503	20 %	
201	400 V		504	NO	
202	1		505	60 s	
203	1		506	NO	
204	10%		507	NO	
205	NO		508	262 k	
206	0		509	65.5 k h	
207	NO		510	NO	
208	YES		511	NO	
209	AUTO		512	NO	
300			513	30 °C	
301	60%		514	55 °C	
302	1		515	0 °C	
303	0,95 i		516	NO	
304	NO		517	NO	
305	10 s		518	NO	
306	2 s		600		
307	YES		601	NO	
308	NO		602	NO	
309	YES		603	NO	
310	ON		604	NO	
311	1		605	NO	
312	0		606	NO	
313	1		607	1.xx	
314	NO				

11 APPENDIX

11.1 Settings Phase-angle

Voltage	L1-N	L2-N	L3-N	L1-N	L2-N	L3-N	L1-N	L2-N	L3-N
CT	L1	L2	L3	L2	L3	L1	L3	L1	L2
Phase-angle	0°	0°	0°	240°	240°	240°	120°	120°	120°
Voltage	L2-L3	L3-L1	L1-L2	L2-L3	L3-L1	L1-L2	L2-L3	L3-L1	L1-L2
CT	L1	L2	L3	L2	L3	L1	L3	L1	L2
Phase-angle	90°	90°	90°	330°	330°	330°	210°	210°	210°

11.2 Connections for mixed measurement

Transformer vector group	CT	Voltage
Dy5	L1	L2-N
Dy5	L2	N-L3
Dy5	L3	N-L1
Yz5	L1	L2-N
Yz5	L2	N-L3
Yz5	L3	N-L1
Dx6	L1	L3-L2
Dx6	L2	L2-L1
Dx6	L3	L1-L3
Yy6	L1	L3-L2
Yy6	L2	L2-L1
Yy6	L3	L1-L3
Dy11	L1	N-L2
Dy11	L2	L3-N
Dy11	L3	L1-N
Yz11	L1	N-L2
Yz11	L2	L3-N
Yz11	L3	L1-N




Operation Manual BLR-CX (MB_EN_ACX-R_BEL_10)

ATTENTION!

Installation of the BLR-CX must only be undertaken by technically qualified persons, since live terminals can cause electric shock.

The appropriate safety regulations in the country of installation must be strictly adhered to.

Equipment with damaged casing or terminals must not be used and must be disconnected from the mains supply immediately.

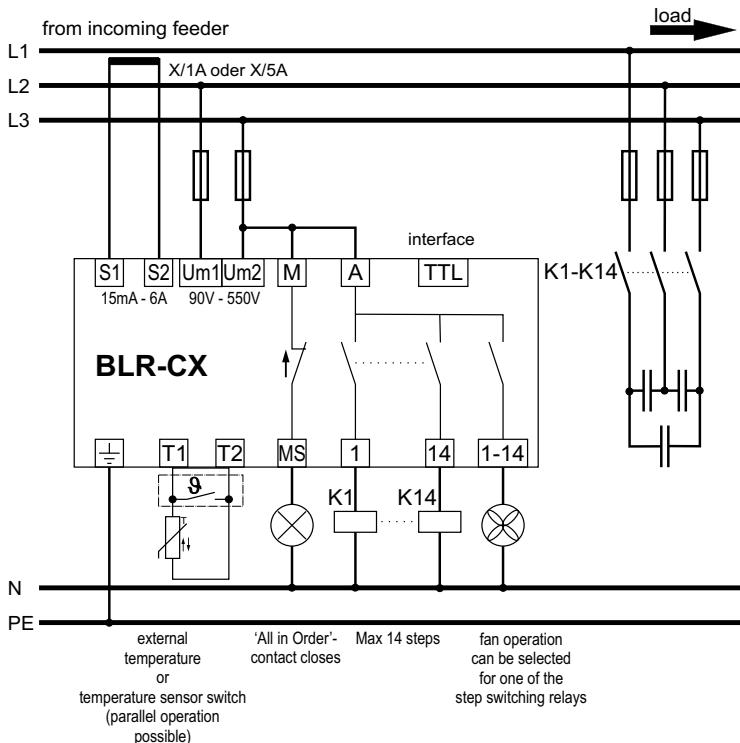

Installation and Commissioning:

- 1) Check that the mains voltage and CT current input are suitable for the relay!
- 2) Disconnect panel from mains voltage, and check that the voltage is off
- 3) Ensure CT short-circuited or not in operation.
An open circuit CT produces a high voltage which endangers people and equipment. It will also damage the CT and affect its accuracy.
- 4) Disconnect and remove any previous pfc-relay.
- 5) Mount BLR-CX in the control panel with the two mounting clips. (cutout 138x138mm)
- 6) Connect the earth protection cable to 'PE' on BLR-CX metal case.
- 7) Connect BLR-CX according to wiring diagram. (CT/P1 towards incoming feeder, CT/P2 towards load!)
- 8) Remove short-circuit from CT
- 9) Connect mains voltage to panel.
- 10) If relay has been correctly connected and the mains voltage and CT output comply with the ratings and settings of BLR-CX, the LCD will show **AUTO** and the control function will start automatically!

FAQ during Commissioning:

- 1) **No indication AUTO** → the relay does not switch
Cause: Relay set to manual operation
In SETUP/100 menu the selection for PFC is on OFF or HOLD
temperature is too high,
current < 15mA, voltage or THD U is out of tolerance.
- 2) **Indication U ALARM** → voltage out of tolerance
Check settings for nominal voltage (SETUP/Un) and
voltage transformer (SETUP/Pt)
- 3) **Indication I Lo ALARM** → CT current < 15mA
Cause: connection error of CT; short-link of CT is not removed;
CT-ratation is too high compared to real current; no current
- 4) **Indication EXPORT** → kW export
if there is no real kW export, voltage and current connection to
BLR-CX has to be checked! See Wrong Connections / AI
- 5) **Wrong Cos φ indication** → wrong connection
voltage and current connection to BLR-CX has to be checked!
See Wrong Connection / AI
- 6) **Steps switch in and then quickly switch out again**
See Stepsize Detection / Defective Capacitors
- 7) **Frequent switching of steps**
size of capacitors has not been completely detected


Display:




INFO: step database information
AUTO: relay is working in AUTO mode
MANUAL: relay is working in manual mode
SETUP: Setup of parameters



EXPORT: kW export
NT: 2nd target-cosφ is working
ALARM: blinking during alarm



1. line:
 cosφ
 menu items




2. line:
 measuring values
 parameters
 alarm codes



Step indication:
 state of step (on/off)
 step defective (blinking)

Handling:

BLR-CX has 4 keys for navigation and input of parameters.

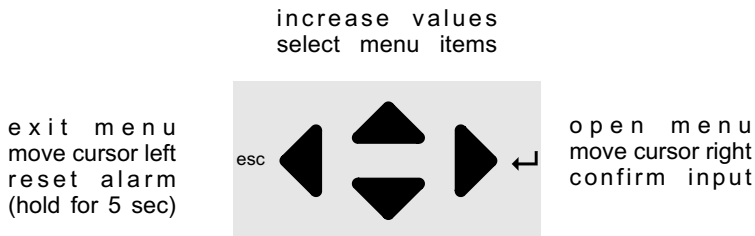


Decrease values
select menu items

Input parameter:

- ▲, ▼ setting of number
- ▶ selection of next digit
- ▲, ▼ after setting of last digit, selection of:
 - multiplier **k** (kilo) or **M** (Mega)
 - leading sign **I** (inductive) or **C** (capacitive) (blinking of I or C)
- ▶ storage of setting
- ◀ abort input


Main Menu:

Select menu items by pressing ▲, ▼, enter submenu by pressing ►

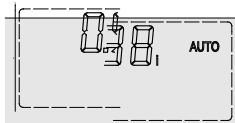


Measuring Values: (selected using ▲, ▼)

U_{LL} , U_{LN} , A (I), kW (P), kVar (Q), Δ kVar (Δ Q),
 kVA (S), THD U, 3. -19. Har. U, $\cos\varphi$, Λ (PF),
 $\phi\Lambda$ (APF), $\tan\varphi$ (tAn), Hz (F), °C(t), °Cmax (thi),
 operation hours (OPh)

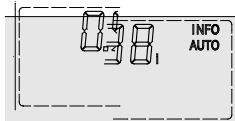


INFO Step Database:

size and derating of steps,
 switch cycles, steptype
 (see INFO Step Database)

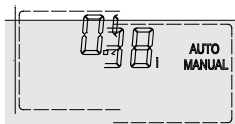

MANUAL Operation:

Selective switching in and out of control exits
 (see MANUAL Operation)

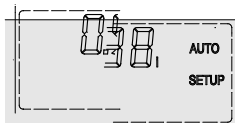


SETUP Parameters:

Nominal voltage (U_n), CT-ratio Ct, VT-ratio (Pt),
 Automatic Initialising (Ai), PFC ON/OFF/HOLD
 (PFC), target- $\cos\varphi$ (CP1), switch time delay
 (St), steptype (Out)
 (see SETUP Parameters)

INFO Step Database:


Attention: Actual state of control outputs is not shown!

Choose step by ▲, ▼ and enter by ► . The selected step is blinking. By using ▲, ▼ following information can be selected:




Actual Size of Capacitor

the value is rated to nominal voltage




Derating of Capacitor:

present kvar value / original kvar value in %



Switch Cycles of Contactor:

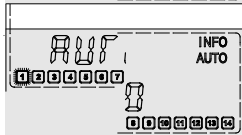

Step Setting:

AUTO: automatically switched step

Fon: step is permanently switched on

Foff: step is permanently switched off

AL: step used for fan control


FLty: defective step

MANUAL Operation:

For manual operation ► has to be pressed for 3 seconds!

Selection of step by ▲, ▼. Number of selected step is shown in line 2 of LCD. By pushing ► selected step will switch on / off.

Manual operation escape by pressing ◀.



Important Information:

- Menu Manual Operation cannot be opened in modes LIFO and Combi-Filter. (see Reference book!)
- Discharging lockout time is also active during manual operation (steps are locked in to allow for discharge time after switching-off)
- If voltage is out of tolerance all steps are disconnected.
- THD U-alarm and over temperature alarms will prevent steps switching in on manual mode.
- Only steps with step type AUTO can be switched!
- After leaving manual operation menu, relay switches to the actual load.

SETUP Parameters:

Choosing SETUP, sub menu 100 is indicated. Pressing ► opens menu 100.
▲, ▼ menu 200-600 (protected by pin, see reference book)

Un Nominal voltage (very important!)

OV / UV monitoring, reference for step database.

Ct CT-ratio

indication of measuring values. (enables many measuring values)

Pt VT-ratio

important base for nominal voltage

AI Automatic Initialising

see wrong connection / AI

PFC PFC ON / OFF / HOLD

on, off, freezing of automatic pfc-correction

CP1 Target-cos ϕ

base for compensation target

St Switch time delay of each step

definition of speed of regulation

OUT Step type

definition of step type: AUTO, Fon, Foff, AL
reset of defective steps (FLty)

Wrong Connection / Ai - Automatic Initialising:

A pfc-relay demands correct connection of voltage and current (polarity and phase) to function correctly. If this is not the case, the connection must be corrected. As this is not always possible, BLR-CX is offering the following possibilities:

Manual Correction: SETUP / 200 see Reference book

Automatic Initialising: SETUP/ 100 / Ai

Ai is connecting and disconnecting all control exits several times by switching them on and off. This lasts several minutes! Exits which are not connected are designated as Foff (permanently off). Stepsizes are not detected by this function!

After Ai is complete, the BLR-CX has to be checked for correct operation!

Requirements for successful operation of Ai:

- voltage is within tolerance
- CT is connected (no simulation!)
- capacitor banks are installed and fuses are inserted

Possible problems for function of Ai:

- load variations
- small current signals (big CT-ratio, small stepsizes)

Failure indication Ai / Abrt:

Ai is aborted, as no clear result could be achieved, PFC = OFF.

Step Size Detection:

At each switching operation, step size is measured (except this function is not active SETUP / 300 see Reference book)

Setting of c/k value is not necessary. Switching sequence is carried out automatically by selecting capacitor steps with the most suitable kvar value to match the load requirement.

The recognised values are stored in a step data base. Loss of output of each capacitor step can be seen there.

If a step fails to function during the first 3 switching operations after a reset of the step data base, steptype **Foff** is set automatically.

Defective Steps:

When a step is switched 3 times in series without measured size, it is detected as defective and it is blocked for 24h.

Step state: flashing

Status: Flty, step is blocked

Failure analysis:

After commissioning, all steps have step type Foff:

Is short link of CT secondary removed?

Is position of CT correct?

Are all fuses present and in order?

In normal operation, one or more steps are flashing?

Check condition of fuses, contactors and capacitors of this faulty step.

Reset in SETUP / 100 / OUt or by re-start (interruption of supply voltage) of BLR-CX!

Alarms:

Settings of alarm system: SETUP / 500 see Reference book

- | | | |
|------------------|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| U | ALARM: | Voltage out of tolerance |
| I LO | ALARM: | Current < 15mA (check current path) |
| I Hi | ALARM: | Current > 6A. (CT rating is too small) |
| PFC | ALARM: | Target cannot be reached (check panel) |
| HAr | ALARM: | Limit of THD U is exceeded |
| StEP/FLtY | ALARM: | Defective steps |
| SPL/Nr | ALARM: | Derating of stepsize (< 70% of original size)
stepnumber and code are flashing in rotation |
| thi | ALARM: | Over temperature - disconnection of steps |
| OPH | ALARM: | max. operation hours are reached (maintenance) |
| OPC/Nr | ALARM: | max. switch cycles per step (maintenance)
stepnumber and code are flashing in rotation |
| AI/Abrt | ALARM: | Abort of automatic initialising
Start AI again at more quiet load conditions or do
manual setting of phase offset
(SETUP / 200 see Reference book) |

Factory Default Settings when delivered by Beluk

SETUP / 100 - for user

(open access-no password needed)

Important paramters

Un:	400V
Ct:	1
Pt:	1
Ai:	(no setting)
PFC:	ON
CP1:	1
St:	10s
OUt:	Auto

SETUP / 200 - MEASURING

(locked access - password needed)

201/nominal voltage:	400V
202/CT-ratio	1
203/VT-ratio:	1
204/tolerance voltage:	10%
205/Ph-Ph/Ph-N:	(automatic)
206/phase offset:	0°
207/Ai:	(no setting)
208/countdown with Ai:	NO
209/synchronising:	AUTO
210/temperature offset:	0°C

SETUP / 300 - CONTROL

(locked access - password needed)

301/sensitivity:	60%
302/target-cosφ1:	1.00
303/target-cosφ2:	i0.95
304/EXPORT cosφ2:	NO
305/switch time delay:	10s
306/St step exchange:	2s
307/step exchange:	YES
308/step recogn. off:	NO
309/lock defective steps:	YES
310/PFC:	ON
311/Algorithm:	Automatik
312/kvar offset:	0kvar
313/asymmetric St:	1
314/Qcap steps off:	NO

SETUP / 400 -STEP DATABASE

(locked access - password needed)

401/discharge lock time:	75s
402/nom. stepsize CT=1:	5var
403/step type:	Auto
404/switch cycles:	0

Factory settings from Beluk

SETUP / 500 - ALARM SETTINGS

(locked access - password needed)

501/Reset manual	NO
502/THD U alarm	NO
503/THD U limit	20%
504/THD steps off	NO
505/delay time THD, temp2	60s
506/l=0 freeze PFC	NO
507/maintenance alarm	NO
508/limit switch cycles	262k
509/limit operation hours	65.5k
510/target-cosφ2 by DI=1	NO
511/DI=1 when T1/T2 closed	NO
512/temperature alarm	NO
513/temp1 limit	30°C
514/temp2 limit	55°C
515/control alarm	NO
516/defective steps alarm	NO
517/derating alarm	NO

SETUP / 600 - RESET

(locked access - password needed)

601/factory settings
602/reset step database
603/reset operation hours
604/reset APF
605/reset max. temperature
606/reset alarm
607/info software version
608/change password

Technical Data:

Voltage:	90-550V, 1ph., 50/60Hz, 6VA
Current:	15mA-6A, 1ph., <1VA,
Control exits:	relay, N/C, common root 250V AC / 5A, 400V AC / 2A
Temperature measuring:	by plug-in thermistor
Alarm contact:	relay, voltfree, N/C operated, 250V AC / 5A, 400V AC / 2A
Fan control:	using of control exit
Interface:	TTL, rear (standard) optional: RS485 Modbus, USB
Ambient temperature:	operation: -20°V - 70°C storage: -40°C - 85°C
Humidity:	0% - 95%, without condensation
Overvoltage:	II, dirt class 3
Connection:	screw type, pluggable
Case:	front: instrument case plastic rear: metal
Protection:	front: IP50, (IP54 by using a gasket) rear: IP20
Weight:	ca. 0,6kg
Size:	144x144x58mm hwxwd cutout: 138 (+0,5) x 138 (+0,5)mm