

POWER UNIT

- Mounting and switch-on instructions -

Issued on 06/07/2020

R.01

- This manual is integrant and essential to the product. Carefully read the instructions contained herein as they provide important hints for use and maintenance safety.
- This device is to be used only for the purposes it has been designed to. Other uses should be considered improper and dangerous. The manufacturer is not responsible for possible damages caused by improper, erroneous and irrational uses.
- Enertronica Santerno S.p.A. is responsible for the product in its original setting.
- Any changes to the structure or operating cycle of the product must be performed or authorized by Enertronica Santerno S.p.A.
- Enertronica Santerno S.p.A. assumes no responsibility for the consequences resulting by the use of non-original spare-parts.
- Enertronica Santerno S.p.A. reserves the right to make any technical changes to this manual and to the product without prior notice. If printing errors or similar are detected, the corrections will be included in the new releases of the manual.
- The information contained herein is the property of Enertronica Santerno S.p.A. and cannot be reproduced. Enertronica Santerno S.p.A. enforces its rights on the drawings and catalogues according to the law.



Enertronica Santerno S.p.A.

Via della Concia, 7 – 40023 Castel Guelfo (BO) Italy

Tel. +39 0542 489711 – Fax +39 0542 489722

Contents

About this document	4
Safety instructions	6
Product information	9
Identification of the products	9
Features	10
Preparation	17
Dimensions	19
Electrical installation	33
Important notes	33
3-phase mains 400 V Connection diagram	34
Terminal data	35
Fusing data	36
3-phase mains connection 400 V "Light Duty"	37
Connection diagrams	37
Terminal data	37
Fusing data	37
3-phase mains 480 V Connection diagram	38
Terminal data	38
Fusing data	39
3-phase mains connection 480 V "Light Duty"	40
Connection diagrams	40
Terminal data	40
Fusing data	40
Connection to the IT system	41

Networks.....	44
CANopen	44
EtherCAT	45
EtherNet/IP	46
Modbus RTU	47
Modbus TCP	48
PROFIBUS	49
PROFINET	50
Functional safety.....	52
Commissioning.....	55
Important notes	55
Initial switch-on and functional test	56
Technical data	58
Standards and operating conditions.....	58
3-phase mains connection 400 V	60
3-phase mains connection 400 V "Light Duty"	63
3-phase mains connection 480 V	65
3-phase mains connection 480 V "Light Duty"	68

About this document



WARNING !

Read this documentation carefully before starting any work.

► Please observe the safety instructions!

Document description

Further documents

For certain tasks, information is available in further documents.

Document	Contents/topics
15V0132B100 Quick Reference Card	Brief information about operation and device properties of the product
15R0132B100 Commissioning document	Fundamental information for the installation and commissioning of the product
15W0132B101 "Functional safety" configuration document	Basic information on configuring "functional safety" of the product
15W0132B103 Configuration document	Basic information on project planning and ordering the product



Notations and conventions

This document uses the following conventions to distinguish different types of information:

Numeric notation		
	Decimal separator	Point The decimal point is always used. Example: 1 234.56
Text		
	Engineering tools	» « Software Example: »Engineer«, »Remote Sinus«
Icons		
	Page reference	¶ Reference to another page with additional information Example: ¶ 16 = see page 16
	Documentation reference	, Reference to another documentation with additional information Example: , 15Pxxx = see documentation 15Pxxx

Layout of the safety instructions



DANGER !

Indicates an extremely hazardous situation. Failure to comply with this instruction will result in severe irreparable injury and even death.



WARNING !

Indicates an extremely hazardous situation. Failure to comply with this instruction may result in severe irreparable injury and even death.



CAUTION !

Indicates a hazardous situation. Failure to comply with this instruction may result in slight to medium injury.



NOTICE

Indicates a material hazard. Failure to comply with this instruction may result in material damage.



Safety instructions

Disregarding the following basic safety measures and safety information may lead to severe personal injury and damage to property!

Observe all specifications of the corresponding documentation supplied. This is the precondition for safe and trouble-free operation and for obtaining the product features specified.

Please observe the specific safety information in the other sections!



DANGER !

Electrical voltage

Possible consequences: Death or severe injuries

- ▶ Any work on the inverter must only be carried out in the deenergised state.
- ▶ After switching off the mains voltage, wait for at least 3 min before you start working.

Basic safety instructions



DANGER !

Dangerous electrical voltage

Death or severe injuries from electric shock.

- ▶ Any work on the inverter must only be carried out in a deenergized state.
- ▶ After switching off the mains voltage, observe the signs on the product.

Personnel

The product must only be used by qualified personnel. IEC 60364 or CENELEC HD 384 define the skills of these persons:

- They are familiar with installing, mounting, commissioning, and operating the product.
- They have the corresponding qualifications for their work.
- They know and can apply all regulations for the prevention of accidents, directives, and laws applicable at the place of use.

Process engineering

The procedural notes and circuit details described are only proposals. It is up to the user to check whether they can be adapted to the particular applications. Santerno does not take any responsibility for the suitability of the procedures and circuit proposals described.

Device protection

- The maximum test voltage for insulation tests between a control potential of 24 V and PE must not exceed 110 V DC (EN 61800-5-1).

Application as directed

- The product must only be operated under the operating conditions prescribed in this documentation.
- The product meets the protection requirements of 2014/35/EU: Low-Voltage Directive.
- The product is not a machine in terms of 2006/42/EU: Machinery Directive.
- Commissioning or starting the operation as directed of a machine with the product is not permitted until it has been ensured that the machine meets the regulations of the EU Directive 2006/42/EU: Machinery Directive; observe EN 60204-1.
- Commissioning or starting operation as directed is only permissible if the EMC Directive 2014/30/EU is complied with.
- The harmonised standard EN 61800-5-1 is applied.
- The product is not a household appliance, but is only designed as a component for commercial or professional use in terms of EN 61000-3-2.
- The product can be used according to the technical data if drive systems have to comply with categories according to EN 61800-3.
In residential areas, the product may cause EMC interferences. The operator is responsible for taking interference suppression measures.
- The product must only be actuated with motors that are suitable for the operation with inverters.

The user is not allowed to change inverters that come with integrated safety technology.

The safety module must not be removed. If the safety module is defective, the inverter has to be replaced.

Handling

- Never commission the product in the event of visible damage.
- The product must never be technically modified.
- Never commission the product before assembly has been completed.
- The product must never be operated without required covers.
- Establish, separate and change all electrical connections only in deenergised state!



Safety instructions

Residual hazards

Residual hazards

Even if notes given are taken into consideration and protective measures are implemented, the occurrence of residual risks cannot be fully prevented.

The user must take the residual hazards mentioned into consideration in the risk assessment for his/her machine/system.

If the above is disregarded, this can lead to severe injuries to persons and damage to property!

Product

Observe the warning labels on the product!

Icon	Description
	Electrostatic sensitive devices: Before working on the product, the staff must ensure to be free of electrostatic charge!
	Dangerous electrical voltage Before working on the product, make sure there is no voltage applied to the power terminals! After mains disconnection, the power terminals will still carry the hazardous electrical voltage for the time given next to the symbol!
	High leakage current: Carry out fixed installation and PE connection in compliance with EN 61800-5-1 or EN 60204-1!
	Hot surface: Use personal protective equipment or wait until the device has cooled down!

Motor protection

With some settings of the inverter, the connected motor can be overheated.

- E. g. by longer operation of self-ventilated motors at low speed.
- E. g. by longer operation of the DC-injection brake.

Protection of the machine/system

Drives can reach dangerous overspeeds.

- E. g. by setting high output frequencies in connection with motors and machines not suitable for this purpose.
- The inverters do not provide protection against such operating conditions. For this purpose, use additional components.

Switch contactors in the motor cable only if the controller is inhibited.

- Switching while the inverter is enabled is only permissible if no monitoring functions are activated.

Motor

If there is a short circuit of two power transistors, a residual movement of up to $180^\circ/\text{number of pole pairs}$ can occur at the motor! (e. g. 4-pole motor: residual movement max. $180^\circ/2 = 90^\circ$).

Degree of protection - protection of persons and device protection

- Information applies to the mounted and ready-for-use state.
- Information does not apply to the wire range of the terminals.
 - Terminals that are not wired have low protection against physical contact.
 - Terminals for large cable cross-sections have lower classes of protection, e. g. from 15 kW IP10 only.

Product information

Identification of the products

In tables, the first 15 digits of the corresponding product code are used to identify the products:

SINUS S XXXX 4T POWER UNIT

Product code:

Product family: **SINUS S**
Model: **0001 to 0034**
Voltage class: **4T: 400 ÷ 480 Vac / 3-phase**
Part: **Power Unit**

Example:

Product code	Meaning
SINUS S 0007 4T POWER UNIT	Inverter of the SINUS S product family Model 0007 Voltage Class 400 ÷ 480 Vac / 3-phase


Example:

Product code	Meaning
SINUS S 0034 4T POWER UNIT	Inverter of the SINUS S product family Model 0034 Voltage Class 400 ÷ 480 Vac / 3-phase

Features


SIZE 1

SINUS 0001 4T POWER UNIT: 0.37 kW

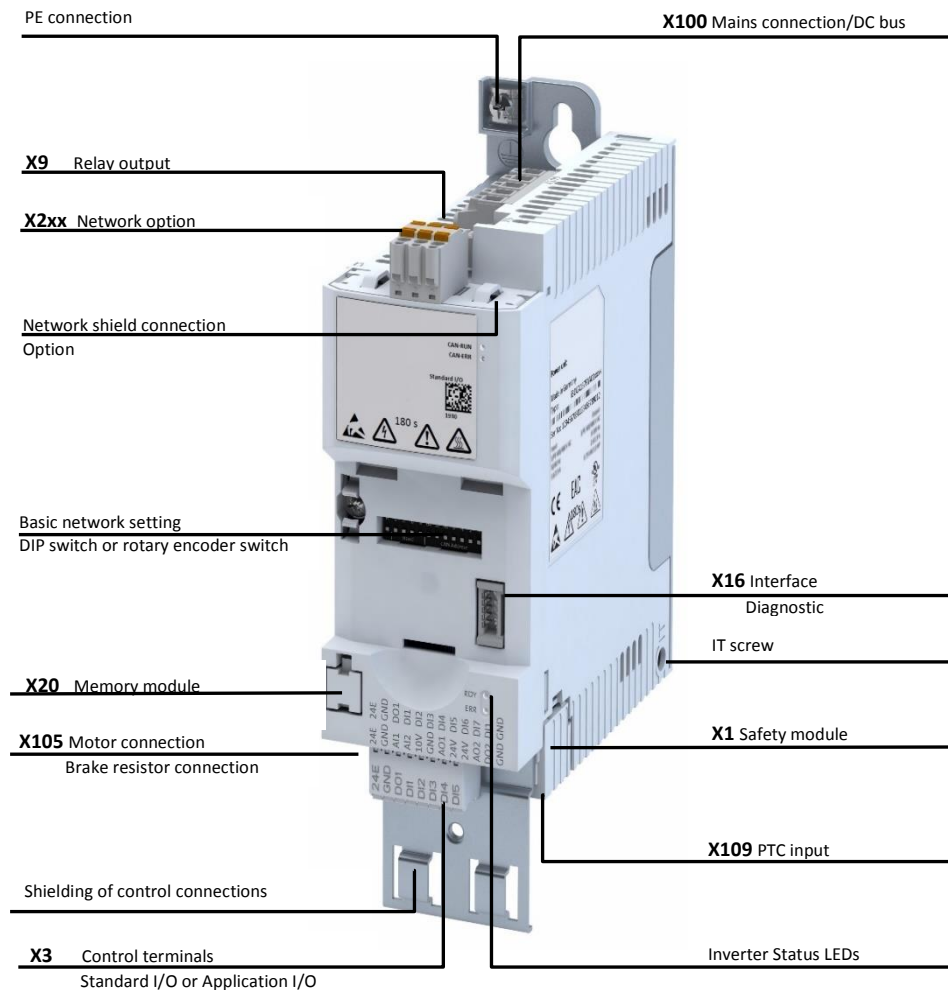

SIZE 2

SINUS 0002 4T POWER UNIT: 0.75 kW

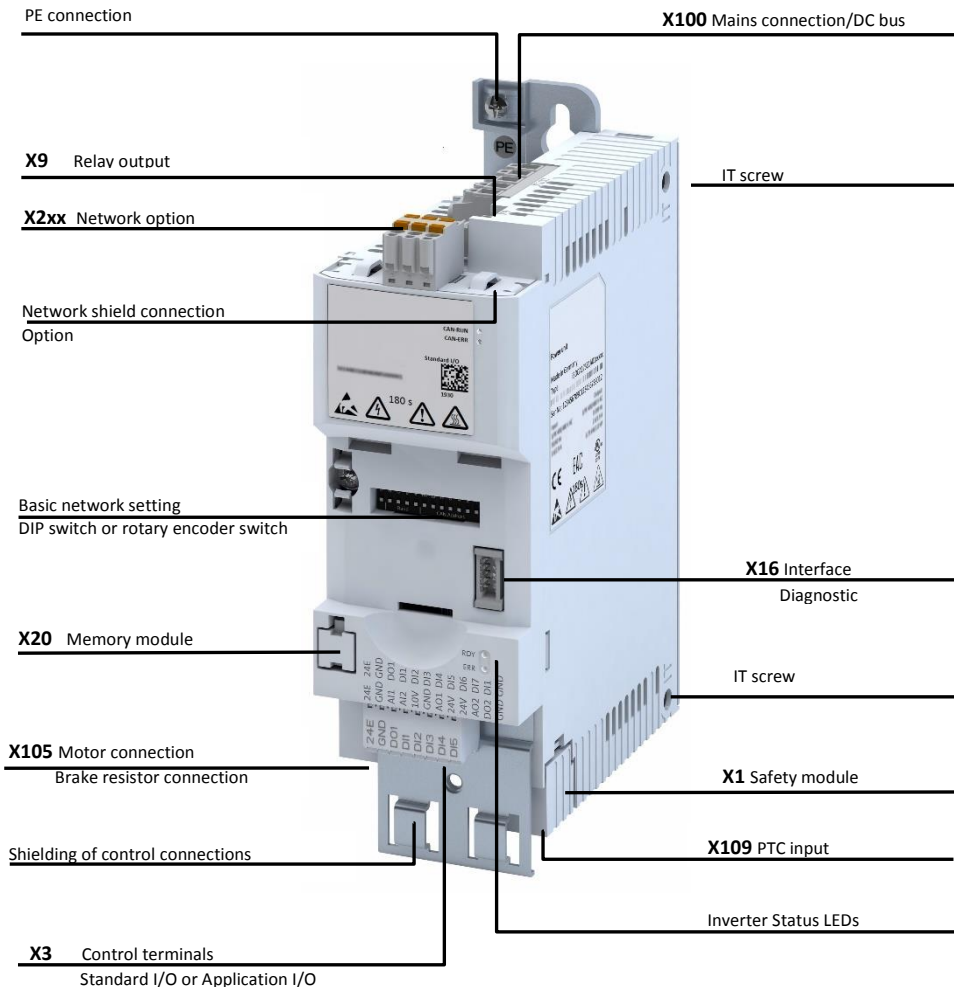


SIZE 3

SINUS 0003 4T POWER UNIT: 1.5 kW

SINUS 0005 4T POWER UNIT: 2.2 kW


SINUS 0006 4T POWER UNIT: 3.0 kW HD

SINUS 0007 4T POWER UNIT: 4.0 kW HD

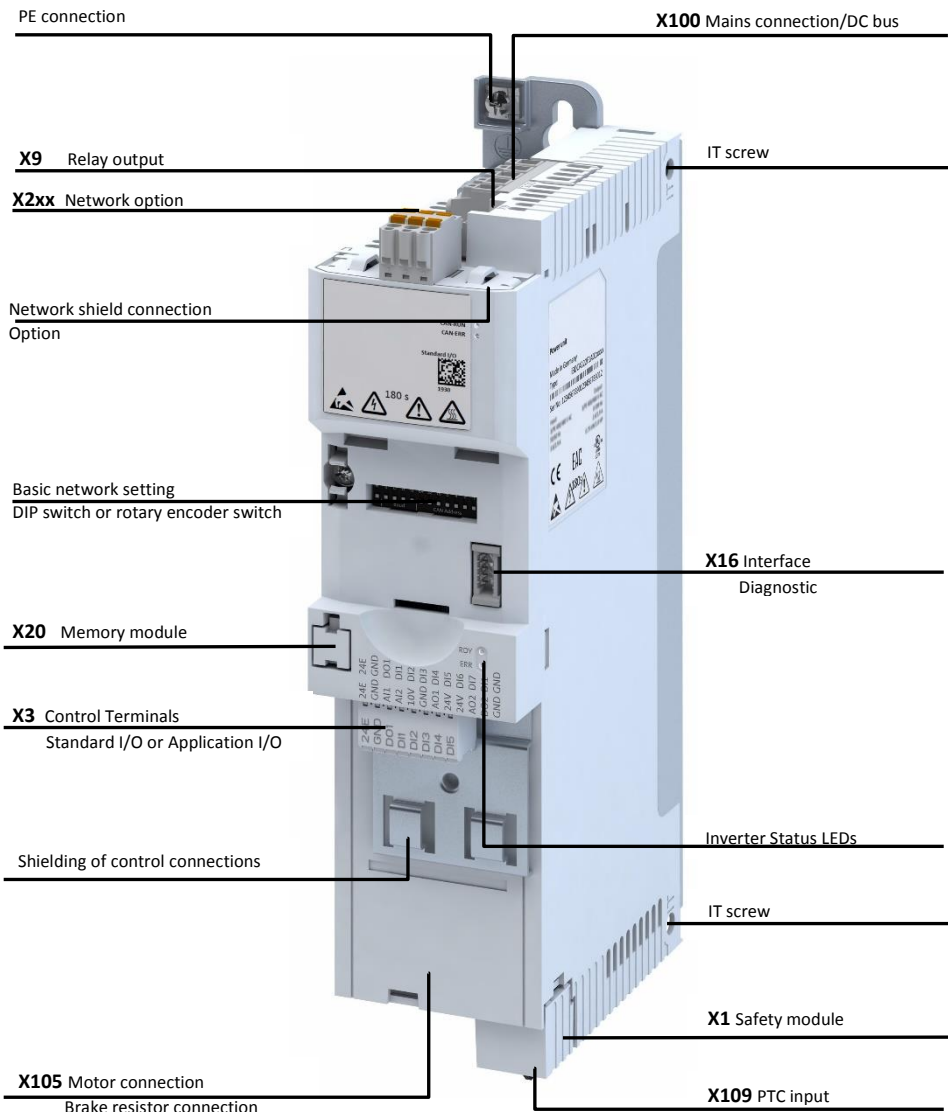

SIZE 4

SINUS 0011 4T POWER UNIT: 5.5 kW HD

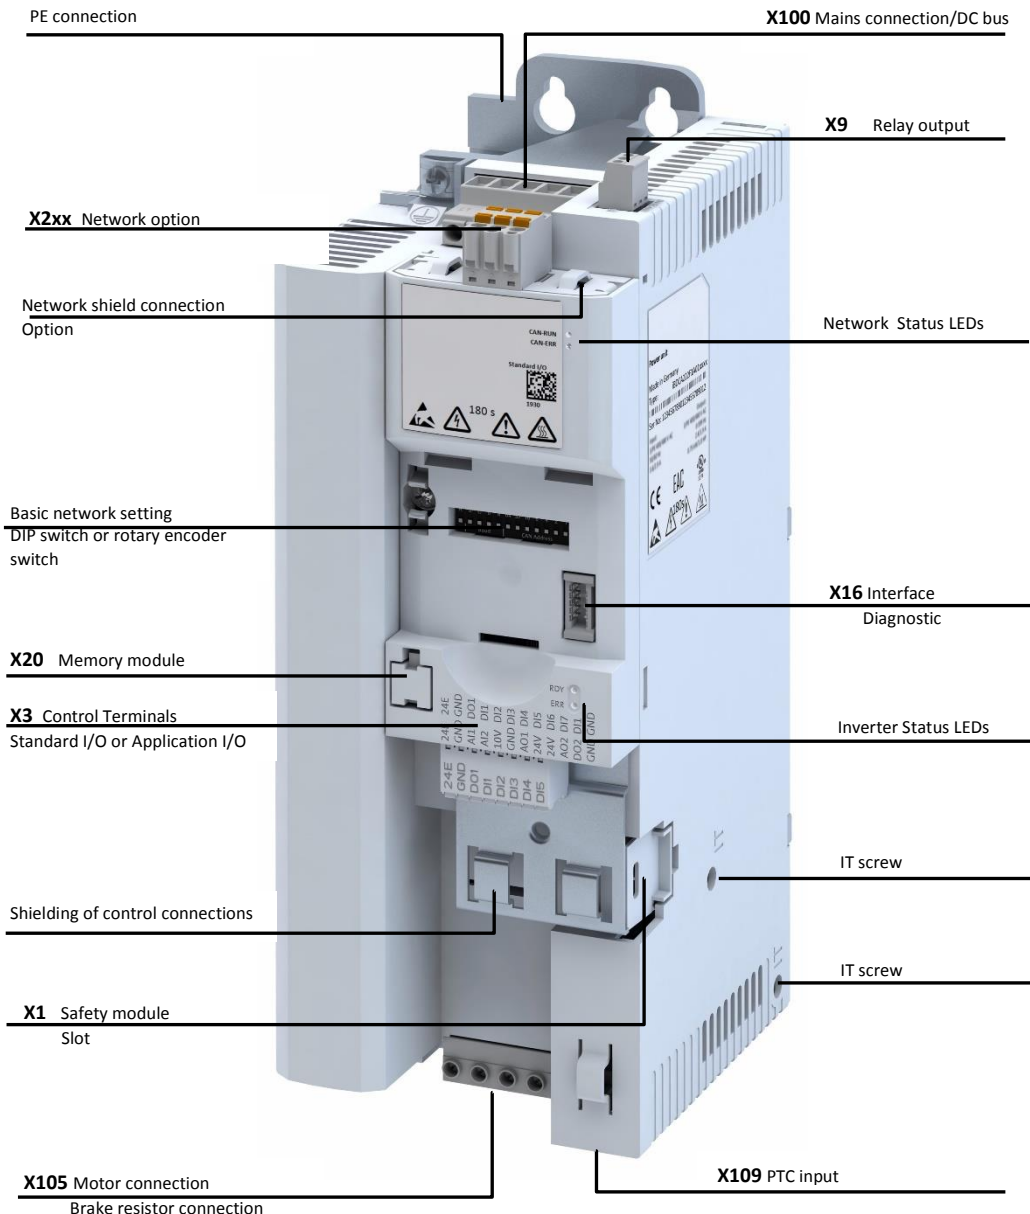

SIZE 5

SINUS 0014 4T POWER UNIT: 7.5 kW

SINUS 0017 4T POWER UNIT: 11.0 kW

PE connection

X100 Mains connection/DC bus

X2xx Network option

X9 Relay output

Network shield connection
Option

Network Status LEDs

Basic network setting
DIP switch
or rotary encoder switch

X16 Interface
Diagnostic

X20 Memory module

Inverter Status LEDs

X3 Control Terminals
Standard I/O
or Application I/O

Shielding of control
connections

IT screw

X1 Safety module
Slot

IT screw

X105 Motor connection

X109 PTC input

Brake resistor connection

www.famcocorp.com

E-mail: info@famcocorp.com

@famco_group

Tel: +91-48 0000 49


Fax: +91-48 9994 642

SIZE 6

SINUS 0020 4T POWER UNIT: 15.0 kW HD


SINUS 0025 4T POWER UNIT: 18.5 kW HD

SINUS 0030 4T POWER UNIT: 22.0 kW HD

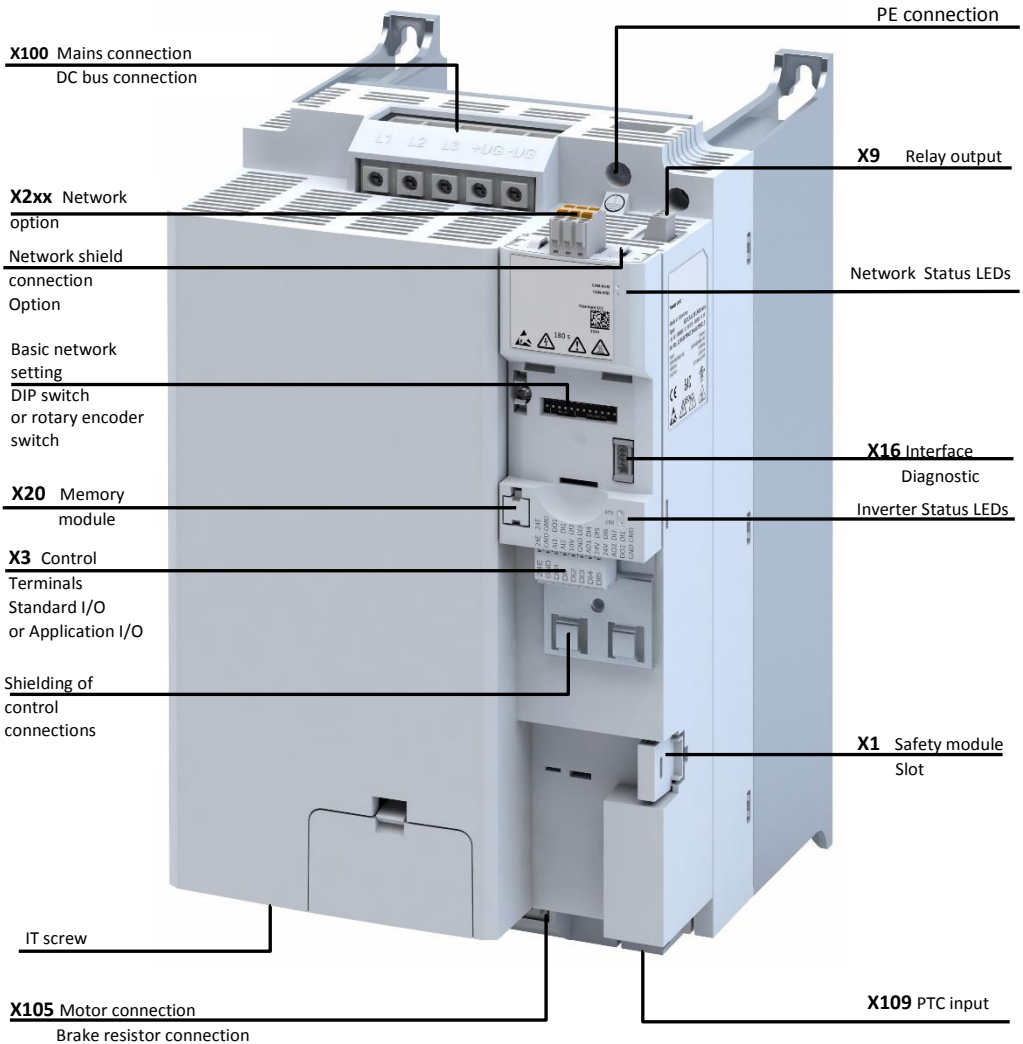

SIZE 7


SINUS 0034 4T POWER UNIT: 30.0 kW HD

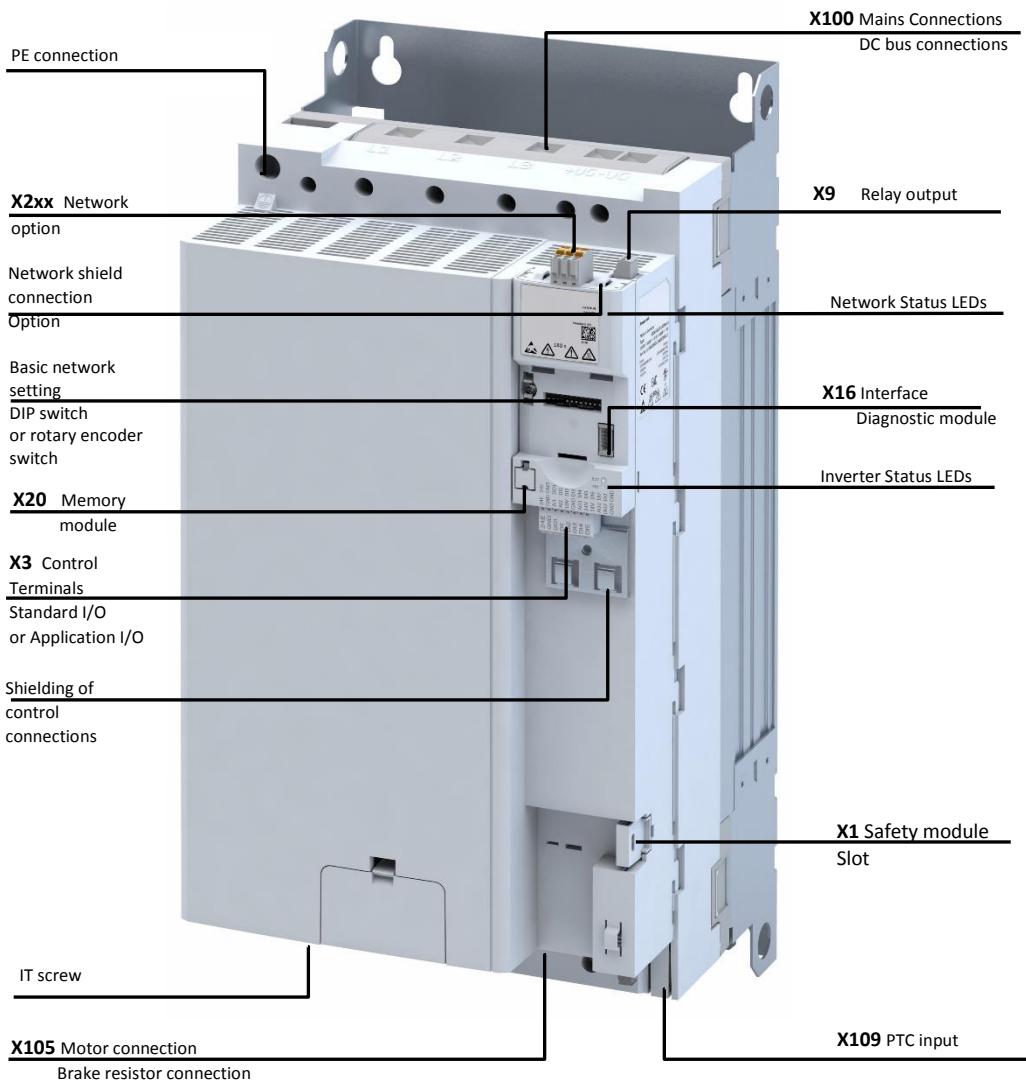

Preparation

Installation of shield connection sheet for the motor cable 0.25 kW to 4 kW (optional accessories)

1

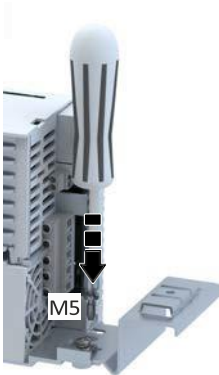

3



Together with the inverter, the shield connection sheet is screwed onto the mounting plate.

Installation of shield connection sheet for the motor cable 5.5 kW (optional accessories)


1




3




Installation of shield connection sheet for the motor cable 7.5 kW to 11 kW (optional accessories)

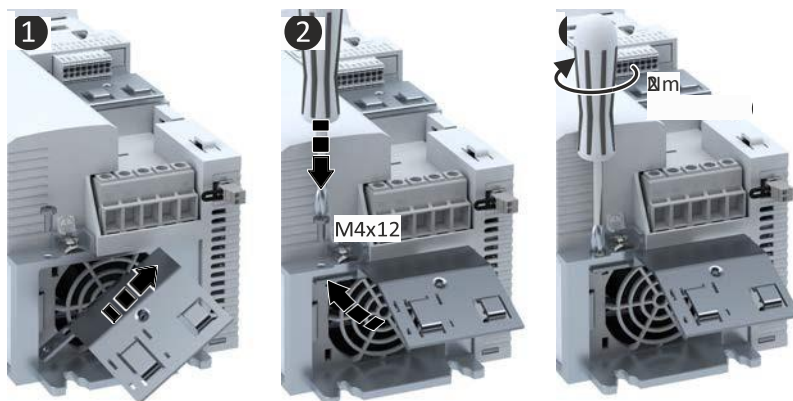

Installation of shield connection sheet for
motor cable 15 kW to 22 kW

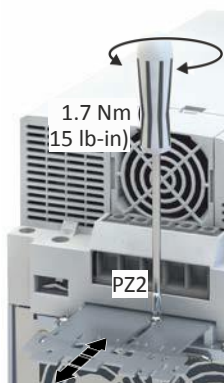

Installation of shield connection sheet for motor
cable 30 kW

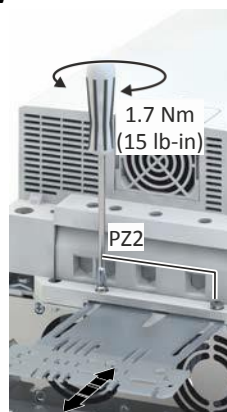







FAMCO
هایپر صنعت

Dimensions

SIZE 1 - 0.37 kW

The dimensions in mm apply to:

0.37 kW	SINUS S 0001 4T
---------	-----------------

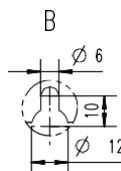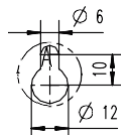

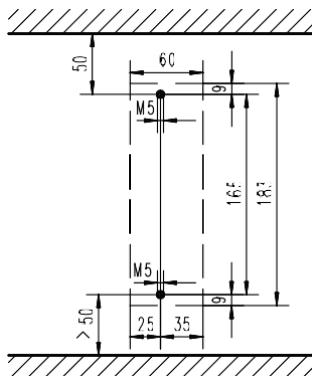
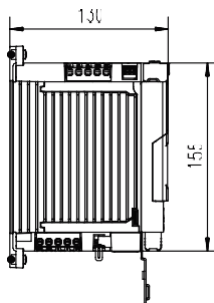
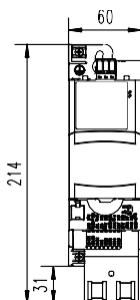


8800263

SIZE 1 - 0.5 hp

The dimensions in inch apply to:

0.5 hp	SINUS S 0001 4T
--------	-----------------

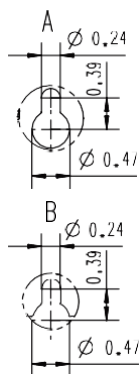

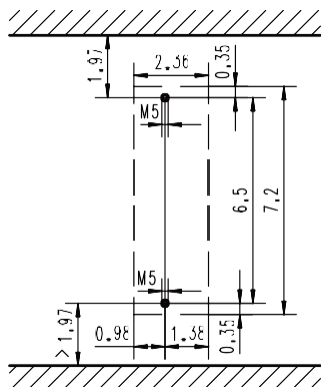
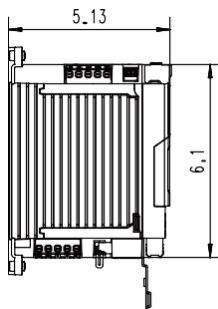
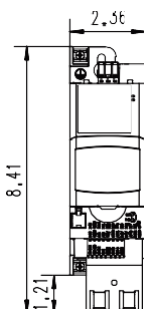


8800298

SIZE 2 - 0.75 kW

The dimensions in mm apply to:

0.75 kW	SINUS S 0002 4T
---------	-----------------

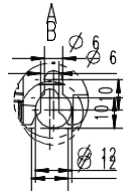

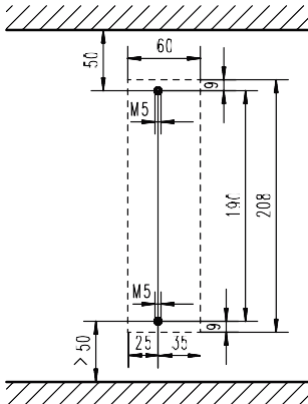
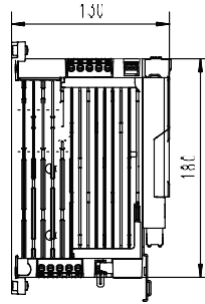
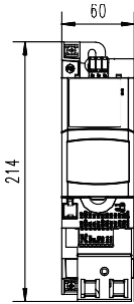


8800264

SIZE 2 - 1 hp

The dimensions in inch apply to:

1 hp	SINUS S 0002 4T
------	-----------------

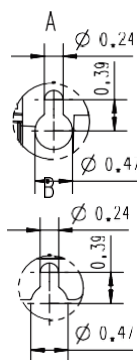

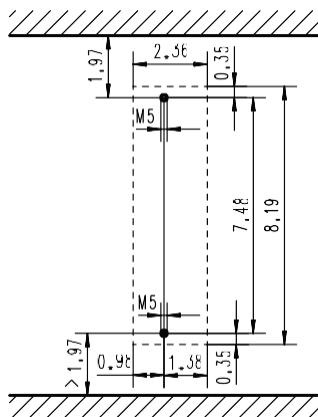
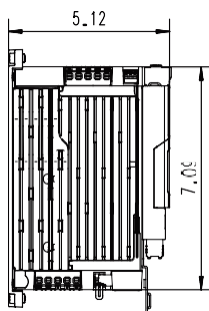
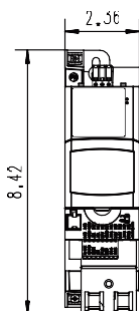


8800299

SIZE 3 - 1.5 kW ... 4 kW HD

The dimensions in mm apply to:

1.5 kW	SINUS S 0003 4T
2.2 kW	SINUS S 0005 4T
3 kW HD	SINUS S 0006 4T
4 kW HD	SINUS S 0007 4T

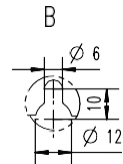
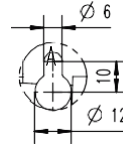
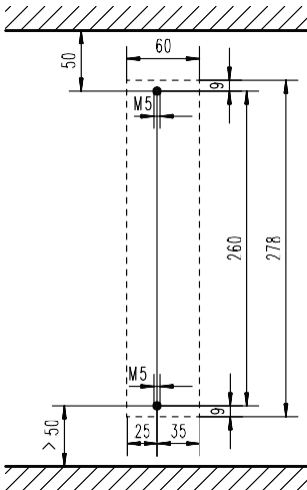
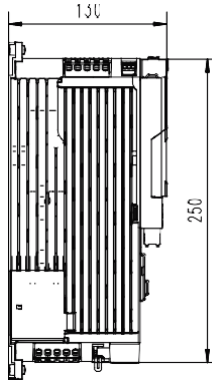
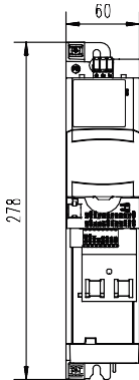


8800265

SIZE 3 - 2 hp ... 5.5 hp HD

The dimensions in inch apply to:

2 hp	SINUS S 0003 4T
3 hp	SINUS S 0005 4T
4 hp HD	SINUS S 0006 4T
5.5 hp HD	SINUS S 0007 4T

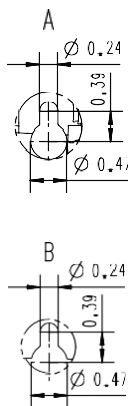

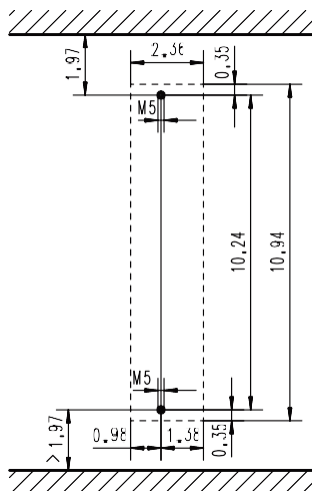
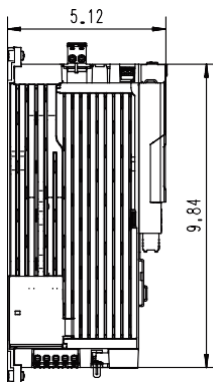
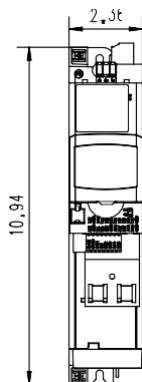


8800300

SIZE 4 - 5.5 kW HD

The dimensions in mm apply to:

5.5 kW HD	SINUS S 0011 4T
-----------	-----------------

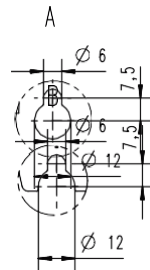

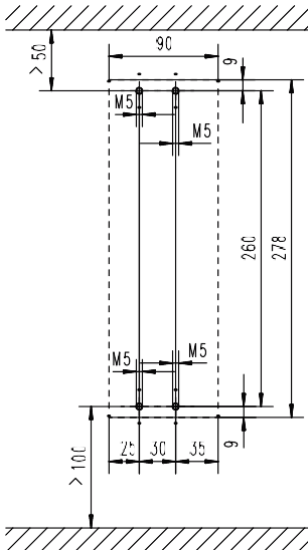
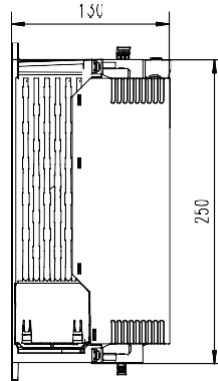
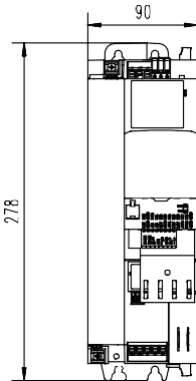


8800288

SIZE 4 - 7.5 hp HD

The dimensions in inch apply to:

7.5 hp HD	SINUS S 0011 4T
-----------	-----------------

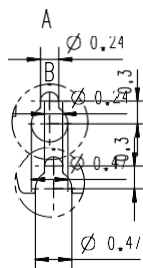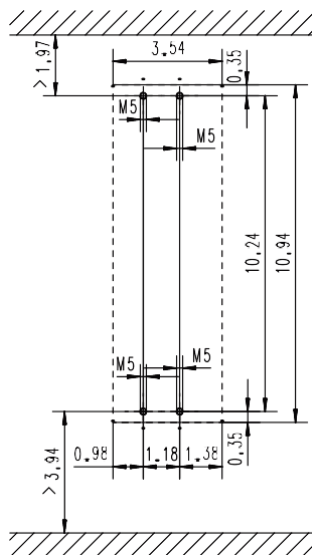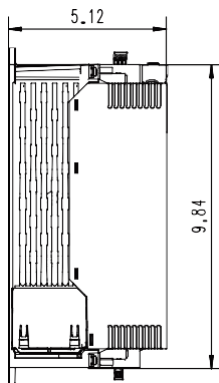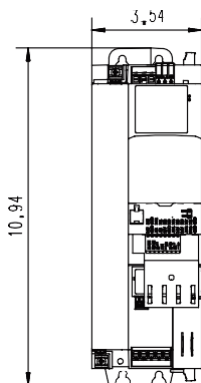


8800302

SIZE 5 - 7.5 kW HD ... 11 kW HD

The dimensions in mm apply to:

7.5 kW HD	SINUS S 0014 4T
11 kW HD	SINUS S 0017 4T

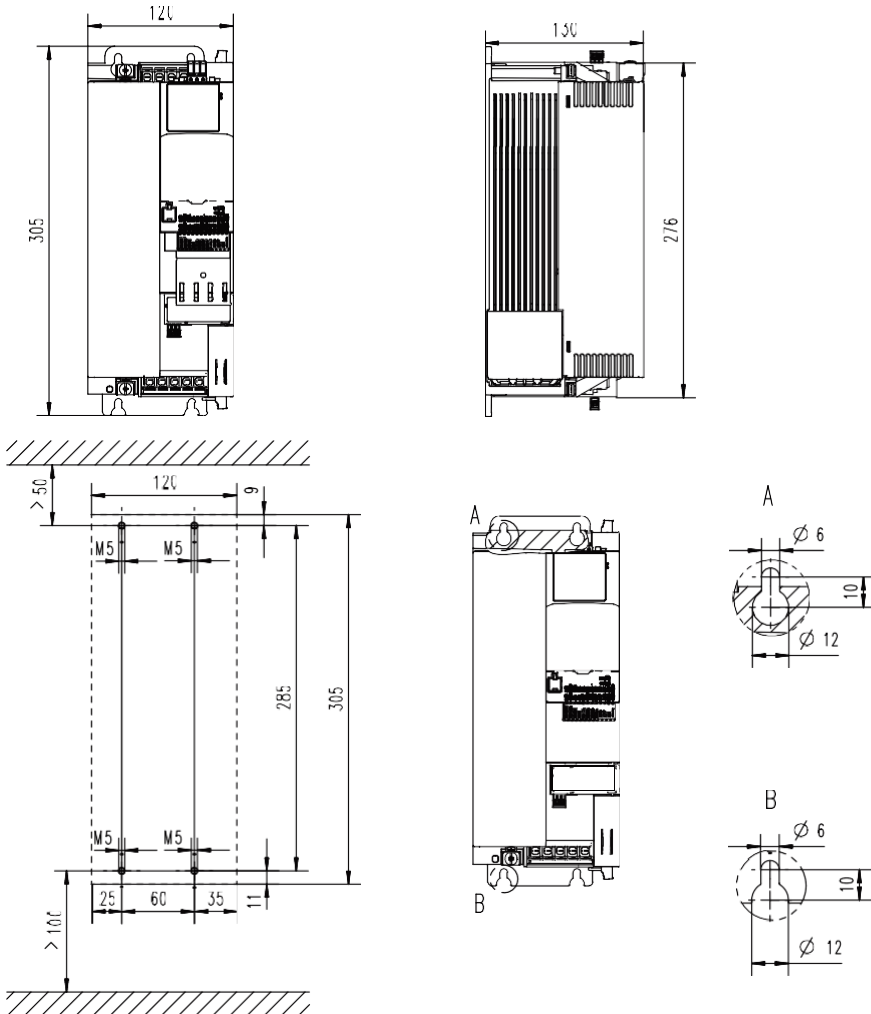


8800296

SIZE 5 - 10 hp HD ... 15 hp HD

The dimensions in inch apply to:

10 hp HD	SINUS S 0014 4T
15 hp HD	SINUS S 0017 4T




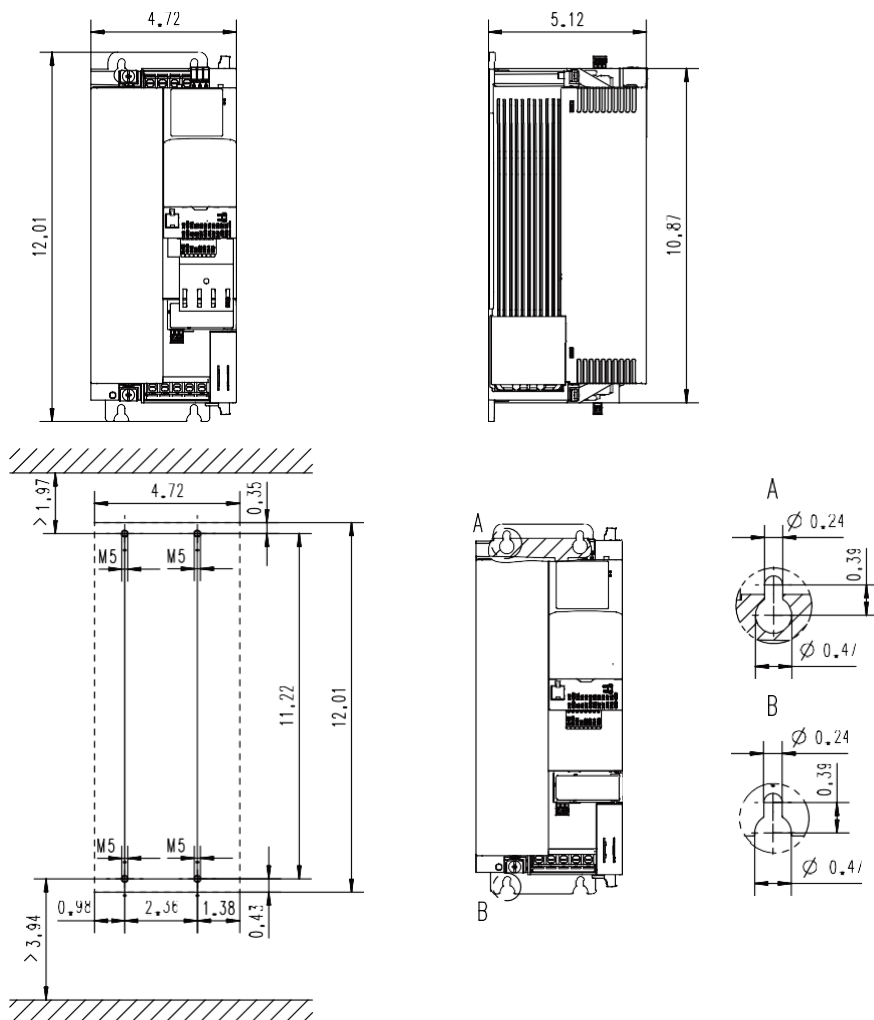


8800303

SIZE 6 - 15 kW HD ... 22 kW HD

The dimensions in mm apply to:

15 kW HD	SINUS S 0020 4T
18.5 kW HD	SINUS S 0025 4T
22 kW HD	SINUS S 0030 4T

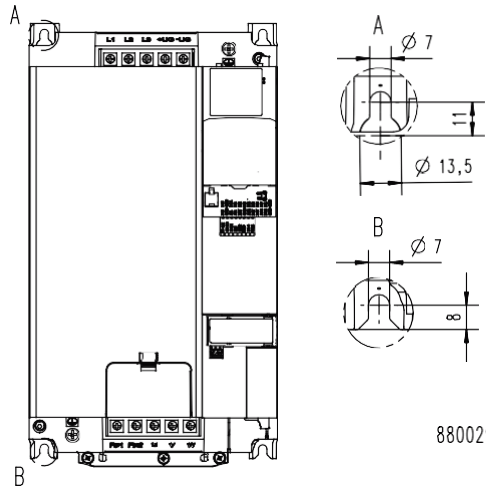
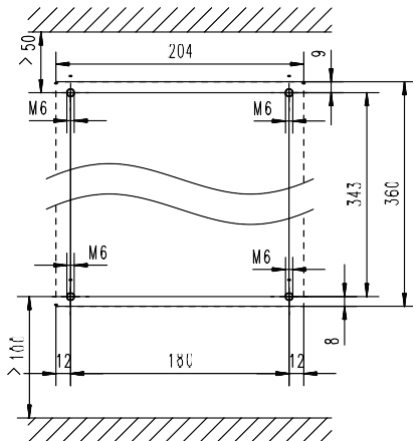
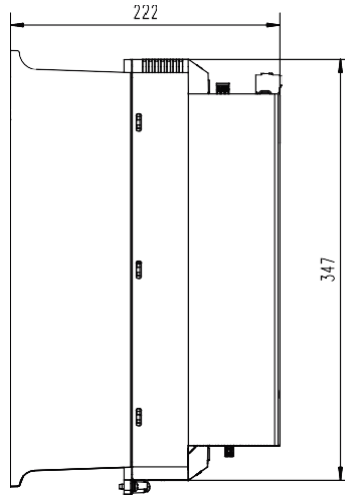
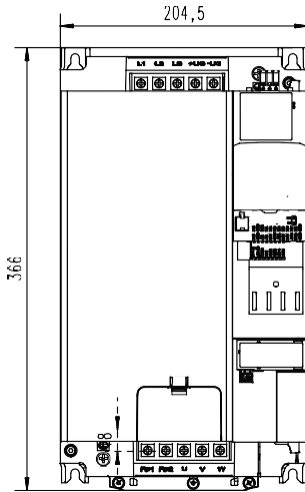


8800297

SIZE 6 - 20 hp HD ... 30 hp HD

The dimensions in inch apply to:

20 hp HD	SINUS S 0020 4T
25 hp HD	SINUS S 0025 4T
30 hp HD	SINUS S 0030 4T

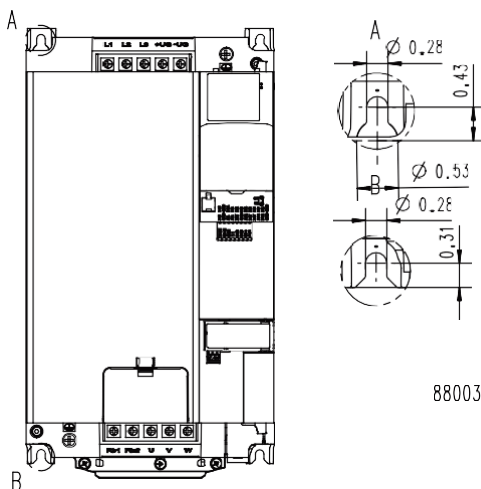
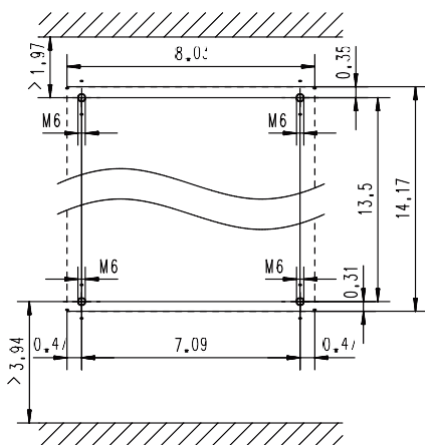
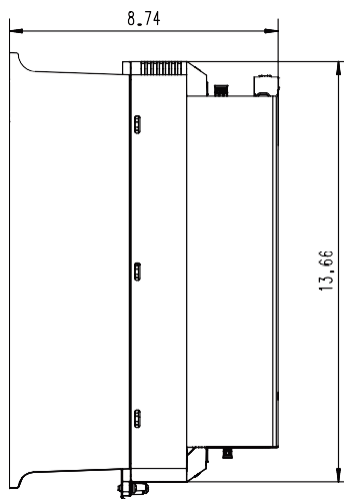
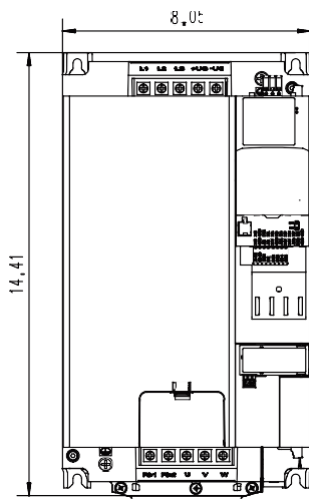


8800304

SIZE 7 - 30 kW HD

The dimensions in mm apply to:

30 kW HD	SINUS S 0034 4T
----------	-----------------

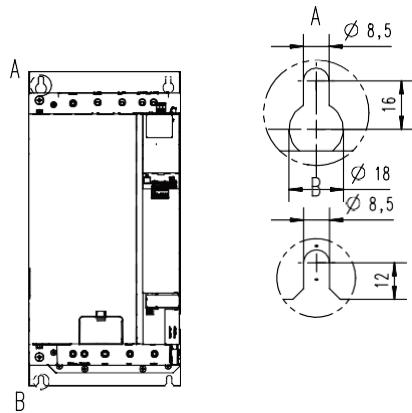
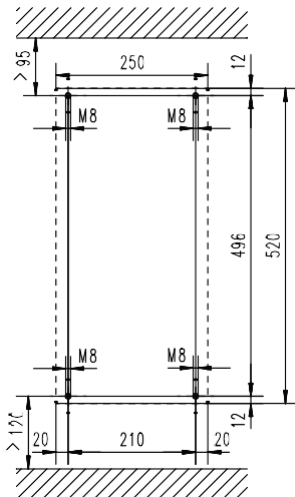
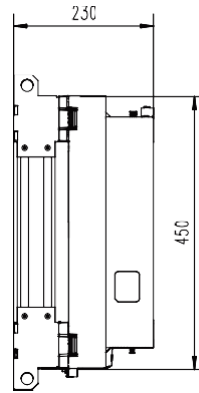
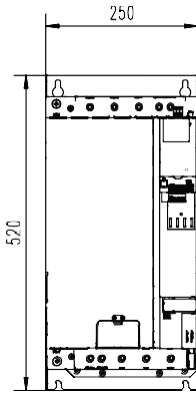


8800313

SIZE 7 - 40 hp HD

The dimensions in inch apply to:

40 hp HD	SINUS S 0034 4T
----------	-----------------

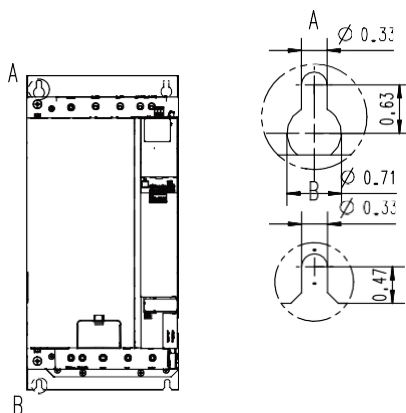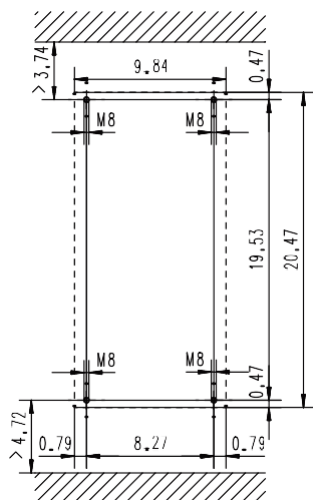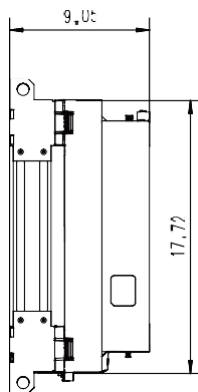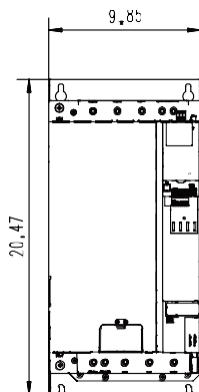

8800313

Electrical installation

Important notes



DANGER !

Electrical voltage

Possible consequences: Death or severe injuries

- Any work on the inverter must only be carried out in the de-energised state.
- After switching off the mains voltage, wait for at least 3 min before you start working.



DANGER !

Dangerous electrical voltage

The leakage current against earth (PE) is $> 3.5 \text{ mA AC}$ or $> 10 \text{ mA DC}$.

Possible consequences: Death or severe injuries when touching the device in the event of an error.

- Implement the measures requested in EN 61800-5-1 or EN 60204-1. Especially:
- Fixed installation
- The PE connection must comply with the standards (PE conductor diameter $\geq 10 \text{ mm}^2$ or use a double PE conductor)

3-phase mains 400 V Connection diagram

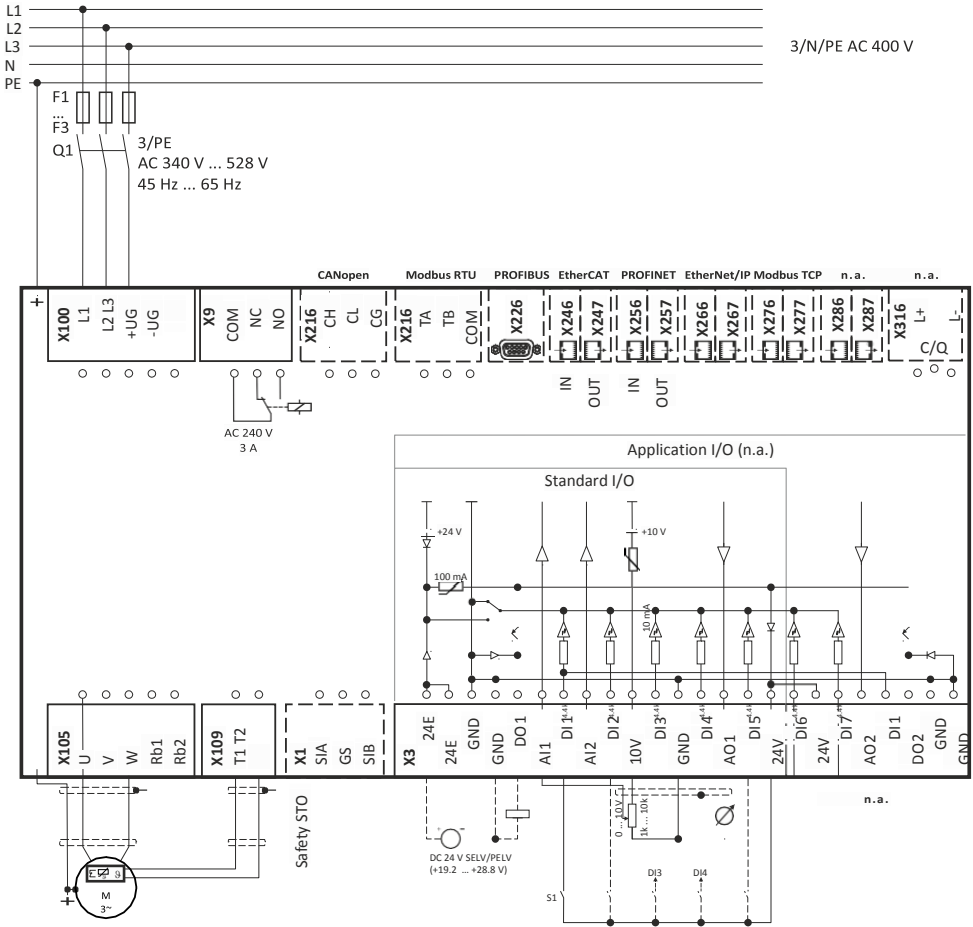


Fig. 13: Wiring example

S1 Start/Stop
Fx Fuses

Q1 Mains contactor
--- Dashed line = options

FAMCO
هایپر صنعت

Terminal data

Inverter		SINUS S 0001 SINUS S 0002 SINUS S 0003 SINUS S 0005	SINUS S 0006 SINUS S 0007	SINUS S 0011	SINUS S 0014 SINUS S 0017	SINUS S 0020 SINUS S 0025	SINUS S 0030
Connection		Mains connection X100					
Connection type		Pluggable screw terminal	Screw terminal				
Max. cable cross-section	mm ²	2.5	6	6	16	35	50
Stripping length	mm	8	9	9	11	18	19
Tightening torque	Nm	0.5	0.5	0.5	1.2	3.8	4
Required tool		0.5 x 3.0	0.6 x 3.5		0.8 x 4.0	0.8 x 5.5	Hexagon socket 5

Inverter		SINUS S 0001 SINUS S 0002 SINUS S 0003	SINUS S 0006 SINUS S 0007	SINUS S 0011 SINUS S 0014 SINUS S 0017	SINUS S 0020 SINUS S 0025 SINUS S 0030 SINUS S 0034
Connection		PE connection			
Connection type		PE screw			
Max. cable cross-section	mm ²	6	6	16	25
Stripping length	mm	10	10	11	16
Tightening torque	Nm	2	2	3.4	4
Required tool		Torx 20		PZ2	

Inverter		SINUS S 0001 SINUS S 0002 SINUS S 0003 SINUS S 0005	SINUS S 0006 SINUS S 0007	SINUS S 0011	SINUS S 0014 SINUS S 0017	SINUS S 0020 SINUS S 0025 SINUS S 0030
Connection		Motor connection X105				
Connection type		Pluggable screw terminal	Screw terminal			
Max. cable cross-section	mm ²	2.5	6	6	16	35
Stripping length	mm	8	9	9	11	18
Tightening torque	Nm	0.5	0.5	0.5	1.2	3.8
Required tool		0.5 x 3.0	0.6 x 3.5		0.8 x 4.0	0.8 x 5.5

Inverter	kW	SINUS S 0034
Connection		Motor connection X105
Connection type		Screw terminal
Max. cable cross-section	mm ²	50
Stripping length	mm	19
Tightening torque	Nm	4
Required tool		Hexagon socket 5

Fusing data

EN 60204-1

Inverter	Fuse		Circuit breaker		Earth-leakage circuit breaker
	Characteristic	Max. rated current	Characteristic	Max. rated current	
		A		A	
SINUS S 0001	gG/gL or gRL	10	B	10	≥ 30 mA, type B
SINUS S 0002	gG/gL or gRL	10	B	10	≥ 30 mA, type B
SINUS S 0003	gG/gL or gRL	16	B	16	≥ 30 mA, type B
SINUS S 0005	gG/gL or gRL	16	B	16	≥ 30 mA, type B
SINUS S 0006	gG/gL or gRL	25	B	25	≥ 300 mA, type B
SINUS S 0007	gG/gL or gRL	25	B	25	≥ 300 mA, type B
SINUS S 0011	gG/gL or gRL	25	B	25	≥ 300 mA, type B
SINUS S 0014	gG/gL or gRL	32	B	32	≥ 300 mA, type B
SINUS S 0017	gG/gL or gRL	32	B	32	≥ 300 mA, type B
SINUS S 0020	gG/gL or gRL	63	B	63	≥ 300 mA, type B
SINUS S 0025	gG/gL or gRL	63	B	63	≥ 300 mA, type B
SINUS S 0030	gG/gL or gRL	63	B	63	≥ 300 mA, type B
SINUS S 0034	gG/gL or gRL	80	B	80	≥ 300 mA, type B

3-phase mains connection 400 V "Light Duty"

Connection diagrams

See "3-phase mains connection 400 V".

Terminal data

See "Terminal data".

Fusing data

EN 60204-1

Inverter	Fuse		Circuit breaker		Earth-leakage circuit breaker
	Characteristic	Max. rated current	Characteristic	Max. rated current	
		A		A	
SINUS S 0006	gG/gL or gRL	25	B	25	≥ 300 mA, type B
SINUS S 0007	gG/gL or gRL	25	B	25	≥ 300 mA, type B
SINUS S 0011	gG/gL or gRL	25	B	25	≥ 300 mA, type B
SINUS S 0014	gG/gL or gRL	32	B	32	≥ 300 mA, type B
SINUS S 0017	gG/gL or gRL	32	B	32	≥ 300 mA, type B
SINUS S 0020	gG/gL or gRL	63	B	63	≥ 300 mA, type B
SINUS S 0025	gG/gL or gRL	63	B	63	≥ 300 mA, type B
SINUS S 0030	gG/gL or gRL	63	B	63	≥ 300 mA, type B
SINUS S 0034	gG/gL or gRL	80	B	80	≥ 300 mA, type B

3-phase mains 480 V Connection diagram

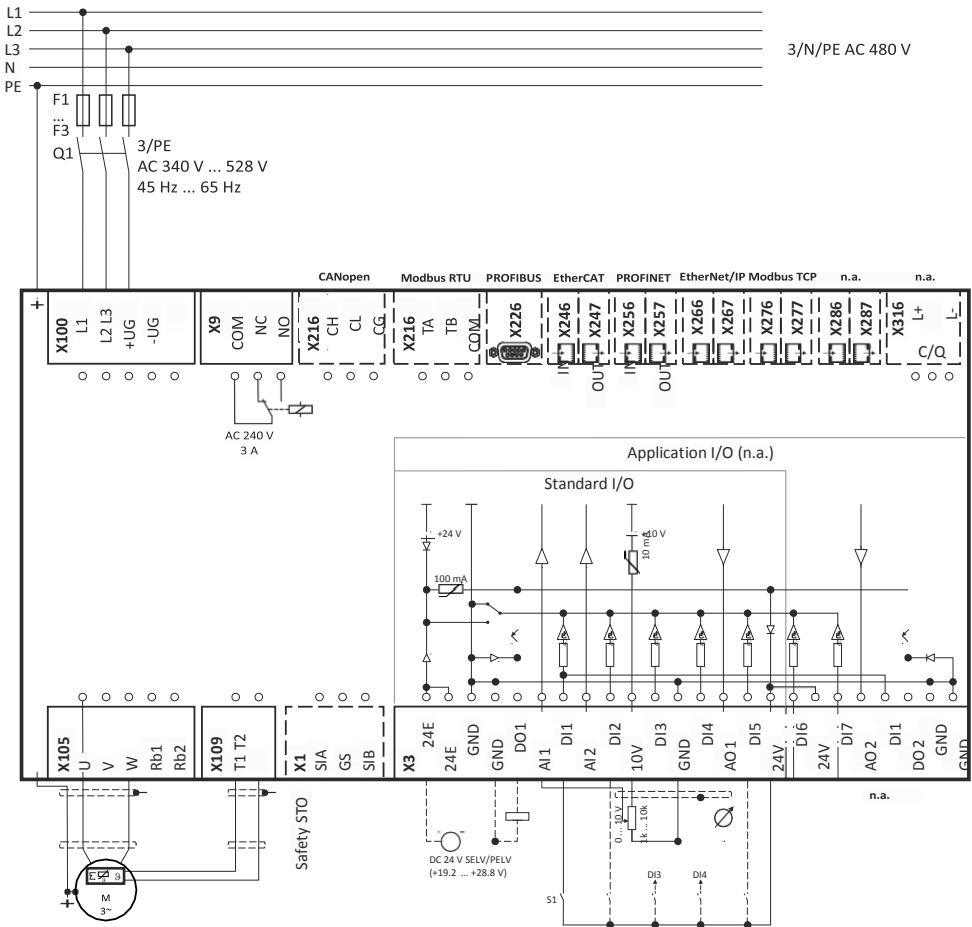


Fig. 14: Wiring example

S1 Start/Stop
Fx Fuses

FAMCO
هایپر صنعت

Q1 Mains contactor
--- Dashed line = options

Terminal data

See "Terminal data".

Fusing data

EN 60204-1

Inverter	Fuse		Circuit breaker		Earth-leakage circuit breaker
	Characteristic	Max. rated current	Characteristic	Max. rated current	
		A		A	
SINUS S 0001	gG/gL or gRL	10	B	10	≥ 30 mA, type B
SINUS S 0002	gG/gL or gRL	10	B	10	≥ 30 mA, type B
SINUS S 0003	gG/gL or gRL	16	B	16	≥ 30 mA, type B
SINUS S 0005	gG/gL or gRL	16	B	16	≥ 30 mA, type B
SINUS S 0006	gG/gL or gRL	25	B	25	≥ 300 mA, type B
SINUS S 0007	gG/gL or gRL	25	B	25	≥ 300 mA, type B
SINUS S 0011	gG/gL or gRL	25	B	25	≥ 300 mA, type B
SINUS S 0014	gG/gL or gRL	32	B	32	≥ 300 mA, type B
SINUS S 0017	gG/gL or gRL	32	B	32	≥ 300 mA, type B
SINUS S 0020	gG/gL or gRL	63	B	63	≥ 300 mA, type B
SINUS S 0025	gG/gL or gRL	63	B	63	≥ 300 mA, type B
SINUS S 0030	gG/gL or gRL	63	B	63	≥ 300 mA, type B
SINUS S 0034	gG/gL or gRL	80	B	80	≥ 300 mA, type B

3-phase mains connection 480 V "Light Duty"

Connection diagrams

See "3-phase mains connection 480 V".

Terminal data

See "Terminal data".

Fusing data

EN 60204-1

Inverter	Fuse		Circuit breaker		Earth-leakage circuit breaker
	Characteristic	Max. rated current	Characteristic	Max. rated current	
		A		A	
SINUS S 0006	gG/gL or gRL	25	B	25	≥ 300 mA, type B
SINUS S 0007	gG/gL or gRL	25	B	25	≥ 300 mA, type B
SINUS S 0011	gG/gL or gRL	25	B	25	≥ 300 mA, type B
SINUS S 0014	gG/gL or gRL	32	B	32	≥ 300 mA, type B
SINUS S 0017	gG/gL or gRL	32	B	32	≥ 300 mA, type B
SINUS S 0020	gG/gL or gRL	63	B	63	≥ 300 mA, type B
SINUS S 0025	gG/gL or gRL	63	B	63	≥ 300 mA, type B
SINUS S 0030	gG/gL or gRL	63	B	63	≥ 300 mA, type B
SINUS S 0034	gG/gL or gRL	80	B	80	≥ 300 mA, type B



Connection to the IT system

For a trouble-free operation on the IT system, observe the following measures:

- Connect an isolating transformer upstream.
- Remove the IT screws. Otherwise the monitoring devices of the IT system will be triggered because internal components are connected to protective earth (PE).




The use of the safety-related function STO is not permissible in the IT system.

SINUS S 0001 4T	SINUS S 0002 4T, SINUS S 0003 4T, SINUS S 0005 4T
	

FAMCO
هایپرمنت

SINUS S 0011, SINUS S 0014, SINUS S 0017



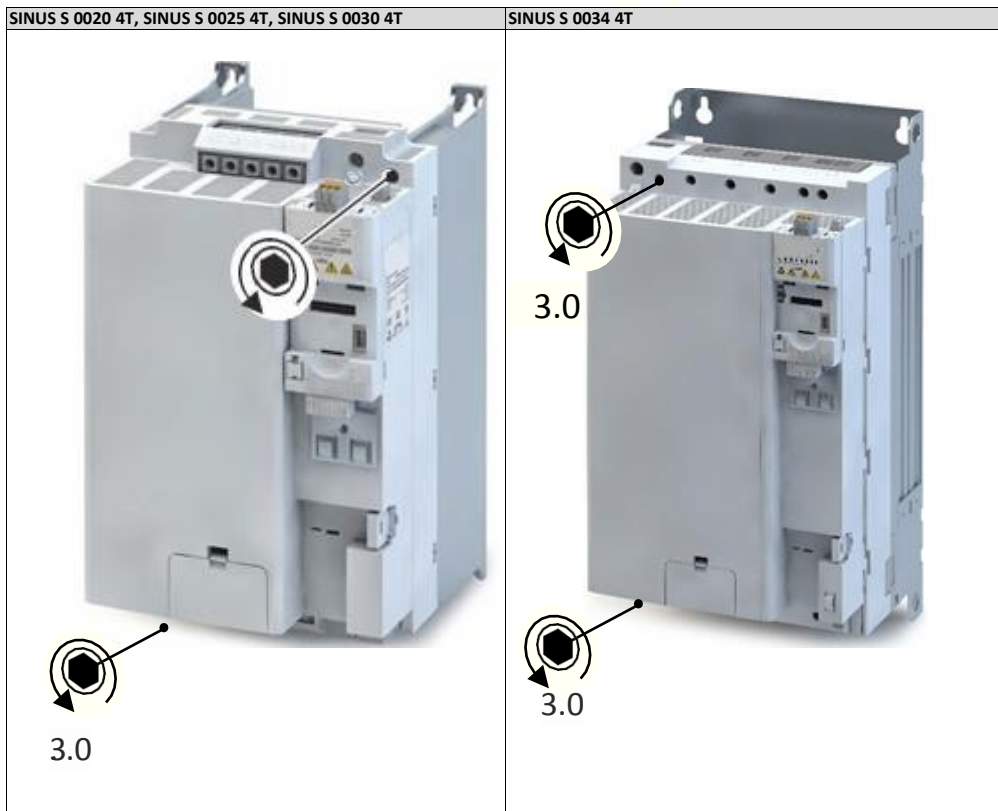

Control connections


Connection description		Control terminals
Connection		X3
Connection type		Pluggable spring terminal
Max. cable cross-section	mm ²	1.5
Max. cable cross-section	AWG	16
Stripping length	mm	9
Stripping length	inch	0.35
Tightening torque	Nm	-
Tightening torque	lb-in	-
Required tool		0.4 x 2.5

CANopen



The network must be terminated with a 120 Ω resistor at the first and last physical node.
Set the "R" DIP switch to ON at these network nodes.


Typical topologies

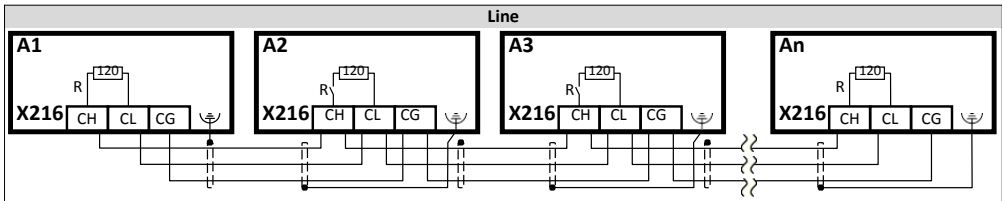

Connection description		CANopen
Connection		X216
Connection type		pluggable double spring terminal
Max. cable cross-section	mm ²	2.5
Max. cable cross-section	AWG	12
Stripping length	mm	10
Stripping length	inch	0.39
Tightening torque	Nm	-
Tightening torque	lb-in	-
Required tool		0.4 x 2.5

Basic network settings

Use the DIP switch to set the node address and baud rate and to activate the integrated bus terminating resistor.

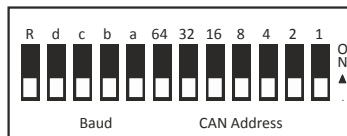


Baud termination	Baud rate					CAN node address						
R	d	c	b	a		64	32	16	8	4	2	1
OFF	OFF	ON	OFF	ON	20 kbits/s	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Inactive	OFF	OFF	ON	ON	50 kbits/s	Value from parameter						
ON	OFF	OFF	ON	OFF	125 kbits/s	Node address - example:						
Active	OFF	OFF	OFF	ON	250 kbits/s	OFF	OFF	ON	OFF	ON	ON	ON
	OFF	OFF	OFF	OFF	Value from parameter (500 kbits/s)	Node address = 16 + 4 + 2 + 1 = 23						
	OFF	ON	OFF	OFF	1 Mbit/s							
	All other combinations				Value from parameter (500 kbits/s)							

Bold print = default setting

EtherCAT

Typical topologies

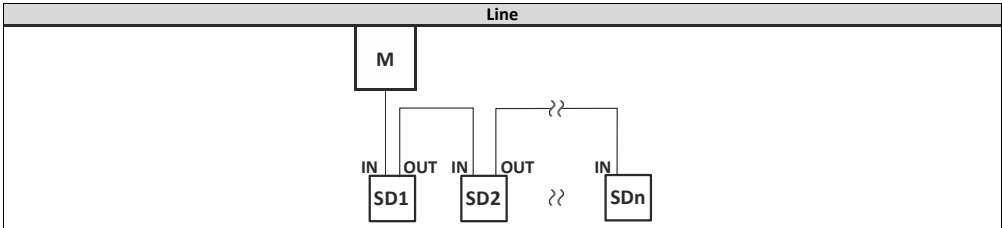

M Master
SD Slave Device


Bus-related information			
Name		EtherCAT	
Communication medium		Ethernet 100 Mbps, full duplex	
Use		Connection of the inverter to an EtherCAT network	
Connection system		RJ45	
Status display		2 LEDs	
Connection designation		IN: X246 OUT: X247	

LED "RUN"

Blinking pattern	State	Meaning
off	OFF	No supply voltage.
	Initialisation (Init)	Network not active No data transfer
	Pre-Operational (Pre-Op)	Access possible No process data transfer
	Safe-Operational (Safe-Op)	States of the safe inputs are readable.
	Operational (Op)	Data transfer in action
on		

Basic network settings


The rotary encoder switch allows you to set an EtherCAT identifier.

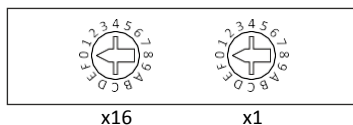

Setting	Identifier
0x00	Value from parameter
0x01 ... 0xFF	Switch position

EtherNet/IP

Typical topologies

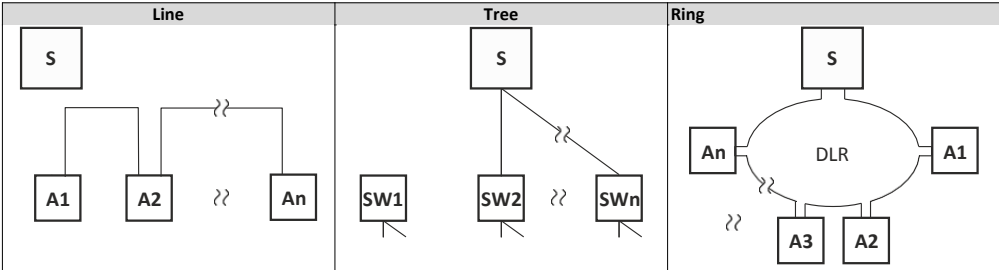

S Scanner
A Adapter

SW Switch

Bus-related information			
Name		EtherNet/IP	
Communication medium		Ethernet 10 Mbps, 100 Mbps, half duplex, full duplex	
Use		Connection of the inverter to an EtherNet/IP network	
Connection system		RJ45	
Status display		2 LEDs	
Connection designation		IN: X266 OUT: X267	

Status displays at the RJ45 sockets


The LEDs at the RJ45 sockets indicate the connection status to the network:

LED "Link" (green)	Status/meaning
off	No connection to the network.
	A physical connection to the network is available.
on	

LED "Activity" (yellow)	Status/meaning
off	No data transfer.
	Data is exchanged via the network.
on or flickers	

Basic network settings

The rotary encoder switch allows you to set the last byte of the IP address.

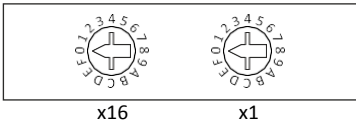


Setting	Value of last byte	Resulting IP address
0x00	Value from parameter	Value from parameter
0x01 ... 0xFE	Switch position	192.168.124.<switch position>
0xFF	Default setting	192.168.124.16

Modbus RTU



The network must be terminated with a 120 Ω resistor at the physically first and last node.
Set the "R" switch to ON at these nodes.

Typical topologies

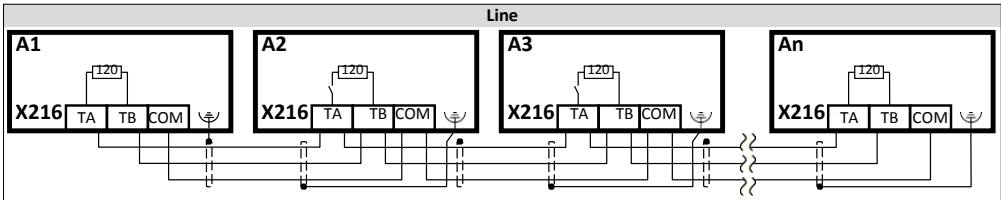

Connection description		Modbus RTU
Connection		X216
Connection type		pluggable double spring terminal
Max. cable cross-section	mm ²	2.5
Max. cable cross-section	AWG	12
Stripping length	mm	10
Stripping length	inch	0.39
Tightening torque	Nm	-
Tightening torque	lb-in	-
Required tool		0.4 x 2.5

Basic network settings

Use the DIP switch to set the node address and baud rate and to activate the integrated bus terminating resistor.




Bus termination		Baud rate	Parity	Modbus node address							
R	c	b	a	128	64	32	16	8	4	2	1
OFF	n. c.	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Inactive		Automatic detection	Automatic detection	Value from parameter							
ON		ON	ON	Node address - example:							
Active		Value from parameter	Value from parameter	OFF	OFF	OFF	ON	OFF	ON	ON	ON
				Node address = 16 + 4 + 2 + 1 = 23							
				Node address > 247: Value from parameter							

Bold print = default setting

Modbus TCP

Typical topologies

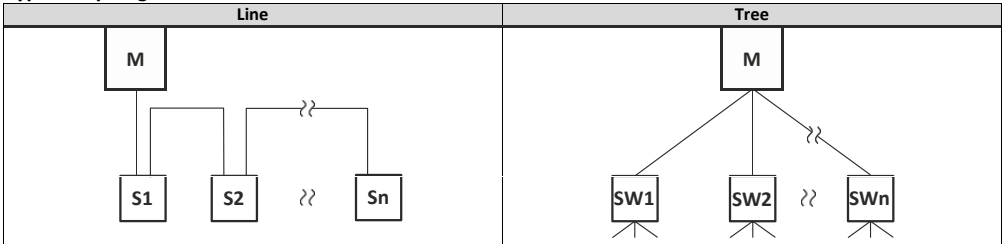

M Master
S Slave

SW Switch

Bus-related information			
Name		Modbus TCP	
Communication medium		Ethernet 10 Mbps, 100 Mbps, half duplex, full duplex	
Use		Connection of the inverter to a Modbus TCP network	
Connection system		RJ45	
Status display		2 LEDs	
Connection designation		Port 1: X276 Port 2: X277	

Status displays at the RJ45 sockets


The LEDs at the RJ45 sockets indicate the connection status to the network:

LED "Link" (green)	Status/meaning
off	No connection to the network.
	A physical connection to the network is available.
on	

LED "Activity" (yellow)	Status/meaning
off	No data transfer.
	Data is exchanged via the network.
on or flickers	

Basic network settings

The rotary encoder switch allows you to set the last byte of the IP address.

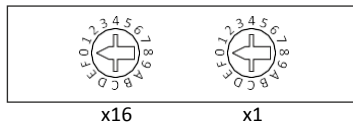


Setting	Value of last byte	Resulting IP address
0x00	Value from parameter	Value from parameter
0x01 ... 0xFE	Switch position	192.168.124.<switch position>
0xFF	Default setting	192.168.124.16

PROFIBUS



The network must be terminated with a resistor at the physically first and last node.
Activate the bus terminating resistor at these nodes in the bus connection plug.

Typical topologies

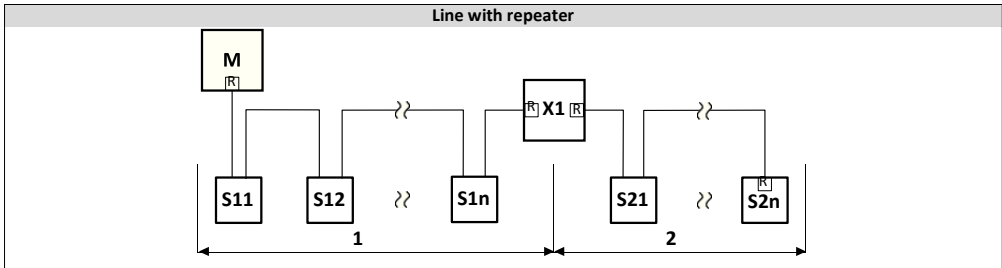

M Master
S Slave

X Repeater
R Activated bus terminating resistor

Sub D socket 9-pin - X226

View	Pin	Assignment	Description
	1	Shield	Additional shield connection
	2	n.c.	
	3	RxD/TxD-P	Data line-B (received data/transmitted data +)
	4	RTS	Request To Send (received data/transmitted data, no differential signal)
	5	M5V2	Reference potential (bus terminating resistor -)
	6	P5V2	5 V DC / 30 mA (bus terminating resistor +, OLM, OLP)
	7	n.c.	
	8	RxD/TxD-N	Data line-A (received data/transmitted data -)
	9	n.c.	

Basic network settings

Use the DIP switch to set the station address.

The baud rate is detected automatically.




PROFIBUS station address						
64 OFF	32 OFF	16 OFF	8 OFF	4 OFF	2 OFF	1 OFF
Value from parameter						
Station address - example:						
OFF	OFF	ON	OFF	ON	ON	ON
Station address = 16 + 4 + 2 + 1 = 23						
Do not set station address = 126 and station address = 127. These station addresses are invalid.						

Bold print = default setting

PROFINET

Typical topologies

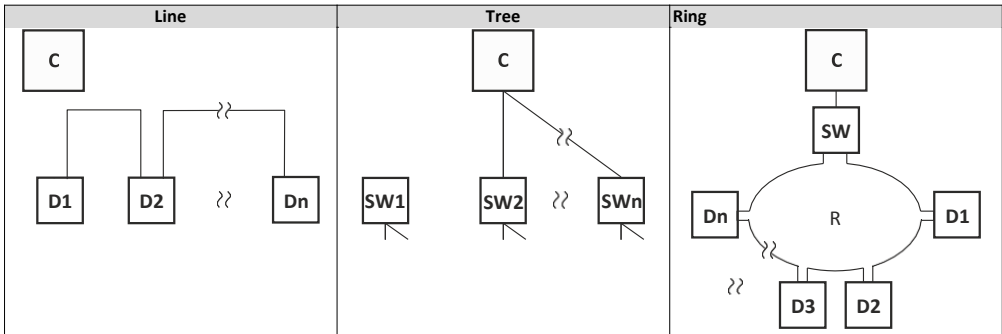

C IO controller
D IO device
SW Switch SCALANCE (MRP capable)
R Redundant domain


Bus-related information			
Name		PROFINET RT	
Communication medium		Ethernet 100 Mbps, full duplex	
Use		Connection as PROFINET IO Device	
Connection system		RJ45	
Status display		2 LEDs	
Connection designation		X256 X257	

Status displays at the RJ45 sockets

The LEDs at the RJ45 sockets indicate the connection status to the network:

LED "Link" (green)	Status/meaning
off	No connection to the network.
	A physical connection to the network is available.
on	
LED "Activity" (yellow)	Status/meaning
off	No data transfer.
	Data is exchanged via the network.
on or flickers	

LED "BUS RDY" (green)

Blinking	State	Meaning
Off	Not connected	No connection to the IO-Controller
	Connected	IO-Controller in STOP
Blinking		
	Data exchange	IO-Controller in RUN (DATA_EXCHANGE)
On		

LED "BUS ERR" (red)

Blinking	State	Meaning
Off	No fault	No fault
flickers	IO-Device identifies (localises)	The PROFINET function "node flashing test" is triggered by IO-Controller. The flickering LED serves to identify (locate) an accessible IO-Device.
 Blinking	Impermissible settings	Impermissible settings: Stack, station name or IP parameters are invalid.
On	Fault	Communication error (e. g. Ethernet cable removed)



The rotary encoder switch has no function.



DANGER !

Improper installation of the safety engineering system can cause an uncontrolled starting action of the drives.

Possible consequence: Death or severe injuries

- ▶ Safety engineering systems may only be installed and commissioned by qualified personnel.
- ▶ All control components (switch, relay, PLC, ...) must comply with the requirements of EN ISO 13849-1 and the EN ISO 13849-2.
- ▶ Switches, relays with at least IP54 enclosure.
- ▶ Control cabinet with at least IP54 enclosure.
- ▶ The wiring must be shielded.
- ▶ It is essential to use insulated wire end ferrules for wiring.
- ▶ All safety-relevant cables outside the control cabinet must be protected, e.g. by means of a cable duct.
- ▶ Ensure that no short circuits can occur according to the specifications of the EN ISO 13849-2.
- ▶ All further requirements and measures can be obtained from the EN ISO 13849-1 and the EN ISO 13849-2.
- ▶ If an external force acts upon the drive axes, additional brakes are required. Please observe that hanging loads are subject to the force of gravity!
- ▶ For safety-related braking functions, use safety-rated brakes only.
- ▶ The user has to ensure that the inverter will only be used in its intended application within the specified environmental conditions. This is the only way to comply with the declared safety-related characteristics.



DANGER !

Automatic restart if the request of the safety function is deactivated.

Possible consequences: Death or severe injuries

- ▶ You must provide external measures according to EN ISO 13849-1 which ensure that the drive only restarts after a confirmation.



NOTICE

Excessively high humidity or condensation

Malfunction or destruction of the safety component

- ▶ Only commission the safety component when it has acclimatised.



NOTICE

Overvoltage

Destruction of the safety component

- ▶ Make sure that the maximum voltage (maximum rated) at the supply terminals X5 and X82 30 V DC does not exceed 30 V DC.

Basic Safety - STO



DANGER !


With the "Safe torque off" (STO) function, no "emergency-stop" can be executed according to EN 60204-1 without additional measures. There is no electrical isolation between the motor and inverter and no service switch or maintenance switch!

Possible consequences: Death or severe injuries

► "Emergency stop" requires electrical isolation, e. g. via a central mains contactor.


Connection diagram

Active sensors

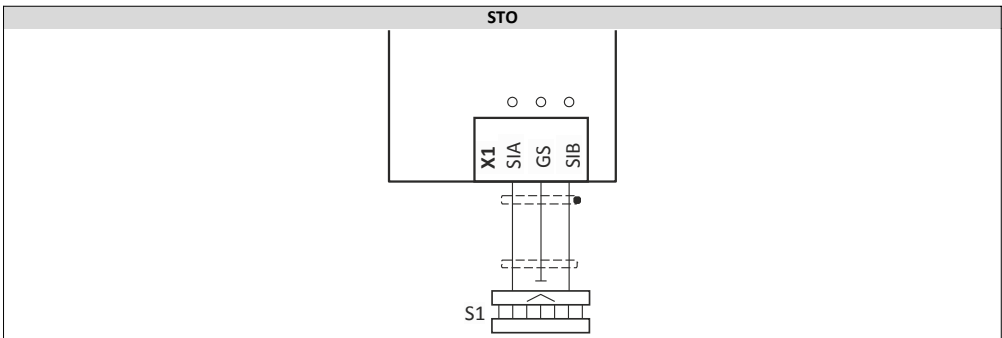

S1 Active sensor - example of lightgrid

Passive sensors

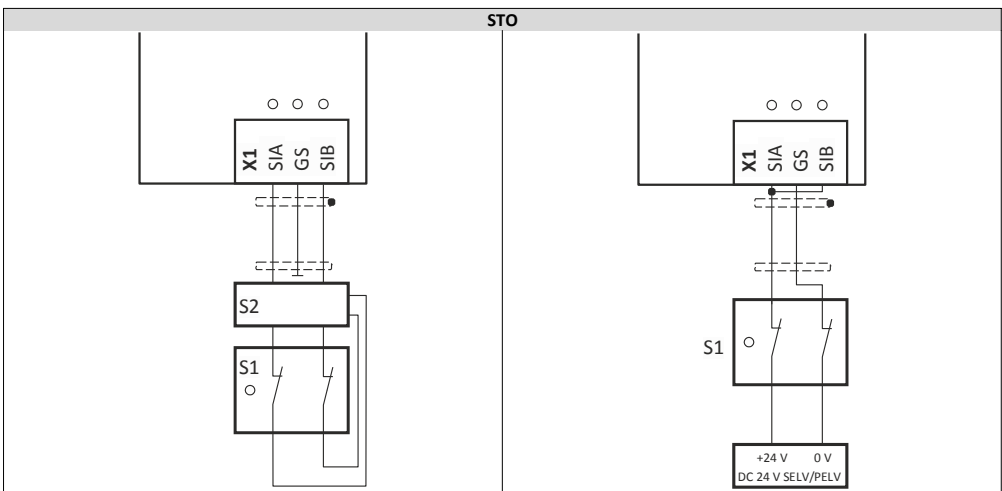

S1 Passive sensor
S2 Safety switching device

S1 Passive sensor

Terminal data

X1	Specification	Unit	min.	typ.	max.
SIA, SIB	LOW signal	V	-3	0	+5
	HIGH signal	V	+15	+24	+30
	Running time	ms		3	
	Clear time	ms		50	60
	Input current SIA	mA		10	14
	Input current SIB	mA		7	12
	Input peak current	mA		100	
	Test pulse duration	ms			1
GS	Test pulse interval	ms	10		
	Reference potential for SIA and SIB				

Connection description		Basic Safety - STO	
Connection		X1	
Connection type		pluggable double spring terminal	
Max. cable cross-section	mm ²	1.5	
Max. cable cross-section	AWG	16	
Stripping length	mm	9	
Stripping length	inch	0.35	
Tightening torque	Nm	-	
Tightening torque	lb-in	-	
Required tool		0.4 x 2.5	

Commissioning

The purpose of commissioning is to adapt the inverter as part of a machine with a variable-speed drive system to its drive task.

Important notes



DANGER !

Incorrect wiring can cause unexpected states during the commissioning phase.

Possible consequences: death, severe injuries or damage to property

Ensure the following before switching on the mains voltage:

- ▶ Wiring must be complete and correct.
- ▶ Wiring must be free of short circuits and earth faults.
- ▶ The motor circuit configuration (star/delta) must be adapted to the inverter output voltage.
- ▶ The motor must be connected in-phase (direction of rotation).
- ▶ The "emergency off" function of the overall system must operate correctly.

Initial switch-on and functional test


Target: achieve rotation of the motor connected to the inverter as quickly as possible.

Requirements:

- The connected motor matches the inverter in terms of power.
- The parameter settings comply with the delivery status (Santerno setting).

1. Preparation

1. Wire power terminals.
2. Wire digital inputs X3/DI1 (start/stop), X3/DI3 (reversal) and X3/DI4 (frequency preset 20 Hz).
3. Do not connect terminal X3/AI1 (analog setpoint selection) or connect it to GND.

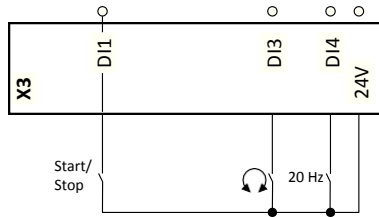

2. Switch on mains and check readiness for operation

1. Switch on mains voltage.
2. Observe LED status displays "RDY" and "ERR" on the front of the inverter:
 - a) If the blue "RDY" LED is blinking and the red "ERR" LED is off, the inverter is ready for operation. The controller is inhibited.
You can now start the drive.
 - b) If the red "ERR" LED is lit permanently, a fault is pending.
Eliminate the fault before you carry on with the functional test.


LED status displays

"RDY" LED (blue)	"ERR" LED (red)	Status/meaning
off	off	No supply voltage.
blinking (1 Hz)	off	Safe torque off (STO) active.
	blinking fast (4 Hz)	Safe torque off (STO) active. Warning active.
blinking (2 Hz)	off	Inverter inhibited.
	lit every 1.5 s for a short time	Inverter inhibited, no DC-bus voltage.
	blinking fast (4 Hz)	Inverter inhibited, warning active.
	on	Inverter inhibited, fault active.
on	off	Inverter enabled.
	blinking fast (4 Hz)	Inverter enabled, warning active.
	blinking (1 Hz)	Inverter enabled, quick stop as response to a fault active.

Carry out a functional test

1. Start drive

1. Start inverter: X3/DI1 = HIGH.
 - a) If the inverter is equipped with an integrated safety system: X1/SIA = HIGH and X1/SIB = HIGH.
2. Activate frequency preset 1 (20 Hz) as speed setpoint: X3/DI4 = HIGH.
The drive rotates with 20 Hz.
3. Optional: Activate reversal.
 - a) X3/DI3 = HIGH.
The drive rotates with 20 Hz in the opposite direction.
 - b) Now deactivate reversal: X3/DI3 = LOW.
Speed characteristic (example)

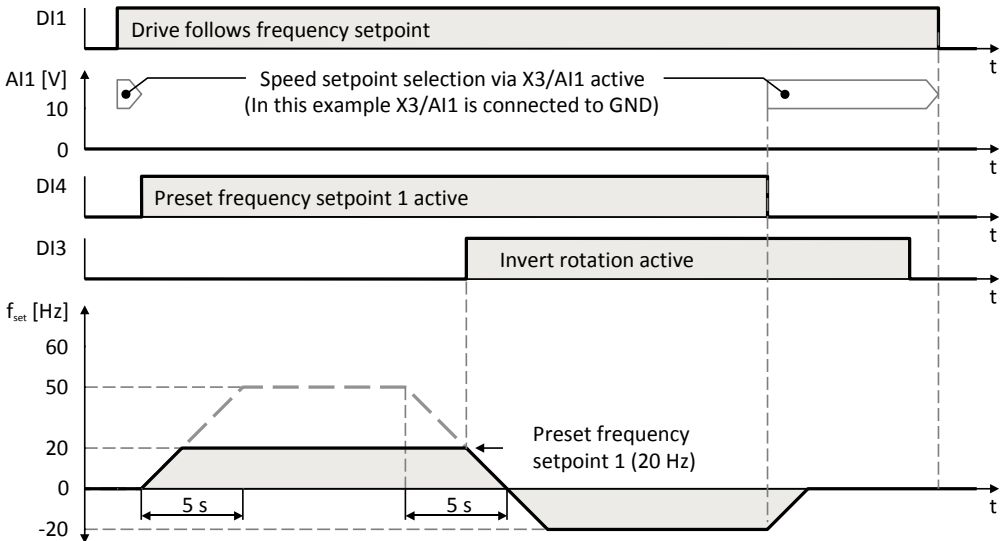

2. Stop drive

1. Now deactivate frequency preset 1: X3/DI4 = LOW.
2. Now stop inverter: X3/DI1 = LOW.

The functional test is completed.

Technical data

Standards and operating conditions

Conformities/approvals

Conformity		
CE	2014/35/EU	Low-Voltage Directive
	2014/30/EU	EMC Directive (reference: CE-typical drive system)
EAC	TR CU 004/2011	Eurasian conformity: safety of low voltage equipment
	TR CU 020/2011	Eurasian conformity: electromagnetic compatibility of technical means
RoHS	2011/65/EU	Restrictions on the use of certain hazardous substances in electrical and electronic devices

Protection of persons and device protection

Degree of protection		
IP20	EN 60529	Data applies for operationally ready mounted state and not in wire range of terminals
Insulation resistance		
Overvoltage category III	EN 61800-5-1	0 ... 2000 m amsl
Overvoltage category II	EN 61800-5-1	over 2000 m amsl
Isolation of control circuits		
Safe mains isolation via double/reinforced insulation	EN 61800-5-1	
Leakage current		
> 3.5 mA AC, > 10 mA DC	EN 61800-5-1	Please observe regulations and safety instructions!
Starting current		
≤ 3 x rated mains current		
Protective measures against		
Short circuit		
Earth fault		Earth-fault protected depending on operating status
Overtemperature of motor		PTC or thermal contact, I ² t monitoring
Overvoltage		
Motor stalling		

EMC data

Noise emission		
Category C1	EN 61800-3	See rated data
Category C2	EN 61800-3	See rated data
Category C3	EN 61800-3	See rated data
Noise immunity		
Fulfills requirements according to	EN 61800-3	
Operation on public supply systems		
Take measures to limit the expected radio interference:		The machine or system manufacturer is responsible for compliance with the requirements for the machine/system!
< 1 kW: With mains choke	EN 61000-3-2	
> 1 kW for mains current ≤ 16 A: Without additional measures		
Mains current > 16 A: with mains choke or mains filter, with dimensioning for rated power.	EN 61000-3-12	

Motor connection

Requirements for the shielded motor cable		
Capacitance per unit length		
C-core-core/C-core-shielding < 75/150 pF/m		≤ 2.5 mm ² / AWG 14
C-core-core/C-core-shielding < 150/300 pF/m		≥ 4 mm ² / AWG 12
Electric strength		
U ₀ /U = 0.6/1.0 kV		U ₀ = r.m.s. value external conductor to PE U = r.m.s. value from external conductor to external conductor

Environmental conditions

Energy efficiency		
Class IE2	EN 50598-2	
Climate		
1K3 (-25 ... +60°C)	EN 60721-3-1	Storage
2K3 (-25 ... +70°C)	EN 60721-3-2	Transport
3K3 (-10 ... +55°C)	EN 60721-3-3	Operation
		Operation at a switching frequency of 2 or 4 kHz: above +45°C, reduce rated output current by 2.5 %/°C
		Operation at a switching frequency of 8 or 16 kHz: above +40°C reduce rated output current by 2.5 %/°C
Site altitude		
0 ... 1000 m amsl		
1000 ... 4000 m amsl		Reduce rated output current by 5 %/1000 m
Pollution		
Degree of pollution 2	EN 61800-5-1	
Vibration resistance		
Transport		
2M2 (sine, shock)	EN 60721-3-2	In original packaging
Operation		
Amplitude 1 mm	Germanischer Lloyd	5 ... 13.2 Hz
Acceleration resistant up to 0.7 g		13.2 ... 100 Hz
		up to 11 kW
Amplitude 0.075 mm	EN 61800-5-1	10 ... 57 Hz
Acceleration resistant up to 1 g		57 ... 150 Hz

Electrical supply conditions

Permissible power systems		
TT		Voltage to earth: max. 300 V
TN		Voltage to earth: max. 300 V
IT		Please employ the measures described for IT systems!



3-phase mains connection 400 V

Rated data

The output currents apply to these operating conditions:

- At a switching frequency of 2 kHz or 4 kHz: Max. ambient temperature 45°C.
- At a switching frequency of 8 kHz or 16 kHz: Max. ambient temperature 40°C.

Inverter		SINUS S 0001 4T	SINUS S 0002 4T	SINUS S 0003 4T	SINUS S 0005 4T
Rated power	kW	0.37	0.75	1.5	2.2
Rated power	hp	0.5	1	2	3
Mains voltage range		3/PE AC 340 V ... 528 V, 45 Hz ... 65 Hz			
Output voltage		3 AC 0-400/480 V			
Rated mains current					
Without mains choke	A	1.8	3.3	5.4	7.8
With mains choke	A	1.4	2.6	3.7	5.3
Apparent output power	kVA	0.9	1.6	2.6	3.8
Rated output current					
2 kHz	A	-	2.4	3.9	5.6
4 kHz	A	1.3	2.4	3.9	5.6
8 kHz	A	1.3	2.4	3.9	5.6
16 kHz	A	0.9	1.6	2.6	3.7
Power loss					
2 kHz	W	-	30	45	62
4 kHz	W	20	32	48	66
8 kHz	W	24	40	61	85
16 kHz	W	24	40	61	85
For controller inhibit	W	6	6	6	6
Cyclic mains switching		3 times per minute			
Max. motor cable length shielded					
Without EMC category	m	15	50	50	50
Category C1 (2 kHz, 4 kHz, 8 kHz)	m	3	3	-	-
Category C2 (2 kHz, 4 kHz, 8 kHz)	m	15	20	20	20
Category C3 (2 kHz, 4 kHz, 8 kHz)	m	15	20	35	35
Weight	kg	0.8	1	1.35	1.35
Weight	lb	1.8	2.2	3	3

Technical data

3-phase mains connection 400 V

Rated data

Inverter		SINUS S 0006 4T	SINUS S 0007 4T	SINUS S 0011 4T	SINUS S 0014 4T	SINUS S 0017 4T
Rated power	kW	3	4	5.5	7.5	11
Rated power	hp	4	5	7.5	10	15
Mains voltage range		3/PE AC 340 V ... 528 V, 45 Hz ... 65 Hz				
Output voltage		3 AC 0-400/480 V				
Rated mains current						
Without mains choke	A	9.6	12.5	17.2	20	28.4
With mains choke	A	6.9	9	12.4	15.7	22.3
Apparent output power	kVA	4.9	6.4	8.7	11	16
Rated output current						
2 kHz	A	7.3	9.5	13	16.5	23.5
4 kHz	A	7.3	9.5	13	16.5	23.5
8 kHz	A	7.3	9.5	13	16.5	23.5
16 kHz	A	4.9	6.3	8.7	11	15.7
Power loss						
2 kHz	W	79	102	137	172	242
4 kHz	W	85	110	145	185	260
8 kHz	W	110	140	190	240	340
16 kHz	W	109	140	189	238	337
For controller inhibit	W	6	6	6	6	6
Cyclic mains switching		3 times per minute				
Max. motor cable length shielded						
Without EMC category	m	100	100	100	100	100
Category C1 (2 kHz, 4 kHz, 8 kHz)	m	-	-	-	-	-
Category C2 (2 kHz, 4 kHz, 8 kHz)	m	20	20	20	20	20
Category C3 (2 kHz, 4 kHz, 8 kHz)	m	35	35	35	50	50
Weight	kg	2.3	2.3	2.3	3.7	3.7
Weight	lb	5	5	5	8	8



Inverter		SINUS S 0020 4T	SINUS S 0025 4T	SINUS S 0030 4T	SINUS S 0034 4T
Rated power	kW	15	18.5	22	30
Rated power	hp	20	25	30	40
Mains voltage range		3/PE AC 340 V ... 528 V, 45 Hz ... 65 Hz			
Output voltage		3 AC 0-400/480 V			
Rated mains current					
Without mains choke	A	38.7	48.4	-	-
With mains choke	A	28.8	36	42	54.9
Apparent output power	kVA	22	27	32	41
Rated output current					
2 kHz	A	32	40	47	61
4 kHz	A	32	40	47	61
8 kHz	A	32	40	47	61
16 kHz	A	21.3	26.6	31.3	40.6
Power loss					
2 kHz	W	340	420	491	639
4 kHz	W	360	450	520	680
8 kHz	W	460	570	670	880
16 kHz	W	469	581	680	884
For controller inhibit	W	18	18	18	25
Cyclic mains switching		3 times per minute			
Max. motor cable length shielded					
Without EMC category	m	100	100	100	100
Category C1 (2 kHz, 4 kHz, 8 kHz)	m	-	-	-	-
Category C2 (2 kHz, 4 kHz, 8 kHz)	m	20	20	20	20
Category C3 (2 kHz, 4 kHz, 8 kHz)	m	35	35	35	35
Weight	kg	10.3	10.3	10.3	17.2
Weight	lb	23	23	23	38



3-phase mains connection 400 V "Light Duty"

Rated data

The output currents apply to these operating conditions:

- At a switching frequency of 2 kHz or 4 kHz: Ambient temperature above 40 °C with a rated output current reduced by 2.5 %/°C.
- If the load characteristic "Light Duty" and the switching frequencies 8 kHz or 16 kHz are selected, only the values of the load characteristic "Heavy Duty" are reached.

Inverter		SINUS S 0006 4T	SINUS S 0007 4T	SINUS S 0011 4T	SINUS S 0014 4T	SINUS S 0017 4T
Rated power	kW	4	5.5	7.5	11	15
Rated power	hp	5	7.5	10	15	20
Mains voltage range		3/PE AC 340 V ... 528 V, 45 Hz ... 65 Hz				
Output voltage		3 AC 0-400/480 V				
Rated mains current						
Without mains choke	A	10.3	14	18.3	28	-
With mains choke	A	8.2	11	14.5	22	27.1
Apparent output power	kVA	5.9	8	10.5	15	19
Rated output current						
2 kHz	A	8.8	11.9	15.6	23	28.2
4 kHz	A	8.8	11.9	15.6	23	28.2
8 kHz	A	-	-	-	-	-
16 kHz	A	-	-	-	-	-
Power loss						
2 kHz	W	94	125	163	238	290
4 kHz	W	100	133	173	253	309
8 kHz	W	-	-	-	-	-
16 kHz	W	-	-	-	-	-
For controller inhibit	W	6	6	6	6	6
Cyclic mains switching		3 times per minute				
Max. motor cable length shielded						
Without EMC category	m	100	100	100	100	100
Category C1 (2 kHz, 4 kHz, 8 kHz)	m	-	-	-	-	-
Category C2 (2 kHz, 4 kHz, 8 kHz)	m	20	20	20	20	20
Category C3 (2 kHz, 4 kHz, 8 kHz)	m	35	35	35	50	50
Weight	kg	2.3	2.3	2.3	3.7	3.7
Weight	lb	5	5	5	8	8



Technical data

3-phase mains connection 400 V "Light Duty"

Rated data

Inverter		SINUS S 0020 4T	SINUS S 0025 4T	SINUS S 0030 4T	SINUS S 0034 4T
Rated power	kW	18.5	22	30	37
Rated power	hp	25	30	40	50
Mains voltage range		3/PE AC 340 V ... 528 V, 45 Hz ... 65 Hz			
Output voltage		3 AC 0-400/480 V			
Rated mains current					
Without mains choke	A	48	-	-	-
With mains choke	A	36	43	55	69
Apparent output power	kVA	26	32	38	49
Rated output current					
2 kHz	A	38.4	48	56.4	73.2
4 kHz	A	38.4	48	56.4	73.2
8 kHz	A	-	-	-	-
16 kHz	A	-	-	-	-
Power loss					
2 kHz	W	404	501	585	761
4 kHz	W	430	533	623	810
8 kHz	W	-	-	-	-
16 kHz	W	-	-	-	-
For controller inhibit	W	18	18	18	25
Cyclic mains switching		3 times per minute			
Max. motor cable length shielded					
Without EMC category	m	100	100	100	100
Category C1 (2 kHz, 4 kHz, 8 kHz)	m	-	-	-	-
Category C2 (2 kHz, 4 kHz, 8 kHz)	m	20	20	20	20
Category C3 (2 kHz, 4 kHz, 8 kHz)	m	35	35	35	35
Weight	kg	10.3	10.3	10.3	17.2
Weight	lb	23	23	23	38

Technical data

3-phase mains connection 480 V

Rated data

3-phase mains connection 480 V

Rated data

The output currents apply to these operating conditions:

- At a switching frequency of 2 kHz or 4 kHz: Max. ambient temperature 45°C.
- At a switching frequency of 8 kHz or 16 kHz: Max. ambient temperature 40°C.

Inverter		SINUS S 0001 4T	SINUS S 0002 4T	SINUS S 0003 4T	SINUS S 0005 4T
Rated power	kW	0.37	0.75	1.5	2.2
Rated power	hp	0.5	1	2	3
Mains voltage range		3/PE AC 340 V ... 528 V, 45 Hz ... 65 Hz			
Output voltage		3 AC 0-400/480 V			
Rated mains current					
Without mains choke	A	1.5	2.8	4.5	6.5
With mains choke	A	1.2	2.2	3.1	4.4
Apparent output power	kVA	0.9	1.6	2.6	3.8
Rated output current					
2 kHz	A	-	2.1	3.5	4.8
4 kHz	A	1.1	2.1	3.5	4.8
8 kHz	A	1.1	2.1	3.5	4.8
16 kHz	A	0.7	1.4	2.3	3.2
Power loss					
2 kHz	W	-	30	45	62
4 kHz	W	20	32	48	66
8 kHz	W	24	40	61	85
16 kHz	W	24	40	61	85
For controller inhibit	W	6	6	6	6
Cyclic mains switching		3 times per minute			
Max. motor cable length shielded					
Without EMC category	m	15	50	50	50
Category C1 (2 kHz, 4 kHz, 8 kHz)	m	3	3	-	-
Category C2 (2 kHz, 4 kHz, 8 kHz)	m	15	20	20	20
Category C3 (2 kHz, 4 kHz, 8 kHz)	m	15	20	35	35
Weight	kg	0.8	1	1.35	1.35
Weight	lb	1.8	2.2	3	3

		SINUS S 0006 4T	SINUS S 0007 4T	SINUS S 0011 4T	SINUS S 0014 4T	SINUS S 0017 4T
Rated power	kW	3	4	5.5	7.5	11
Rated power	hp	4	5	7.5	10	15
Mains voltage range		3/PE AC 340 V ... 528 V, 45 Hz ... 65 Hz				
Output voltage		3 AC 0-400/480 V				
Rated mains current						
Without mains choke	A	8	10.5	14.3	16.6	23.7
With mains choke	A	5.8	7.5	10.3	13.1	18.6
Apparent output power	kVA	4.9	6.4	8.7	11	16
Rated output current						
2 kHz	A	6.3	8.2	11	14	21
4 kHz	A	6.3	8.2	11	14	21
8 kHz	A	6.3	8.2	11	14	21
16 kHz	A	4.2	5.5	7.3	9.3	14
Power loss						
2 kHz	W	79	102	137	172	242
4 kHz	W	85	110	145	185	260
8 kHz	W	110	140	190	240	340
16 kHz	W	109	140	189	238	337
For controller inhibit	W	6	6	6	6	6
Cyclic mains switching		3 times per minute				
Max. motor cable length shielded						
Without EMC category	m	100	100	100	100	100
Category C1 (2 kHz, 4 kHz, 8 kHz)	m	-	-	-	-	-
Category C2 (2 kHz, 4 kHz, 8 kHz)	m	20	20	20	20	20
Category C3 (2 kHz, 4 kHz, 8 kHz)	m	35	35	35	50	50
Weight	kg	2.3	2.3	2.3	3.7	3.7
Weight	lb	5	5	5	8	8

Technical data

3-phase mains connection 480 V

Rated data

Inverter		SINUS S 0020 4T	SINUS S 0025 4T	SINUS S 0030 4T	SINUS S 0034 4T
Rated power	kW	15	18.5	22	30
Rated power	hp	20	25	30	40
Mains voltage range		3/PE AC 340 V ... 528 V, 45 Hz ... 65 Hz			
Output voltage		3 AC 0-400/480 V			
Rated mains current					
Without mains choke	A	32.3	40.3	47.4	-
With mains choke	A	24	30	35.3	45.7
Apparent output power	kVA	22	27	32	41
Rated output current					
2 kHz	A	27	34	40.4	52
4 kHz	A	27	34	40.4	52
8 kHz	A	27	34	40.4	52
16 kHz	A	18	22.6	26.9	34.6
Power loss					
2 kHz	W	340	420	491	639
4 kHz	W	360	450	520	680
8 kHz	W	460	570	670	880
16 kHz	W	469	581	680	884
For controller inhibit	W	18	18	18	25
Cyclic mains switching		3 times per minute			
Max. motor cable length shielded					
Without EMC category	m	100	100	100	100
Category C1 (2 kHz, 4 kHz, 8 kHz)	m	-	-	-	-
Category C2 (2 kHz, 4 kHz, 8 kHz)	m	20	20	20	20
Category C3 (2 kHz, 4 kHz, 8 kHz)	m	35	35	35	35
Weight	kg	10.3	10.3	10.3	17.2
Weight	lb	23	23	23	38

Technical data

3-phase mains connection 480 V "Light Duty"

Rated data

3-phase mains connection 480 V "Light Duty"

Rated data

The output currents apply to these operating conditions:

- At a switching frequency of 2 kHz or 4 kHz: Ambient temperature above 40 °C with a rated output current reduced by 2.5 %/°C.
- If the load characteristic "Light Duty" and the switching frequencies 8 kHz or 16 kHz are selected, only the values of the load characteristic "Heavy Duty" are reached.

Inverter		SINUS S 0006	SINUS S 0007	SINUS S 0011	SINUS S 0014	SINUS S 0017
		4T	4T	4T	4T	4T
Rated power	kW	4	5.5	7.5	11	15
Rated power	hp	5	7.5	10	15	20
Mains voltage range		3/PE AC 340 V ... 528 V, 45 Hz ... 65 Hz				
Output voltage		3 AC 0-400/480 V				
Rated mains current						
Without mains choke	A	8.6	11.2	15.3	22	-
With mains choke	A	6.8	8.8	12.1	17.2	22.6
Apparent output power	kVA	5.9	8	10.5	15	19
Rated output current						
2 kHz	A	7.6	9.8	13.2	18.3	25.2
4 kHz	A	7.6	9.8	13.2	18.3	25.2
8 kHz	A	-	-	-	-	-
16 kHz	A	-	-	-	-	-
Power loss						
2 kHz	W	94	125	163	238	290
4 kHz	W	100	133	173	253	309
8 kHz	W	-	-	-	-	-
16 kHz	W	-	-	-	-	-
For controller inhibit	W	6	6	6	6	6
Cyclic mains switching		3 times per minute				
Max. motor cable length shielded						
Without EMC category	m	100	100	100	100	100
Category C1 (2 kHz, 4 kHz, 8 kHz)	m	-	-	-	-	-
Category C2 (2 kHz, 4 kHz, 8 kHz)	m	20	20	20	20	20
Category C3 (2 kHz, 4 kHz, 8 kHz)	m	35	35	35	50	50
Weight	kg	2.3	2.3	2.3	3.7	3.7
Weight	lb	5	5	5	8	8

Inverter		SINUS S 0020 4T	SINUS S 0025 4T	SINUS S 0030 4T	SINUS S 0034 4T
Rated power	kW	18.5	22	30	37
Rated power	hp	25	30	40	50
Mains voltage range		3/PE AC 340 V ... 528 V, 45 Hz ... 65 Hz			
Output voltage		3 AC 0-400/480 V			
Rated mains current					
Without mains choke	A	40	-	-	-
With mains choke	A	30	38	46	59
Apparent output power	kVA	26	32	38	49
Rated output current					
2 kHz	A	32.4	40.8	48.5	62.4
4 kHz	A	32.4	40.8	48.5	62.4
8 kHz	A	-	-	-	-
16 kHz	A	-	-	-	-
Power loss					
2 kHz	W	404	501	585	761
4 kHz	W	430	533	623	810
8 kHz	W	-	-	-	-
16 kHz	W	-	-	-	-
For controller inhibit	W	18	18	18	25
Cyclic mains switching		3 times per minute			
Max. motor cable length shielded					
Without EMC category	m	100	100	100	100
Category C1 (2 kHz, 4 kHz, 8 kHz)	m	-	-	-	-
Category C2 (2 kHz, 4 kHz, 8 kHz)	m	20	20	20	20
Category C3 (2 kHz, 4 kHz, 8 kHz)	m	35	35	35	35
Weight	kg	10.3	10.3	10.3	17.2
Weight	lb	23	23	23	38

FAMCO
هایپر صنعت